


NO. 940 SERIES AUTOMATIC FLUSHBOLTS FOR WOOD DOORS

THIS TEMPLATE APPLIES TO

ITEM NOS. 940, 942, 940/9BFB

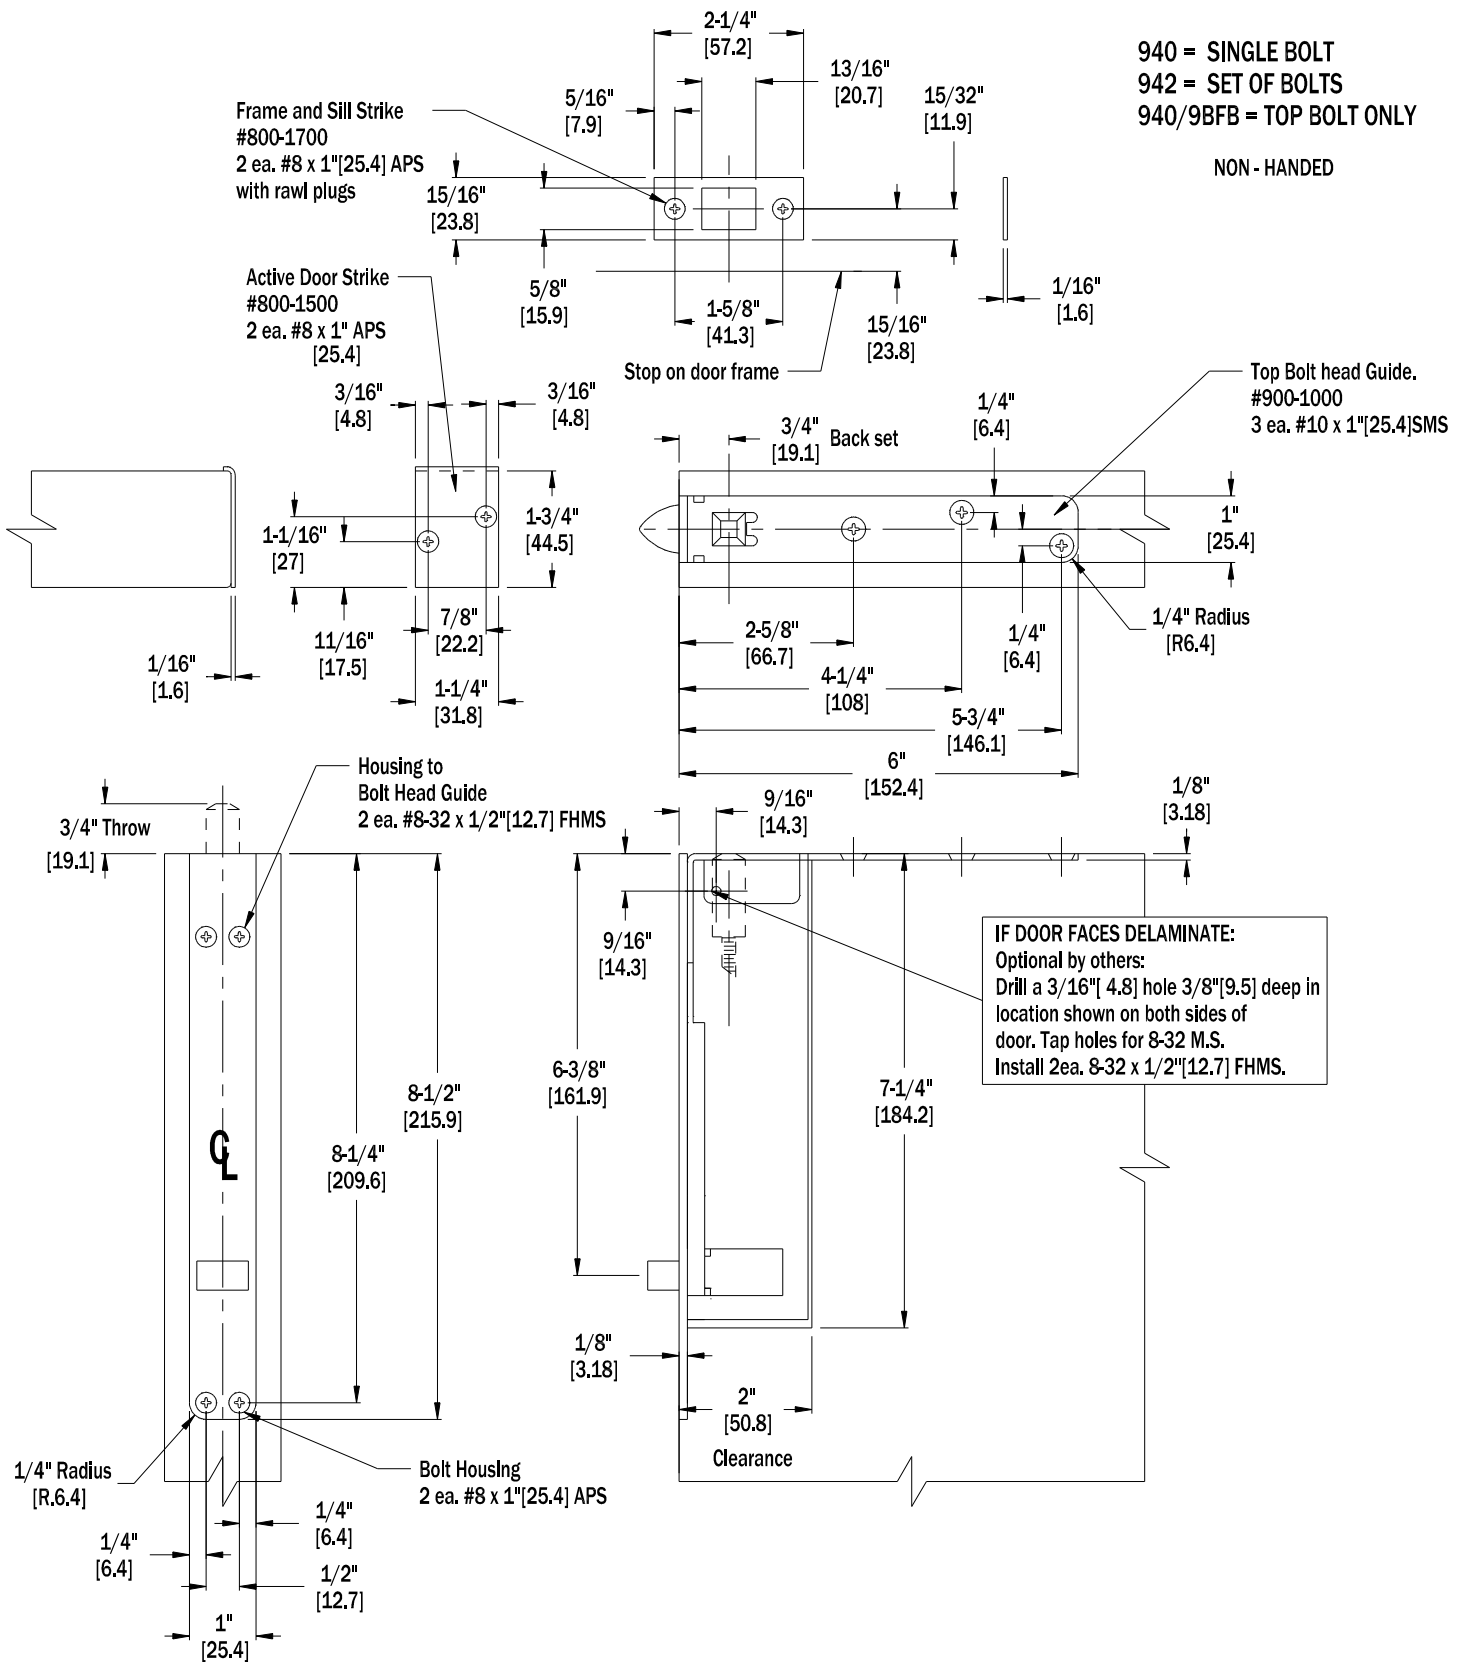

NOTE:

The top bolt details are shown. For the bottom bolt, invert and measure from the bottom edge of the door.

3/32" [2.4] shims are available for the Active Door Strike.
Part No. 800-1600

Dimensions in [] denotes millimeters



**DOOR CONTROLS
INTERNATIONAL™**

2362 BISHOP CIRCLE EAST
DEXTER, MI 48130 U.S.A.



Installation Instructions

Inactive Door

1. Measure 4"- 6" [101.6 - 152.4] from bottom of the Inactive Door.
2. Drill a 9/16" [14.3] dia. hole x 1-5/8" [41.3] deep for 9BFB.
3. Install 9BFB by striking squarely with a hammer.

Active Door

1. Drill a 1" [25.4] dia. x 7/8" [22.2] deep hole for Plug at the same height as the 9BFB.
2. Install plug in door by striking with a hammer.
3. For zero clearance doors, counterbore 1-1/4" [31.8] dia x 1/16" [1.6] deep for plug.

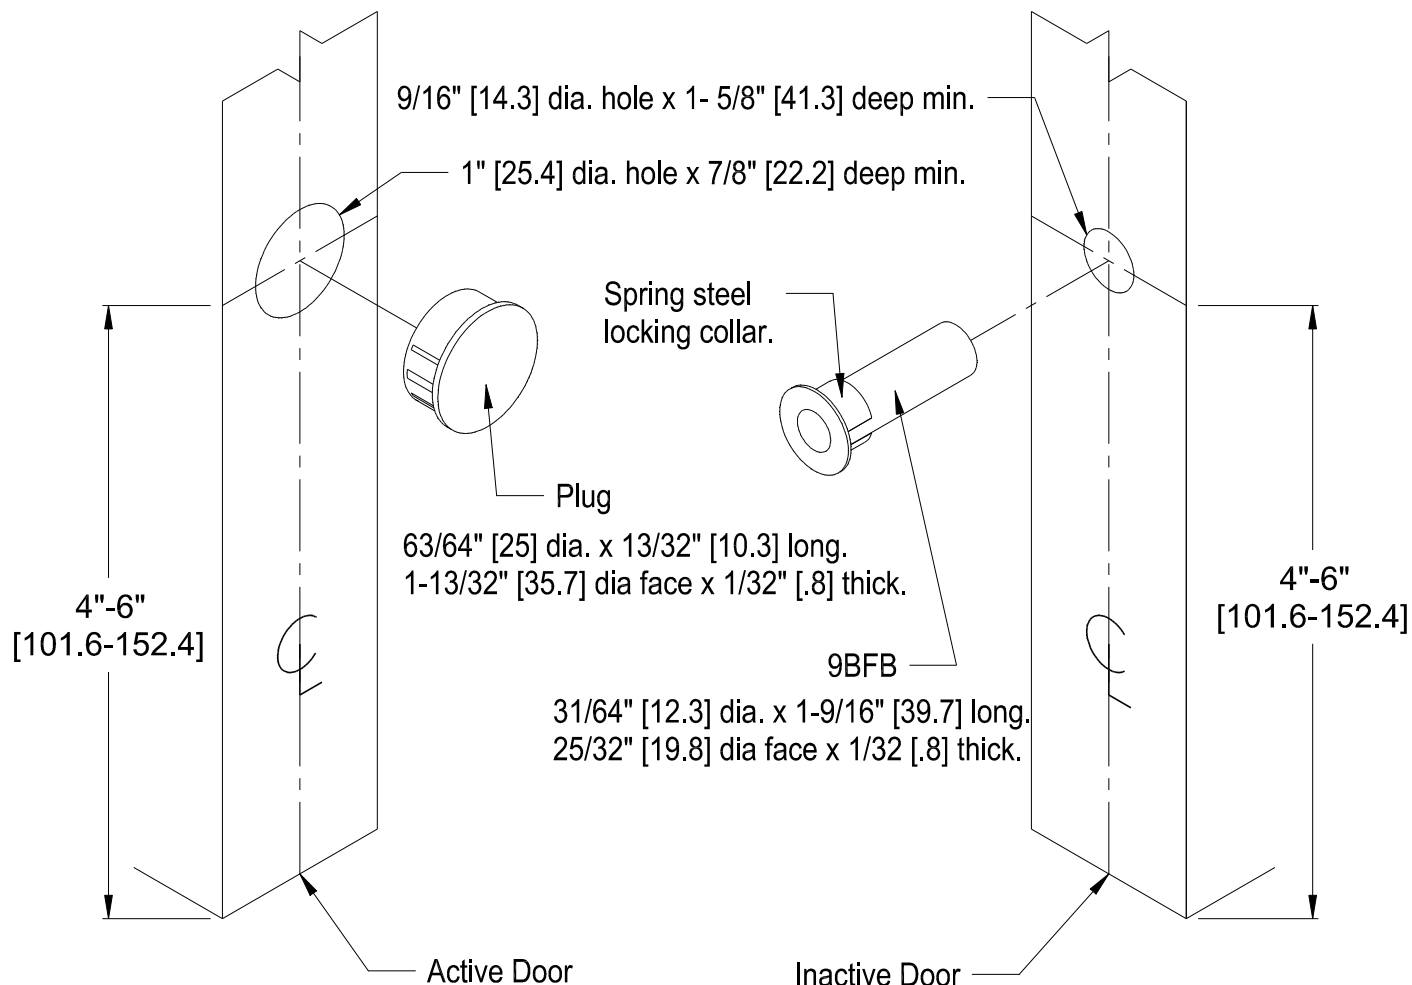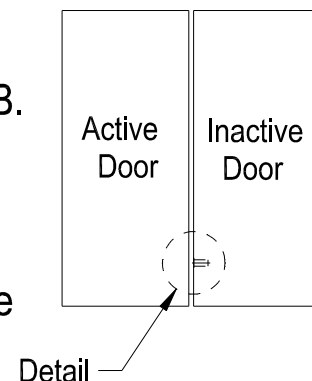

IMPORTANT: The 9BFB will project during a fire.
Do not cover with any edge mounted door hardware.