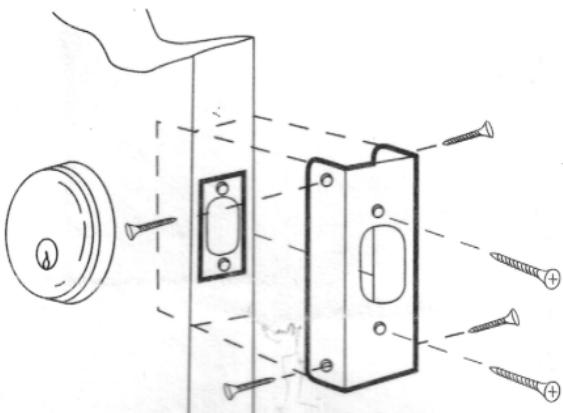


**DO-IT-YOURSELF
DOOR EDGE GUARD****DOOR REINFORCER FOR DEADBOLT OR
KEY IN KNOB LOCKS**

- PROTECT AGAINST KICK-IN ATTACKS.
- THE MOST COMMON MEANS OF FORCED ENTRY
- ADDS STRENGTH TO ANY DOOR.
- INSTALLS IN MINUTES
- HEAVY GAUGE METAL
- ONE PIECE CONSTRUCTION

**INSTALLATION INSTRUCTIONS**

1. REMOVE TWO LATCH SCREWS ON EDGE OF DOOR, LEAVE LATCH IN DOOR.
2. PLACE UNIT OVER DOOR.
3. REPLACE LATCH SCREWS WITH LONGER ONES PROVIDED. INSTALL FOUR SHORT SCREWS.

MOST FRONT DOORS ARE 1 3/4" THICK**MOST GARAGE AND BACK DOORS ARE 1 3/8" THICK****FOR 1 3/8" DOOR****FE-10-AB**

Antique Brass

FE-10-PB

Polished Brass

FE-10-S

Stainless Steel

FOR 1 3/4" DOOR**FE-20-AB**

Antique Brass

FE-20-PB

Polished Brass

FE-20-S

Stainless Steel

**20-S-FE
STAINLESS STEEL**

0 40186 21258 3