


TS-100 DRIVE-IN THIMBLE STRIKE INSTALLATION INSTRUCTIONS

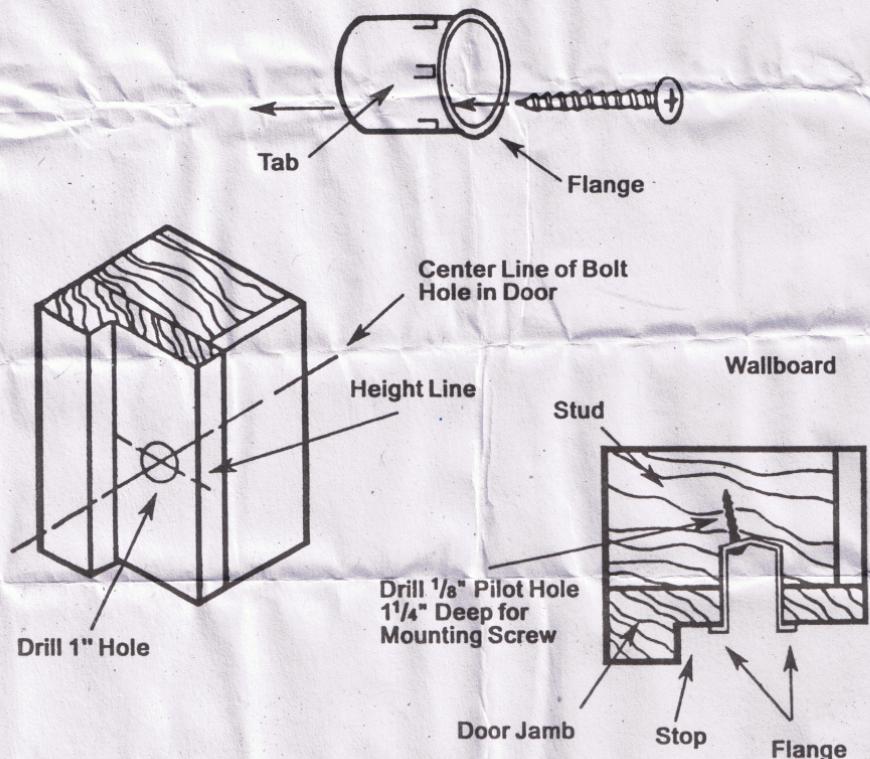

1. Mark the center of bolt height on door jamb.
2. Mark the center line of bolt hole in door on door jamb.
3. Drill 1" hole in door jamb to depth of strike.
4. Insert strike so that mounting screw hole is facing toward stop. Make sure flange is seated in door jamb.

NOTE: For permanent installation spread tabs as needed.