


INSTALLATION INSTRUCTIONS

Attach bracket with large compression spring attached to it, to head jamb of door frame approximately 17" from side jamb. Bracket should be attached at a slight angle to the door as shown. Make sure bracket does not strike door when closing. Attach "S" hook and bracket to other end of chain and open door to 90 degrees, then mark off, and attach bracket.

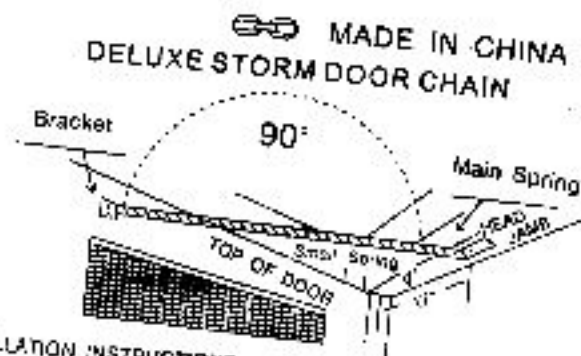

INSTALLATION INSTRUCTIONS FOR HOLD UP SPRING AND NAIL
Insert double headed nail through open loop on spring and hammer nail
into head jamb 8" from side jamb. Attach other end of hold up spring to
first link of door chain below large compression spring.

C D V 2 4