


Cushion Type Weatherstrips


Full Size Details

Spring Type
for wood frames


I24B
I25B
I25SS
I26B

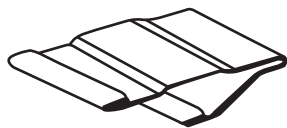

The above type of Weatherstripping can also be attached to Metal Jambs with $\frac{5}{16}$ " x #4 water head brass or nickel plated drive screws. Use #37 HS drill bit.

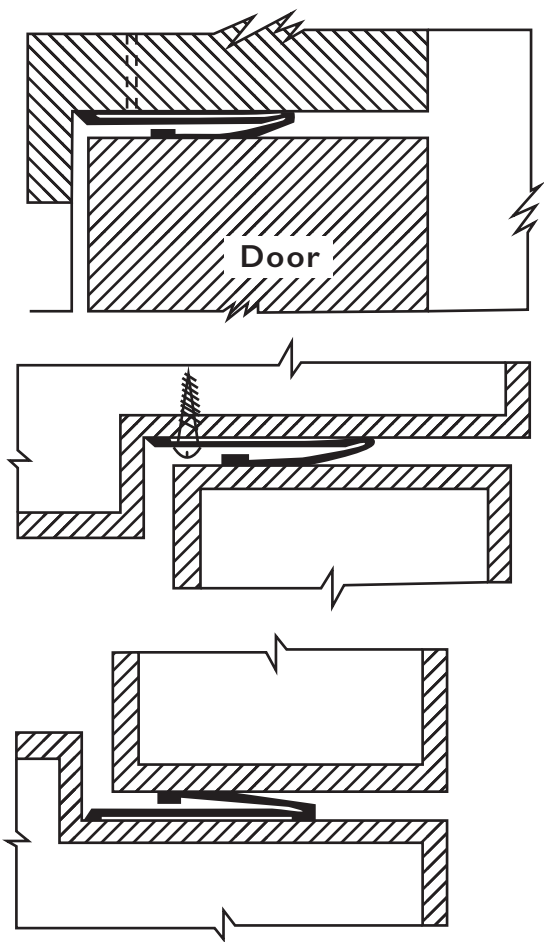

I24B
I25B
I25SS
I26B

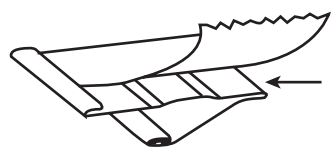


Pressure
Sensitive
Adhesive

Cushion type with pressure sensitive adhesive tape backing for Metal Jambs.

I24B	I25B	I25SS	I26B	I27A	I25B Tape	I25SS Tape	I27A Tape
$\frac{3}{4}$ " (.0063)	1" (.0063)	1" (.005)	1 $\frac{1}{8}$ " (.0063)	$\frac{7}{8}$ " (.008)	1" (.0063)	1" (.005)	$\frac{7}{8}$ " (.008)

Cushion Type Door Sets

I25B
I26B
I27A

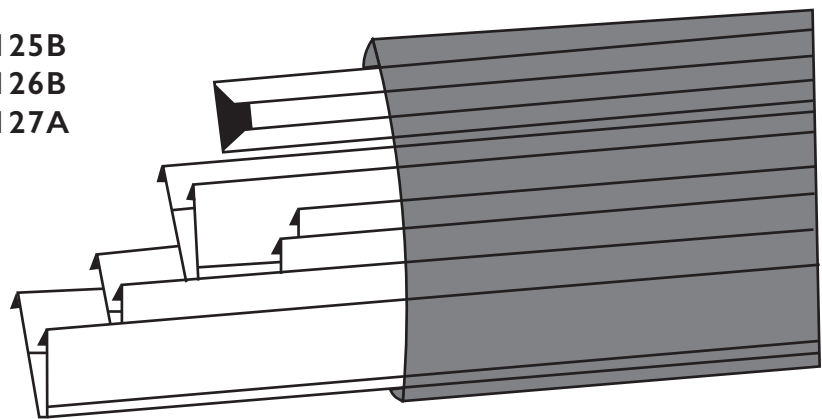

I25B 1"
2 pcs., 48", 3 pcs. 36",
lockstrip and nails, poly bagged

I26B 1 $\frac{1}{8}$ "
2 pcs., 48", 3 pcs. 36",
lockstrip and nails, poly bagged

I27A $\frac{7}{8}$ "
2 pcs., 48", 3 pcs. 36",
lockstrip and nails, poly bagged

Material Designations

A Aluminum	P Pile
S Santoprene	V Vinyl
B Brass	Z Zinc
SS Stainless Steel	
D Dark Brown Anodized or Paint	
N Solid or Closed Cell Neoprene	