


TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

FOR WOOD DOORS :
DRILL(4) 3/32" DIA.X 1-1/4"
DEEP PILOT HOLES
FOR METAL DOORS :
TAPPED(4)#3/16" HOLES.

FOR THRU-BOLTING:
DRILL(2)3/8" DIA.HOLES
THRU DOOR

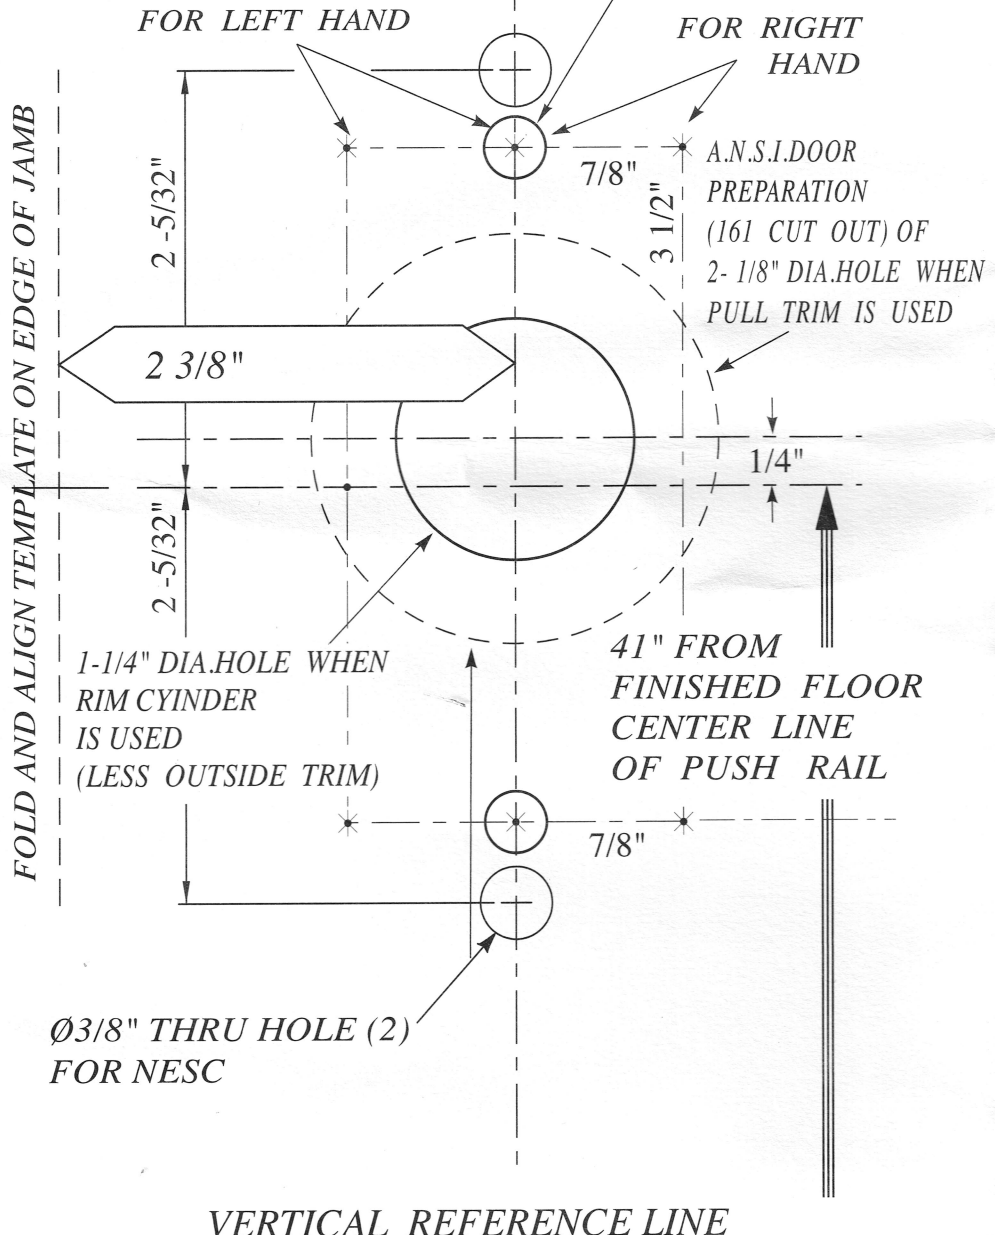


① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM OR NO TRIMS

DRILL(4) $3/8"$
THRU BOLT HOLES.

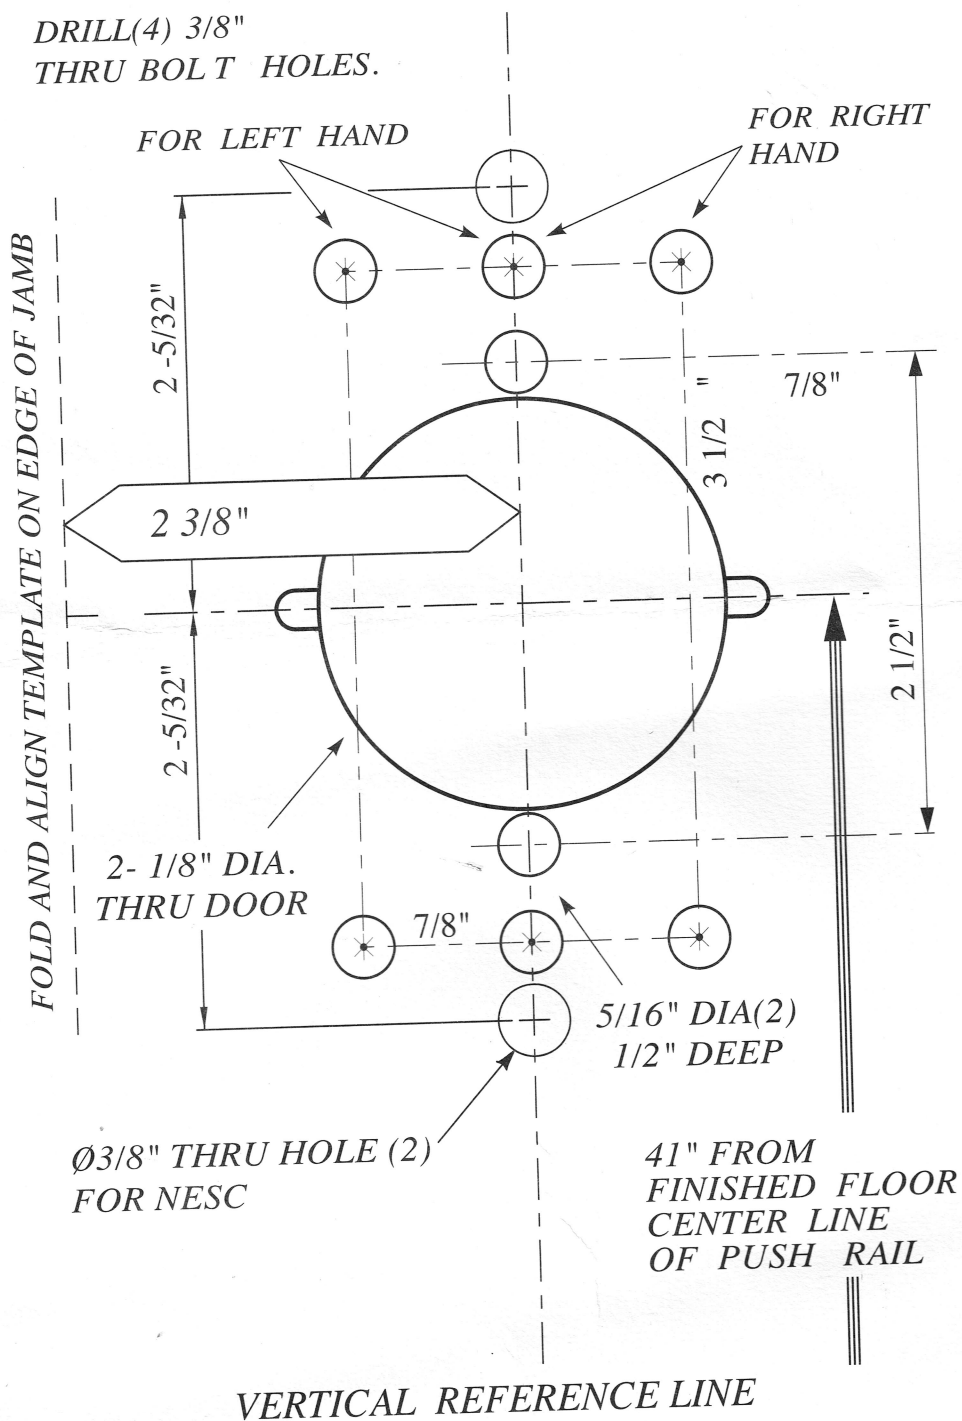

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET

TEMPLATE

FOR EDTBAR AND SVRTBAR SERIES EXIT DEVICE USING LEVER HANDLE TRIM

FOR WOOD DOORS :

DRILL(4) 3/32" DIA.X 1-1/4"

DEEP PILOT HOLES

FOR METAL DOORS :

TAPPED(4)#3/16" HOLES.

FOLD AND ALIGN TEMPLATE ON EDGE OF JAMB

