


SYMO 3000 Modular Removable Core Locking System - Specialty Locks

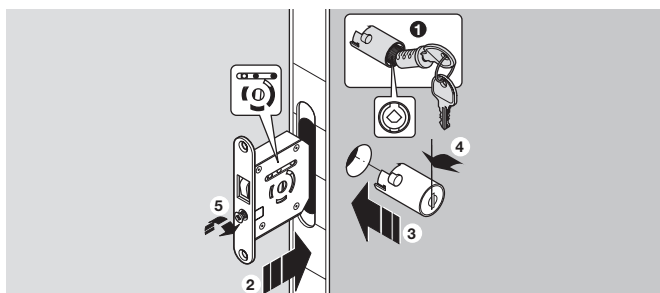


Installation

1. Insert the cylinder core.
2. Insert the lock case into the door.
3. Insert the cylinder housing through the drill hole.
4. Turn the cylinder housing slightly to the left (bayonet catch).
5. Screw in the safety screw.

The cylinder housing is now firmly fixed to the lock case.

→ Lock Handle

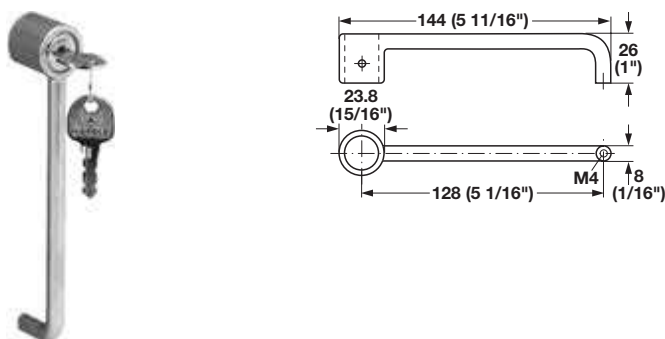

- > For SYMO dead bolt rim lock with extended cylinder
- > Screw mounted (to cylinder housing with 2 mm (1/16") hex screw
- > Handle end to door with M4 screw
- > Material: Zinc Alloy

Finish

nickel-plated

Item No.

232.26.699


Supplied With

2 mm hex screw

Note

M4 screw not included.

→ Hook Bolt Mortise Lock

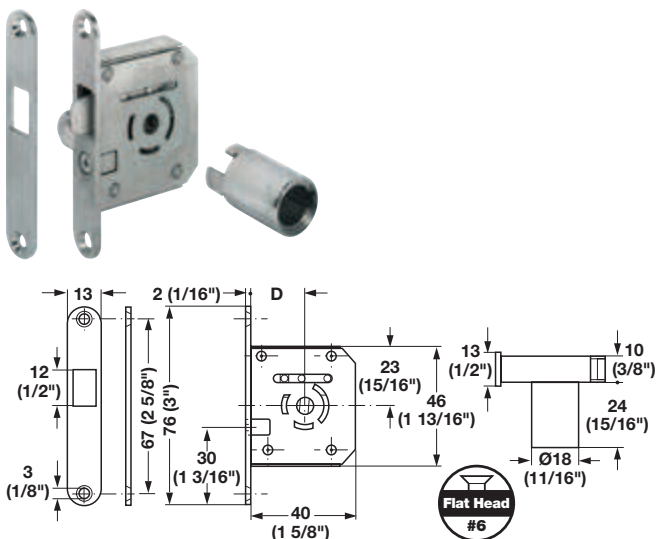

- > For cylinder cores that are inserted from the front on-site
- > Backset D: 22 mm (7/8")
- > Handing: right
- > Recess mounted and screw mounted
- > Material: Zinc Alloy

Finish

nickel-plated


Item No.

230.36.600

Supplied With

Strike plate

→ Roller Shutter Rim Lock

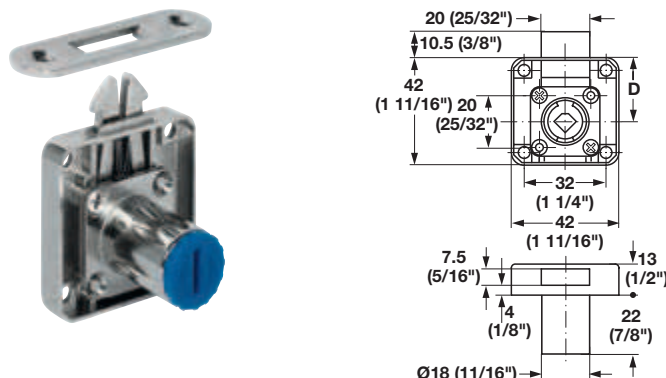

- > For cylinder cores that are inserted from the front on-site
- > Backset D: 24.5 mm (1")
- > Handing: drawer version
- > Screw mounted
- > Material: Zinc Alloy

Finish

nickel-plated

Item No.

232.30.620

Supplied With

Strike plate

Lock cores

pages 10.24–10.25

Flat head screws

pages 12.7–12.8, 12.10, 12.13

Dimensional data not binding. Dimensions in mm, inches are approximate. We reserve the right to alter specifications without notice.