


Furniture Bolts


→ Threaded Bolt

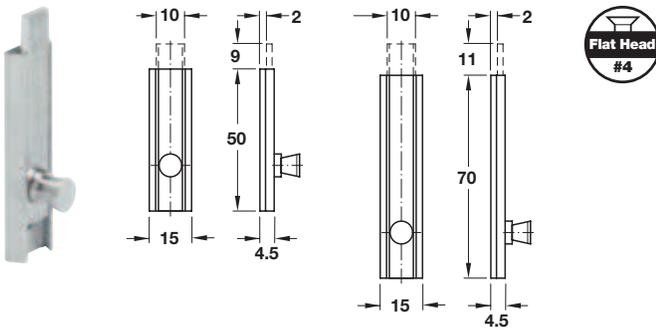


Mounting directions

1. Unscrew the threaded knob so that the screw holes are exposed.

2. The guide can now be installed. Return the slide and screw into place.

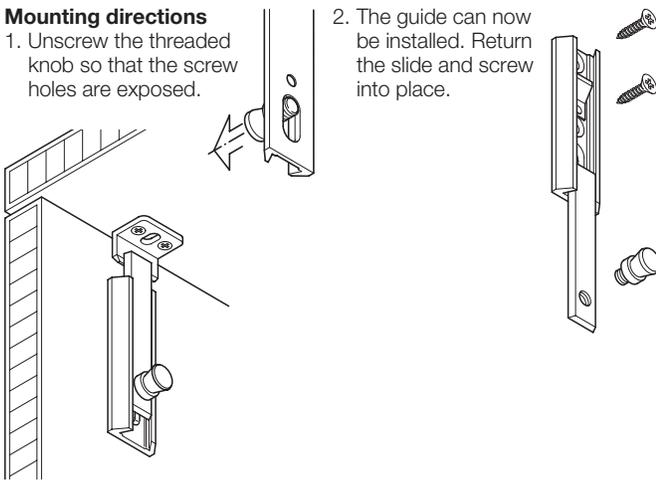

→ Threaded Bolt

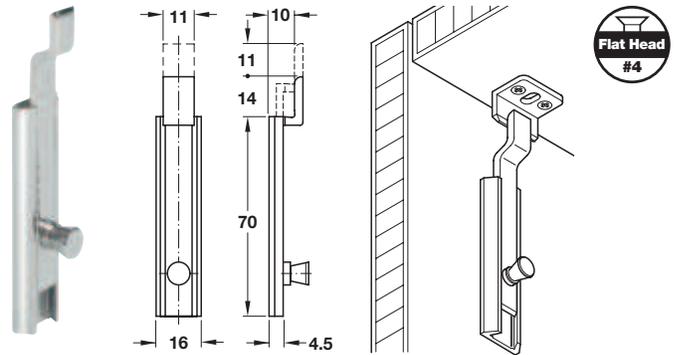

- > With concealed screw holes
- > With cranked slide
- > Material: Brass


Finish

chrome polished

Item No.

252.02.644

→ Threaded Bolt

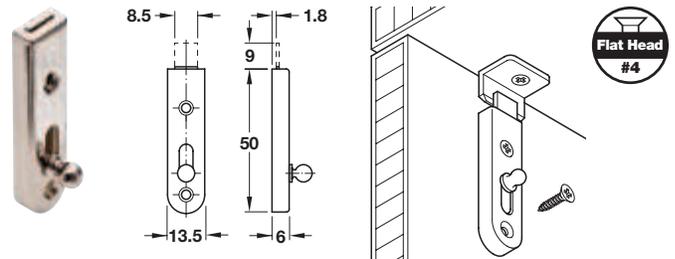

- > With straight slide
- > Screw mounted
- > Material: Steel


Finish

nickel-plated

Item No.

251.01.106

→ Threaded Bolt

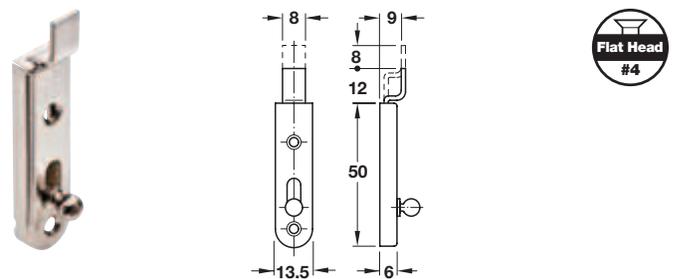

- > With cranked slide
- > Screw mounted
- > Material: Steel

Finish

nickel-plated

Item No.

251.02.103

- > With concealed screw holes
- > With straight slide
- > Material: Solid Brass; Finish: chrome matt

Height

50 (2")


70 (2 3/4")

Item No.

252.01.629

252.01.647

→ Strike

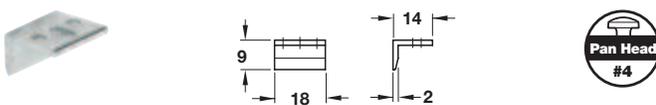

- > Plain bracket and 3 screw holes
- > Material: Brass

Finish

nickel-plated

Item No.

251.60.703