

# HÄFELE






## Installation Instructions: Comfort slat system for queen vertical wall bed

Item Number: 271.92.260



### HARDWARE LIST



A		Side supporting bar for slat system	x2
B		Middle supporting bar for slat system	x1
C		One-way clip for plywood slats	x32
D		Two-way center clip for plywood slats	x16
E		M6 Screw	x8
F		5-ply poplar plywood comfort slat	x32
G		5mm Hex Key	x1

### DANGER

The pistons are now installed, therefore, the bed will **NOT** stay down without the weight of the mattress. You **MUST** have another person hold down or sit on the bed to avoid the risk of serious injury or death from the bed slamming shut.

### WARNING

This product is meant to be used with a Häfele wall bed system and needs to be installed after the wall bed has been fully and safely assembled and secured to the wall.

### NOTICE

Please note that to simplify these instructions, the visual of the wall bed has been removed.

- 1** INSTALLING PLASTIC CLIPS:  
Using a rubber mallet, align the pins on the two-way center clip **D** and insert in place on **B** middle supporting bar.

**B**  x1

**D**  x16


Recommended  
tool (not included):



- 2** INSTALLING THE MIDDLE SUPPORTING BAR:  
Using **E** screws, secure the middle supporting bar **B** in place.

**E**  x4


**G** 

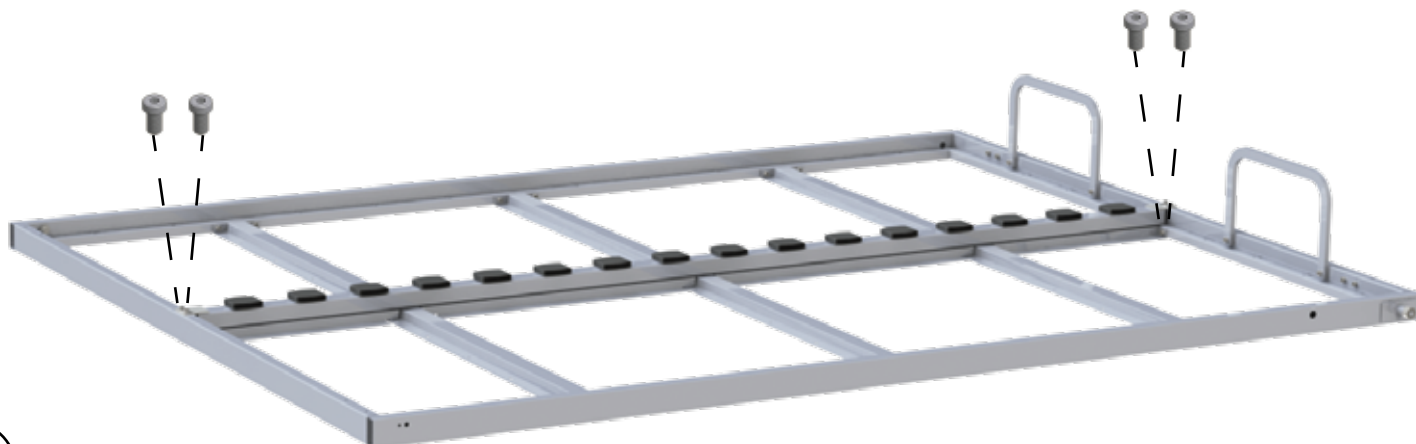



- 3** INSTALLING THE SIDE SUPPORTS:  
Using **E** screws, secure the side supporting bar **A** in place.

**E**  x4

**A**

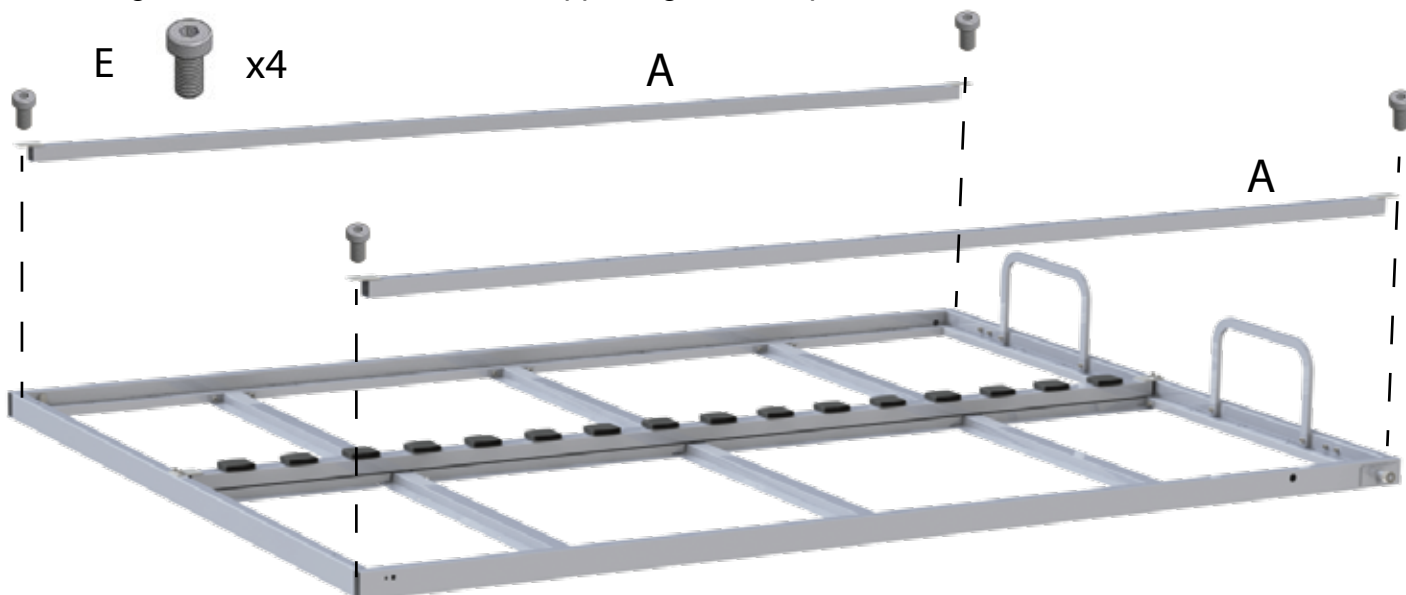


- 4** INSTALLING THE ONE-WAY CLIPS ON THE SLATS:  
Insert the one-way clips **C** on one side the wood slat until it is fully inserted. Repeat for all the slats.

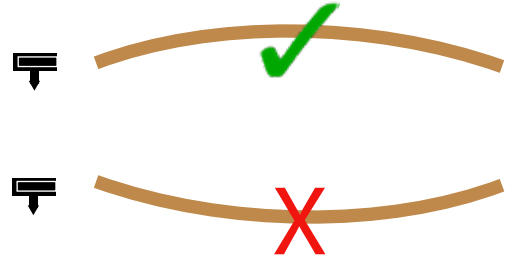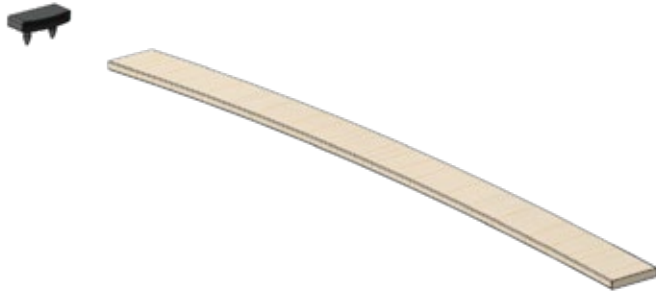

\* Please make sure to place the wooden slats with the curve upwards, NOT downwards.

- 5** INSTALLING THE SLATS ON THE STRUCTURE:  
1. Insert the end of the slat **F** in the two-way clip **D** in the center. 2. Align the pins of the one-way clip **C** into the holes of the bar side supporting bar **A** and use the rubber mallet to insert into place.

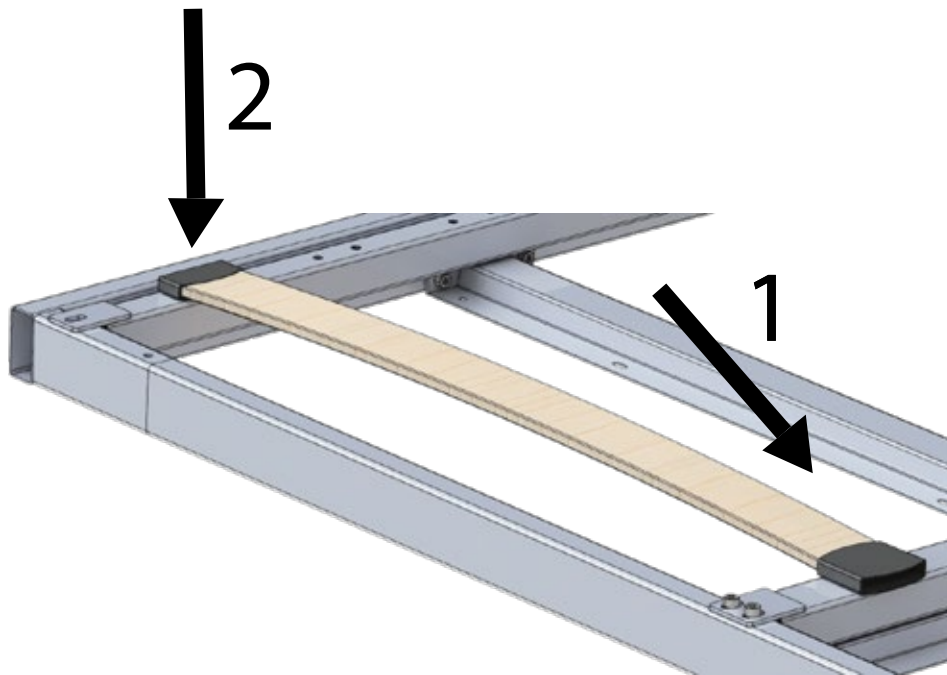


Recommended tool (not included):



6

#### INSTALLING THE REMAINING SLATS:

Repeat the process of step 5 for all the remaining slats.

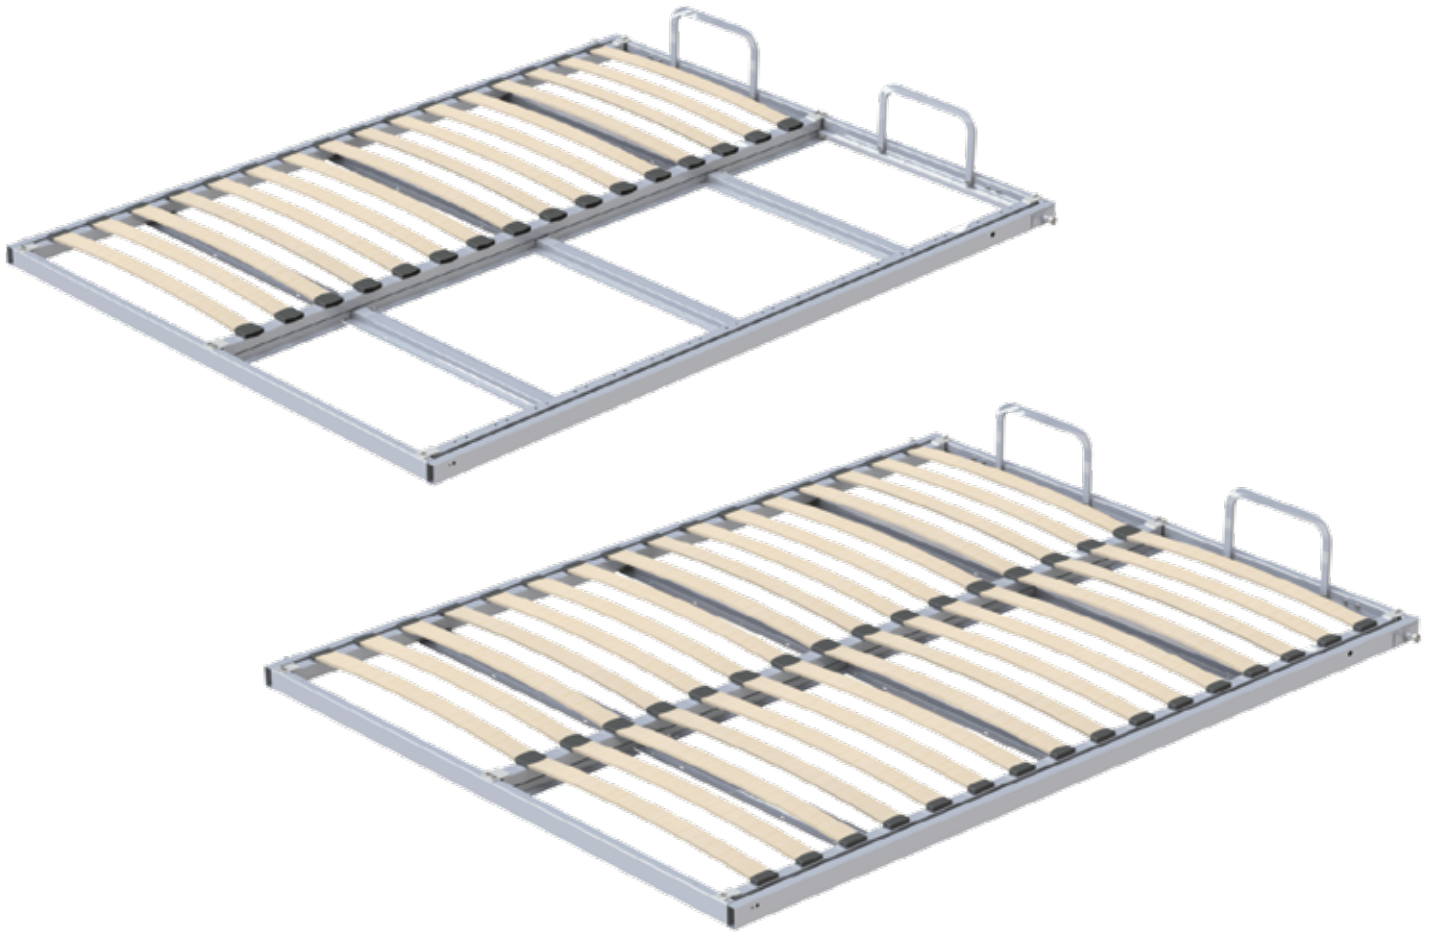

7

#### ADDING THE MATTRESS

At this point, you may add the mattress. Once the mattress is in place, you will be able to use the wall bed mechanism with the comfort slats in place.

