

Salice



For recess mounting




For surface mounting

- > Quiet door/drawer closure
- > As the door/drawer opens, pressure is then released allowing the adapter to move forward to receive the door/drawer again
- > Use with hinges on pages **9.17-9.27, 9.30**
- > For doors over 1600 mm (63"), it is suggested to use two SMOVE, one to be inserted into the upper part and the second into the lower part of the cabinet side opposite the hinges

SMOVE Installation instructions for adhesive adapters:

1. Clean and de-grease the cabinet surface where the adapter is to be installed using denatured alcohol or an acetone based cleaner.
2. Remove the protective strip from the adhesive.
3. Place the adapter in position and apply a firm pressure for about one minute.
4. Insert SMOVE into the adapter.
5. Allow a period of 12 hours to elapse before using.

→ SMOVE

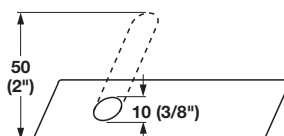

- > Light resistance
- > With pre-attached grommet
- > Mount into the cabinet side opposite the hinges
- > For optimal performance, we suggest mounting in the center of the side panel
- > For doors from 450–600 mm (17 23/32"–23 5/8")
- > Material: Plastic

Color	Model	Item No.
beige	D005SNB	356.11.400
light brown	D005SNQ	356.11.100

→ SMOVE



- > Heavy resistance
- > With pre-attached grommet
- > Mount into the top or the base panel of the cabinet on the hinged side
- > A drilling distance of 27 mm (1 1/16") from the cabinet side is suggested
- > Material: Plastic

Color	Model	Item No.
beige	D008SNB	356.11.420

9

Hinges and Stays

→ SMOVE



- > Medium resistance
- > With pre-attached grommet
- > Mount approximately into the center of the top or the base panel of the cabinet
- > Material: Plastic

Color	Model	Item No.
beige	D006SNB	356.11.410

→ Twist Drill Bit HSS




- > 10 mm (3/8")
- > Material: Steel

Item No.
001.41.293

Supplied With
10 pcs.

→ Adapter for overlay or inset doors without lip

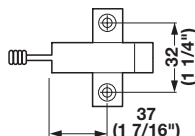

- > Screw mounted
- > Material: Plastic

Color	Model	Item No.
beige	D064SNBR	356.11.462