


Frameless



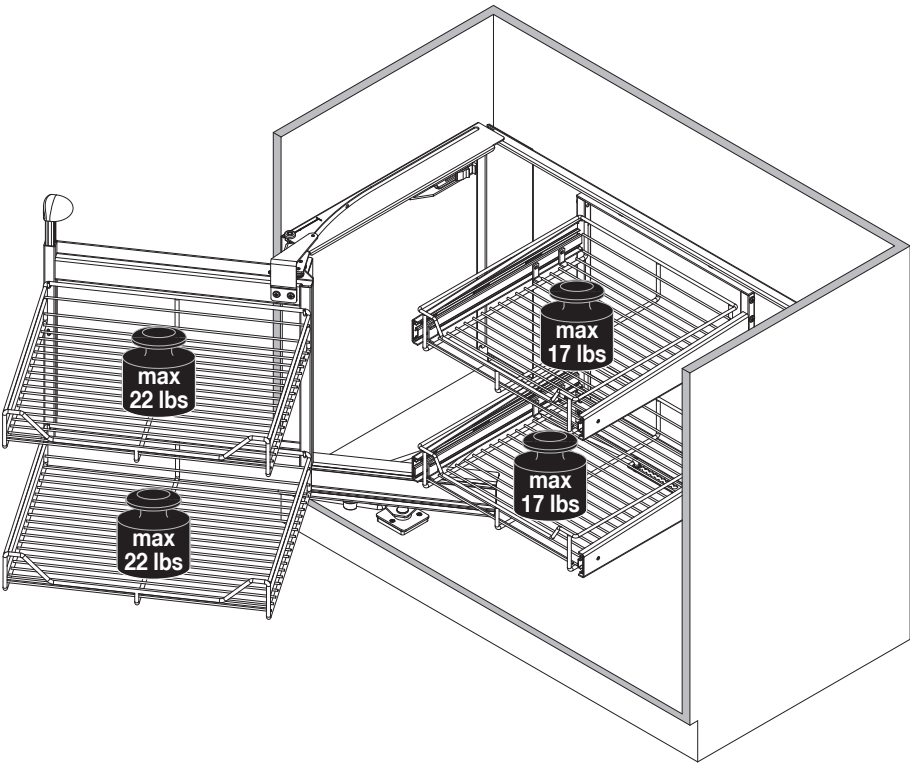

max 22 lbs



max 17 lbs



max 22 lbs



max 17 lbs



max 22 lbs




max 10 kg




max 17 lbs



max 8 kg

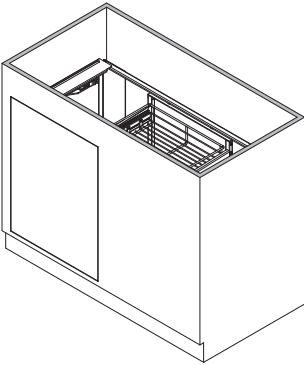





Frame inset

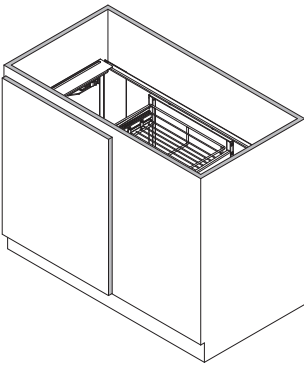

Frame overlay

This mounting instruction is for a left swivel pull out, Art.-No. 300.0592.xx.
 The right swivel pull out instruction is mirror-inverted, Art.-No. 300.0593.xx.



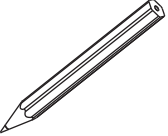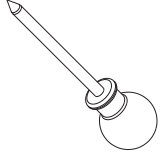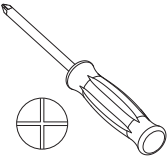Dimensions in mm

Inches are approximate

950.0359.MA

10.12.2008 hrm



Rev.

1/8






Before starting the installation
make sure that the cabinet is
level and secured to the wall

Frameless

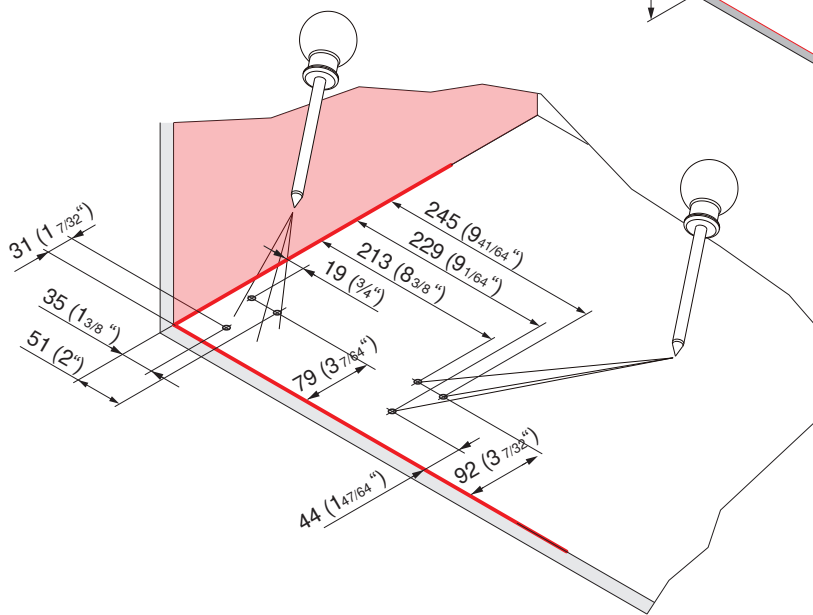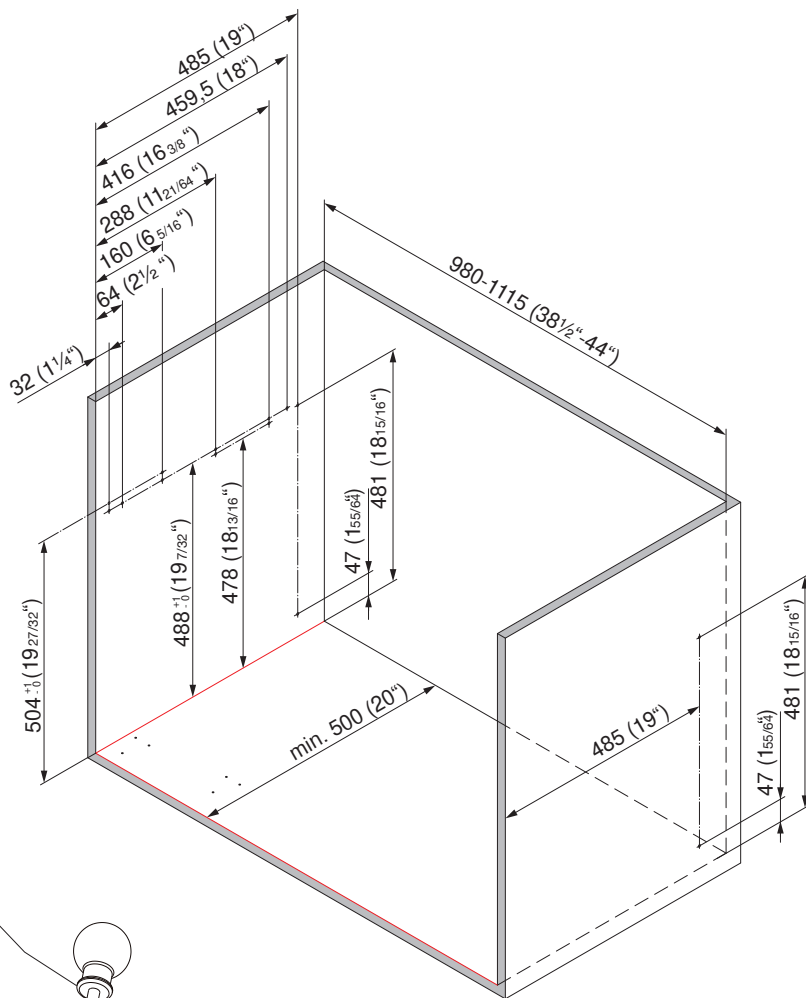

Frame inset

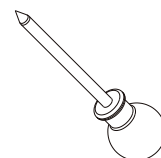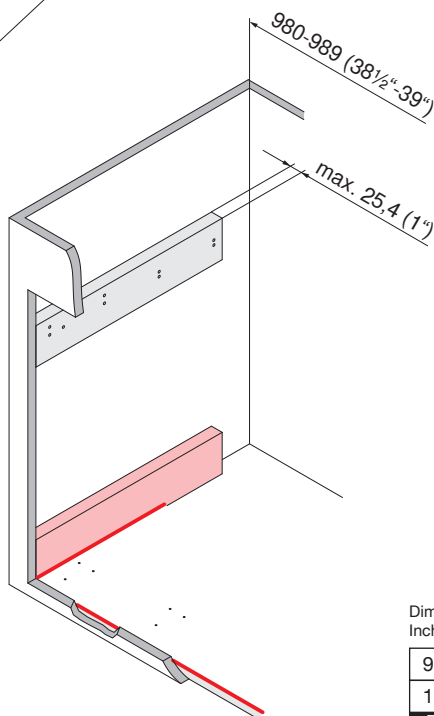





Dimensions in mm
Inches are approximate

950.0359.MA


Rev.

10.12.2008 hrm

Spacer for Frame inset Spacer for Frame overlay

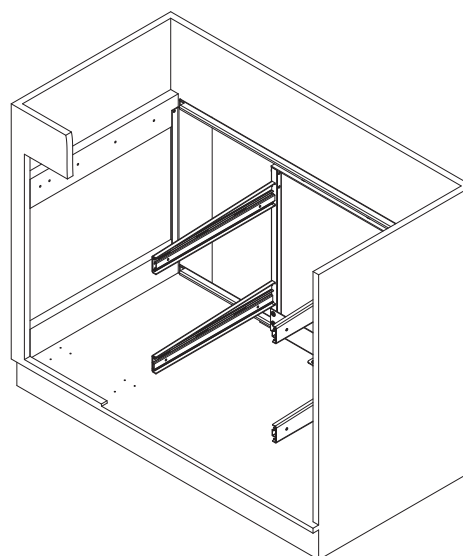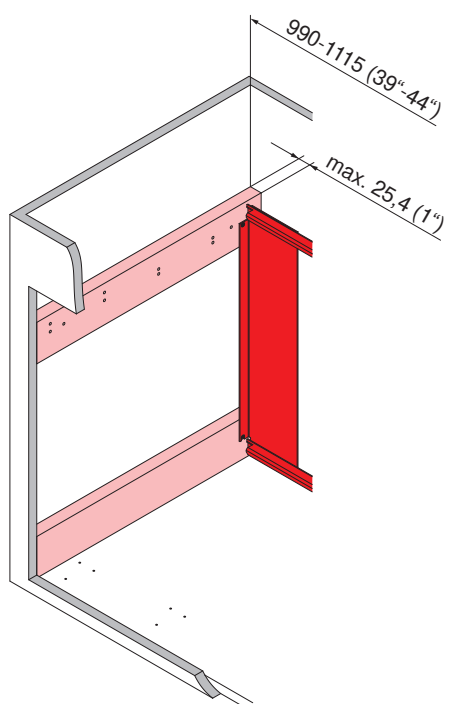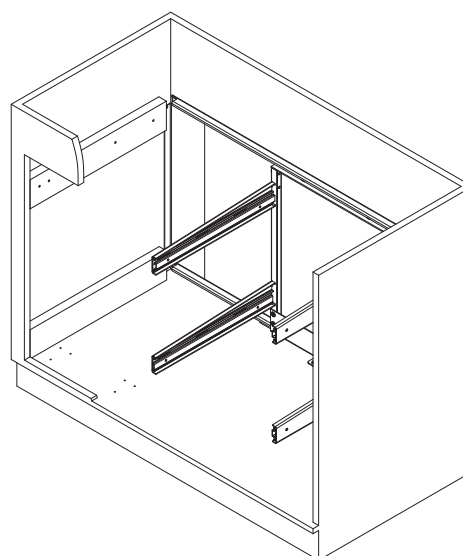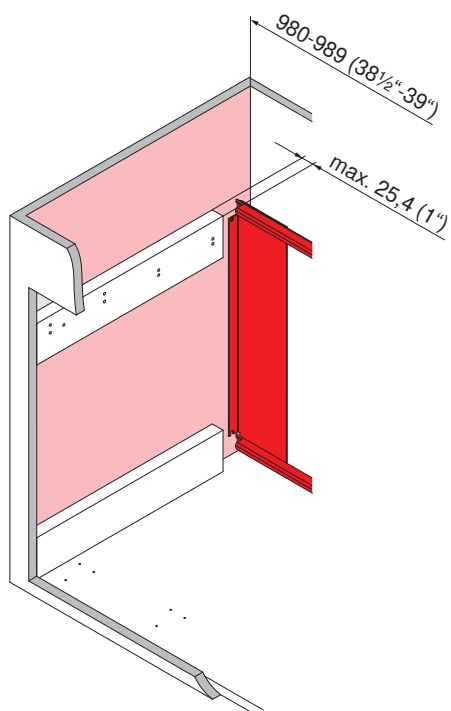

Frame overlay

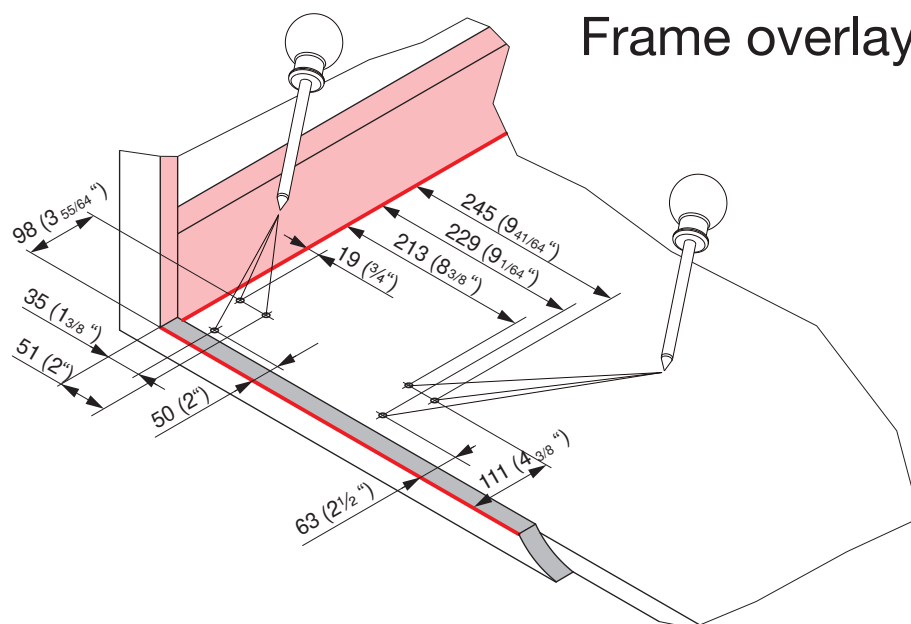

Dimensions in mm
Inches are approximate

950.0359.MA	Rev.
10.12.2008 hrm	
3/8	

2 Mounting of rack for rearpanel frame



4x M5x10

Schrauben erst nach der Korbbefestigung definitiv anziehen.
Proper fastening of the screws only after baskets are fixed.
Il faut visser les vis définitivement seulement après la fixation des paniers.

Traverse oben im Korb- / ARENA -Set enthalten
Upper traverse included in basket- / ARENA-Set
Traverse en haut inclus dans le set de panier ou ARENA

A=290 = 900.2592.xx
A=390 = 900.2594.xx

A

Traverse unten im Korb- / ARENA-Set enthalten
Lower traverse included in basket- / ARENA-Set
Traverse en bas inclus dans le set de panier ou ARENA

A=290 = 900.2596.xx
A=390 = 900.2598.xx


Schrauben erst nach der Korbbefestigung definitiv anziehen.
Proper fastening of the screws only after baskets are fixed.
Il faut visser les vis définitivement seulement après la fixation des paniers.

4x M5x10

Dimensions in mm
Inches are approximate


950.0359.MA
10.12.2008 hrm

4/8

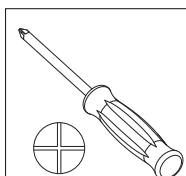


Rev.


3 Mounting of basket

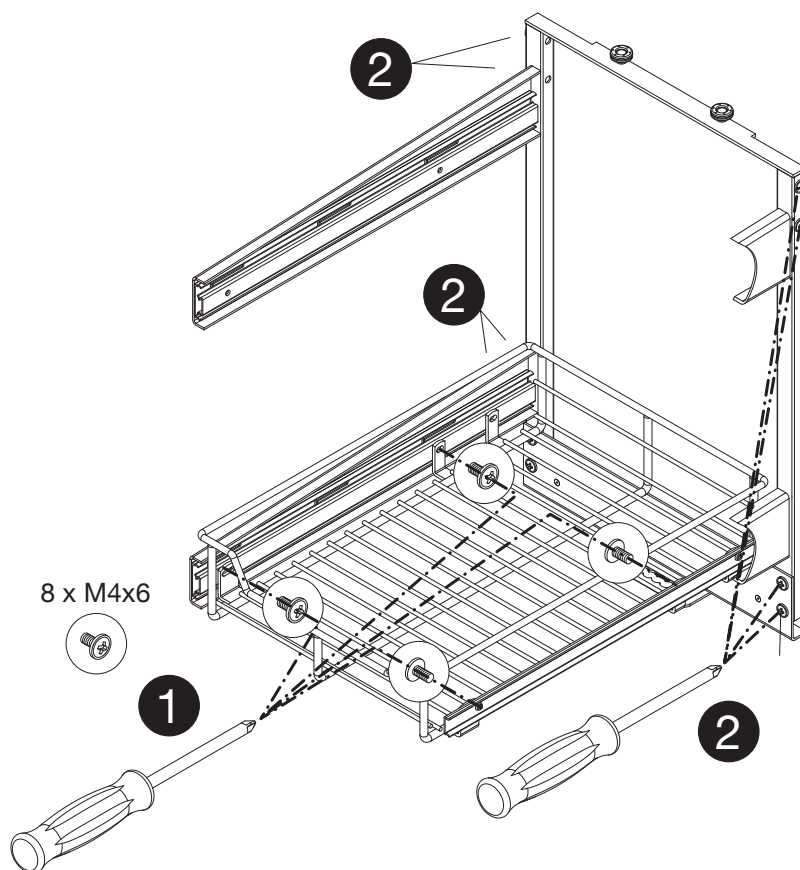

2 Schrauben definitiv anziehen.
Definite fastening of the screws.
Visser les vis définitivement.

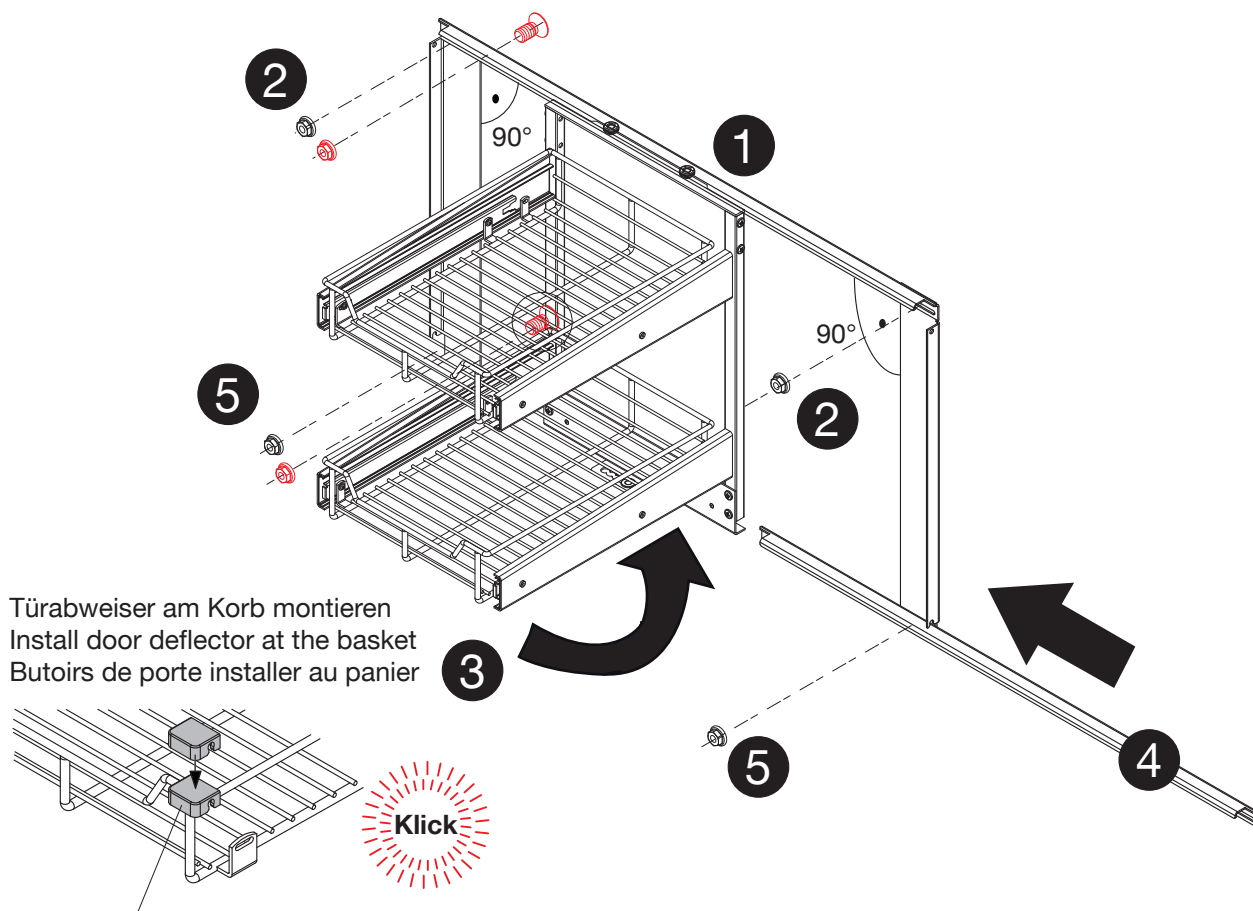

Türabweiser am Korb montieren
Install door deflector at the basket
Butoirs de porte installer au panier

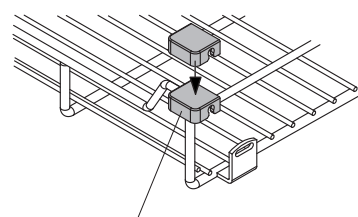

Türabweiser im Korb- / ARENA-Set enthalten.
Door deflector clip included in basket- / ARENA-Set.
Butoirs de porte inclus dans le set de panier ou ARENA.


Dimensions in mm
Inches are approximate

950.0359.MA

Rev.


10.12.2008 hrm

5/8

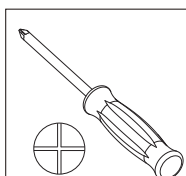

4 Mounting of rearpanel frame, guide plate, endstop bracket, follower




- Step 1: Loosen hex-nuts of rearpanel frame
 Step 2: Screw on rearpanel frame to cabinet sides
 Step 3: Tighten hex-nuts of rearpanel frame

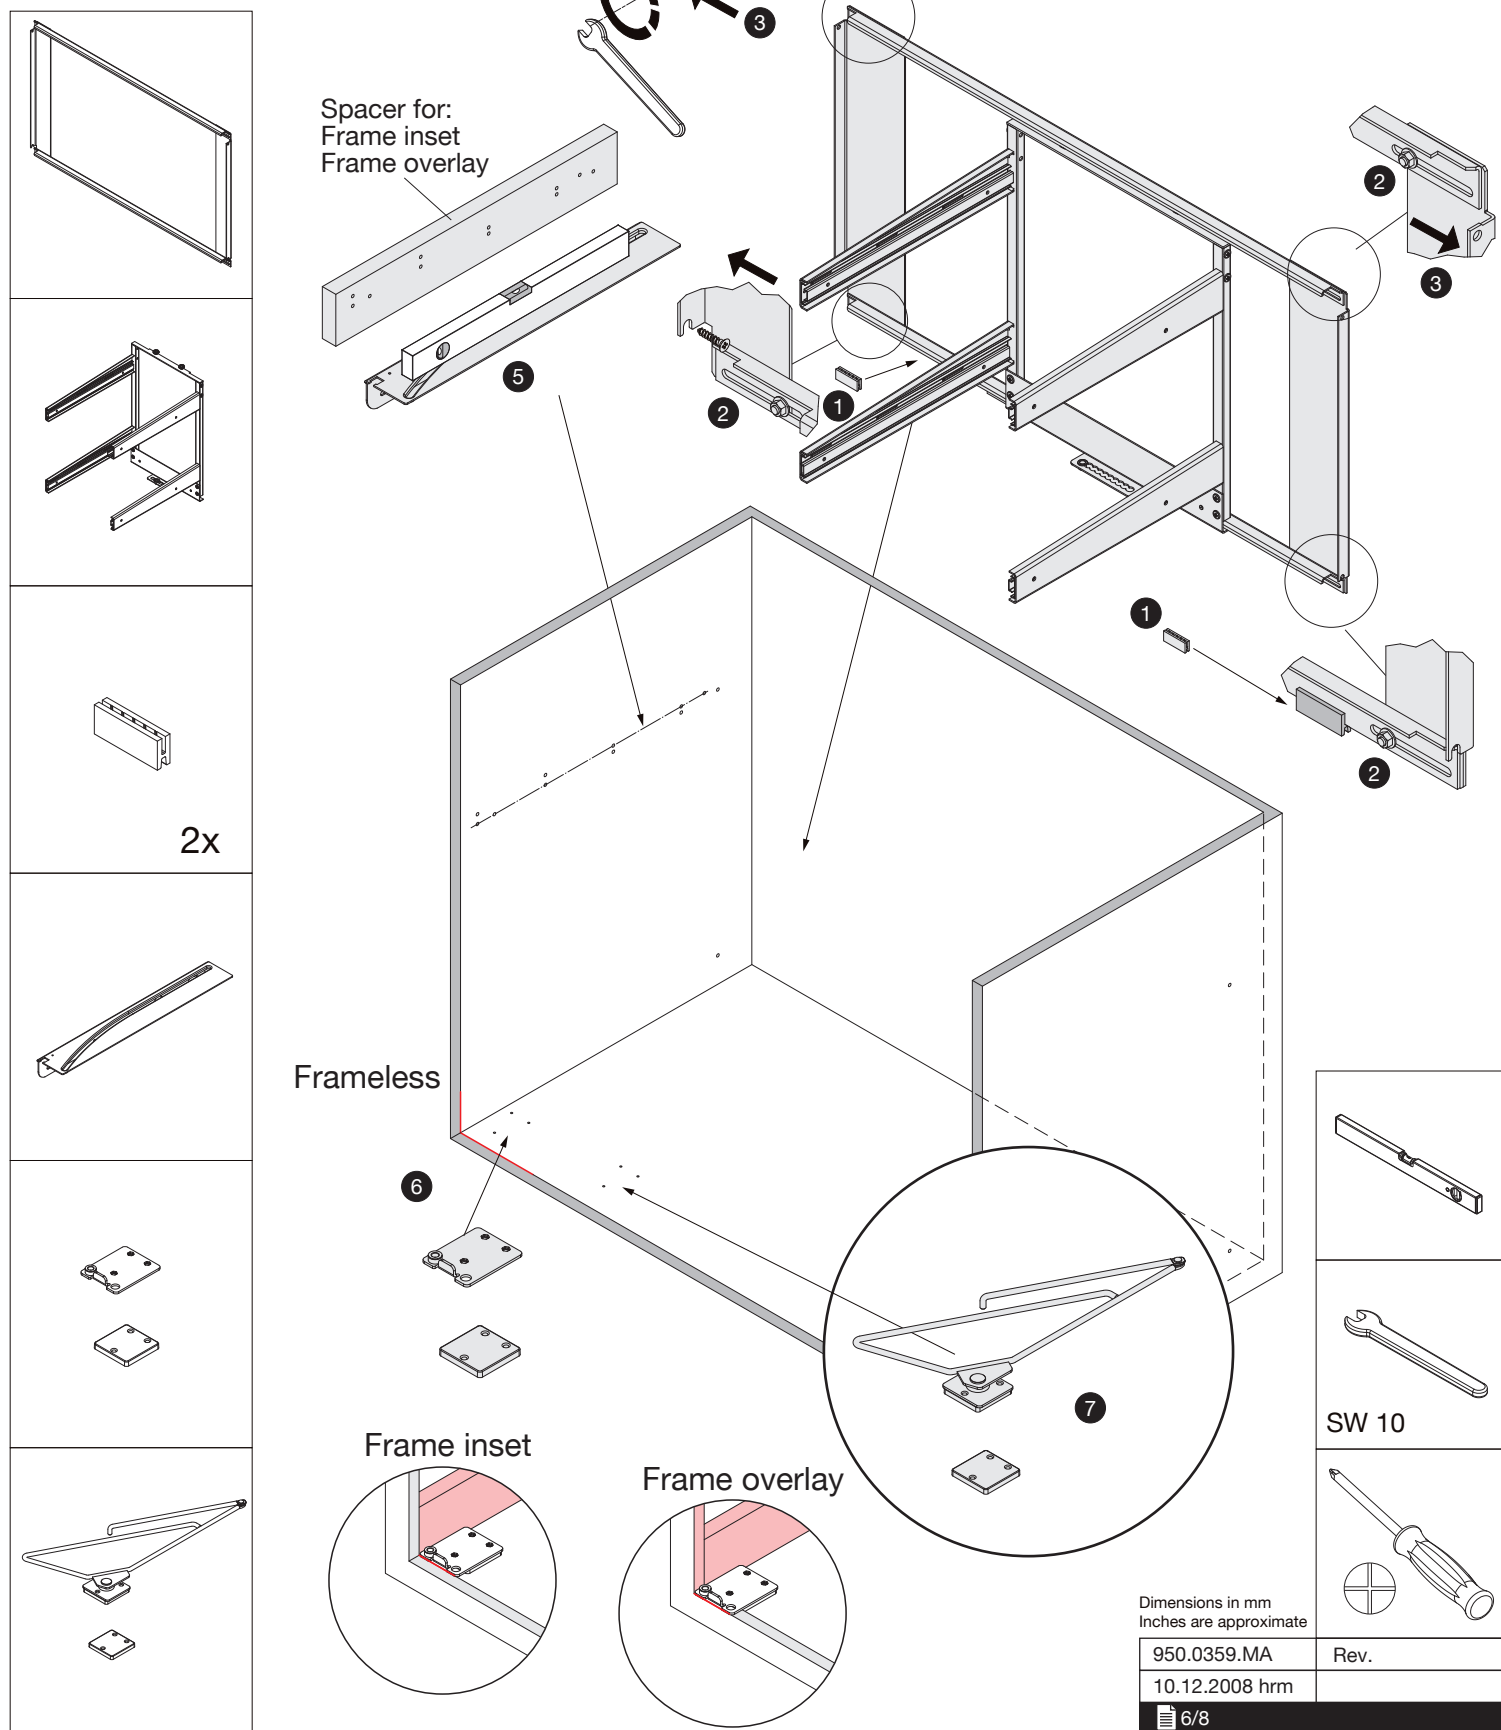



5 Install pull-out frame




Don't squeeze fingers

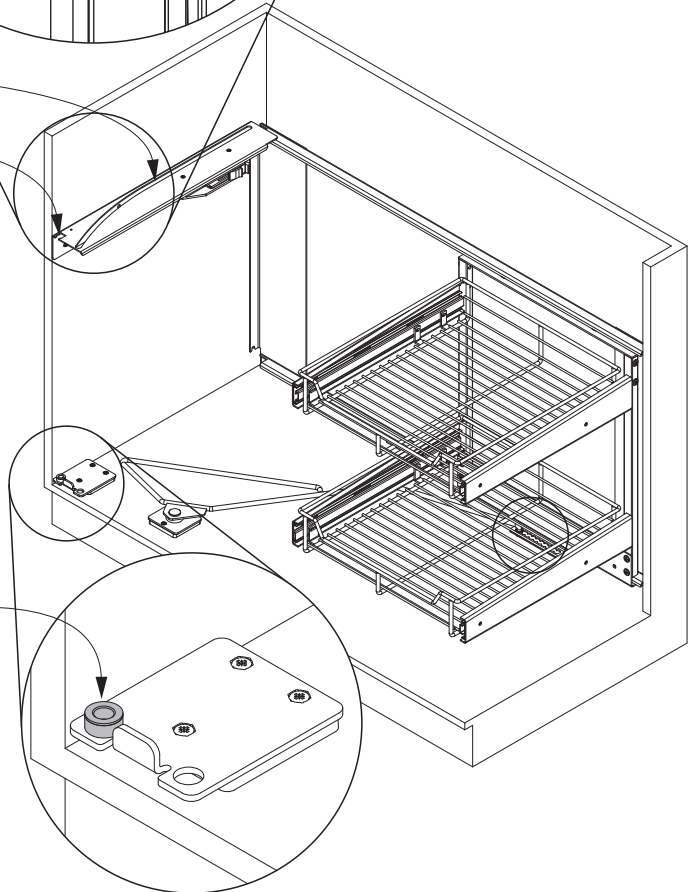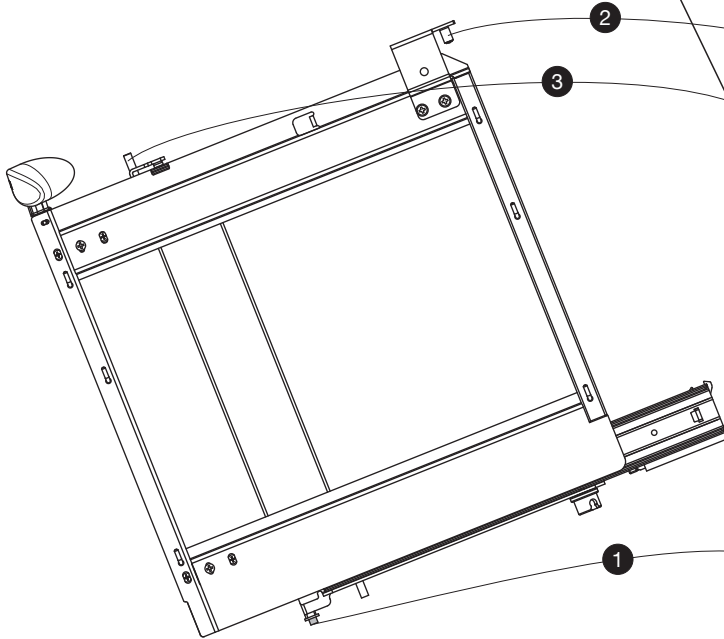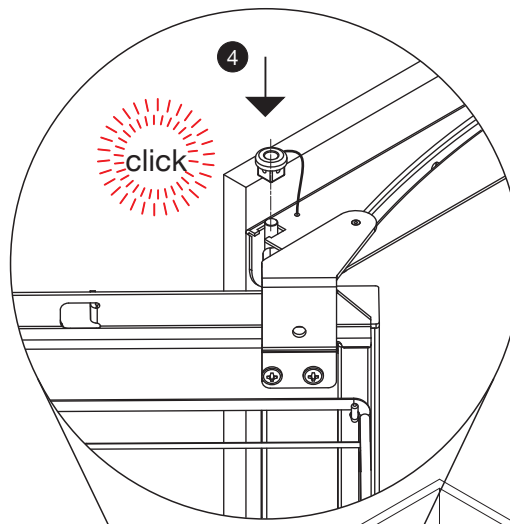

Don't squeeze fingers

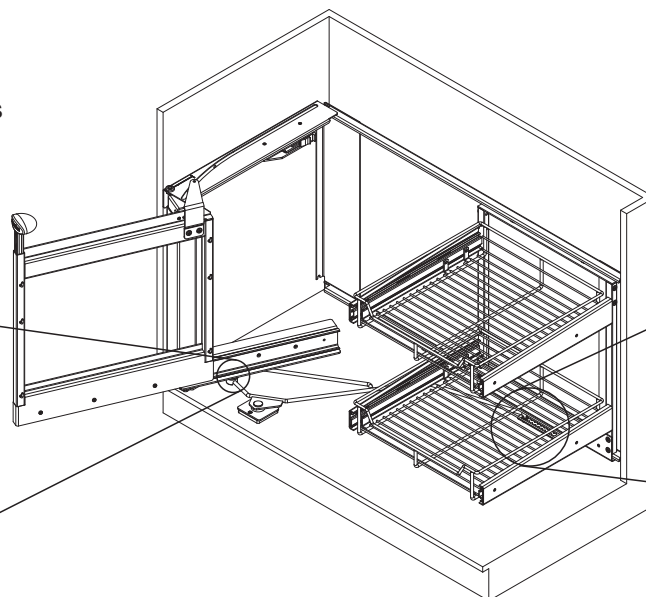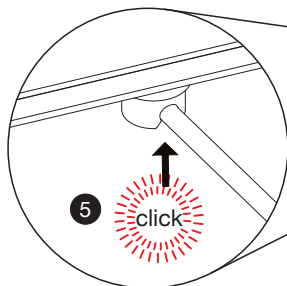

Right Swivel Version,
change the rubber element

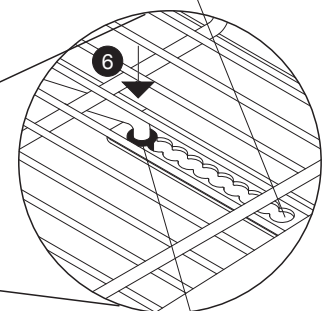

Left Swivel Version

Dimensions in mm
Inches are approximate

950.0359.MA	Rev.
10.12.2008 hrm	
7/8	

6 Place shelves

