

For use on doors 1-3/8" -1-3/4" (35mm-45mm) thick

Tools required for installation:

Drill



#2 Screwdriver



Chisel



1" Drill Bit




3/8" Drill Bit



## DOOR PREPARATION (PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING)


If needed, use door prep template attached on page 2. Information below is for reference only.

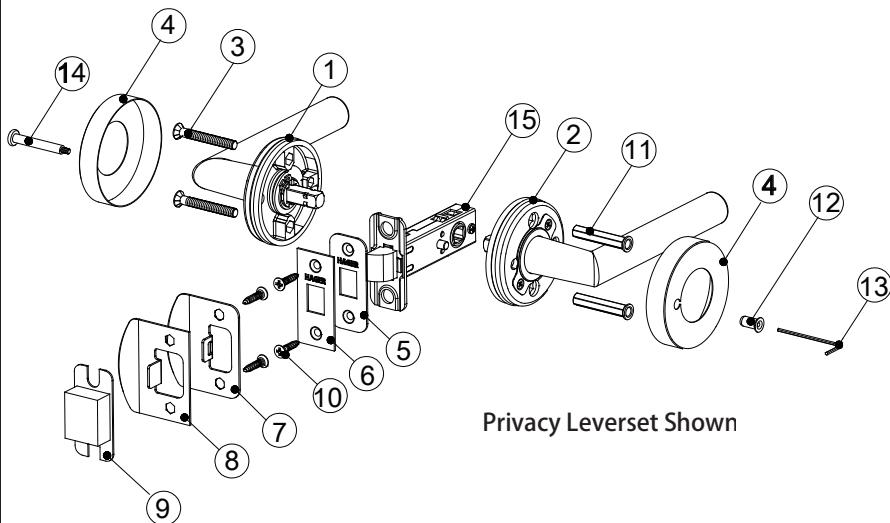

1. Inside lever assembly
2. Outside lever assembly
3. #10-32 x 1-1/2" machine screw (2)
4. Rose (2)
5. Round corner latch faceplate
6. Square corner latch faceplate
7. Round corner full lip strike
8. Square corner full lip strike
9. Dust Box
10. #8-32 x 3/4" Strike / Latch screws (4)
11. Mounting post (2)
12. Emergency release plug (*privacy only*)
13. Hex key (*privacy only*)
14. Privacy button (*privacy only*)
15. Latch bolt

## 1. PREP DOOR & FRAME (Skip ahead to step 2 for retrofit application)


### A. Mark holes using template

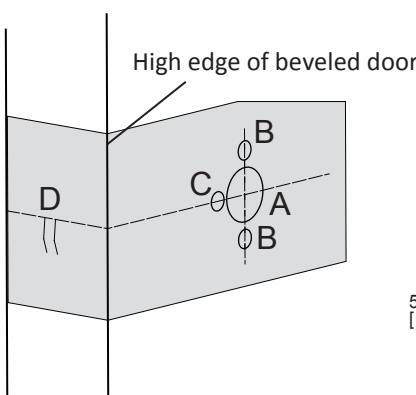

Place template onto high edge of beveled door.


1. Mark hole A for privacy or passage locksets
2. Mark hole B for privacy or passage locksets
3. Mark hole C for privacy locksets
4. Mark hole D based on door thickness

### B. Prep Door

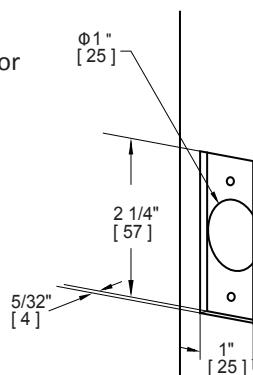


Note: 1" hole in door edge should be drilled to a depth of 3.5" (89mm).

### C. Prep frame for strike

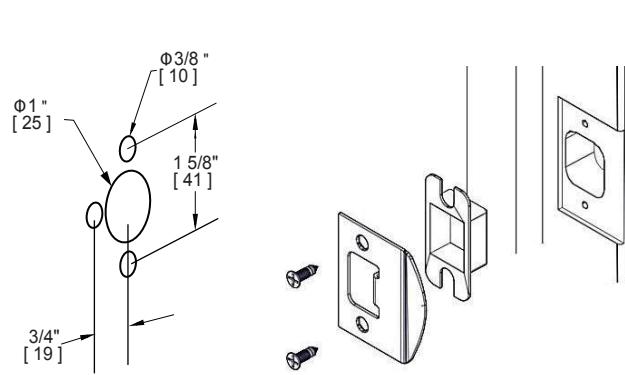


Note: Strike centerline should be aligned with centerline of faceplate cutout.

## 2. INSTALL LATCHBOLT

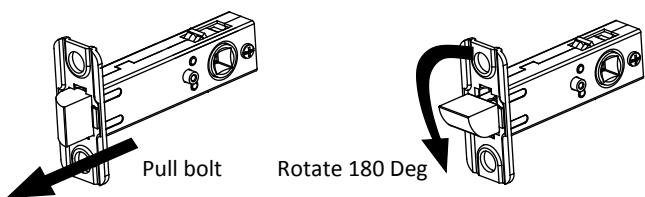


All privacy latch bolts are supplied handed to accommodate inward opening doors. For outward opening doors, follow the instruction above to rotate the bolt.


THREADED PORTION OF BUTTON  
MUST FACE THE INSIDE IF  
PRIVACY LATCHIS INSTALLED.

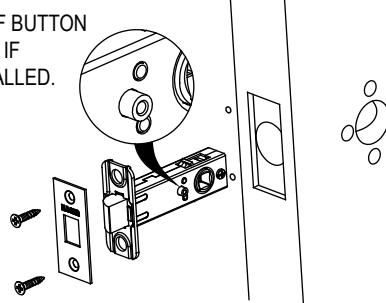

## 3. REMOVE ROSES FROM SPRING CAGE

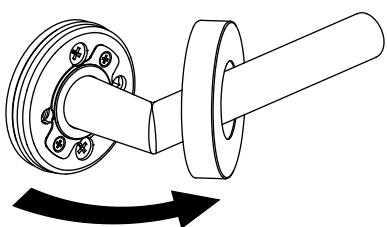


## 4. INSTALL LOCKSET

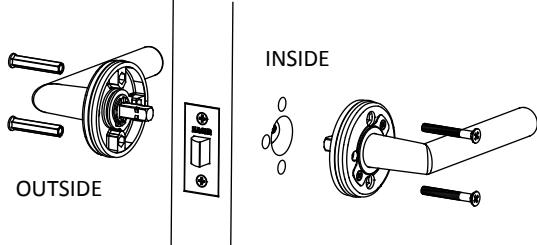


Tighten leverset to the door using (2) #10-32 machine screws  
and mounting posts

## 5. INSTALL ROSES

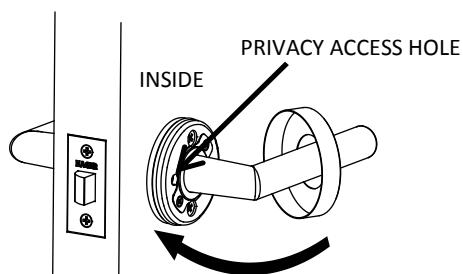

Slide roses onto spring cage and press tight to door face. For privacy locksets, align hole in rose to the privacy hole in spring cage.


## 6. INSTALL BUTTON AND PLUG (PRIVACY ONLY)

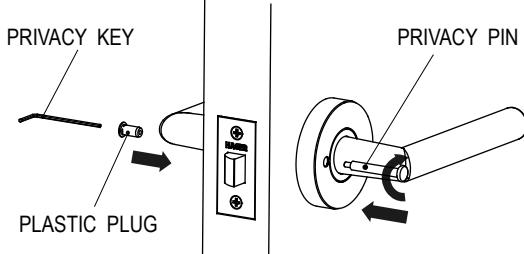

1. Insert pin in inside rose and thread tight to latch bolt.
2. Snap plug into hole on exterior rose.

## PASSAGE / PRIVACY TEMPLATE

(Remove by cutting along dashed line)

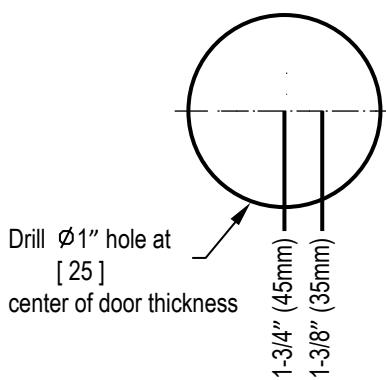

IMPORTANT: Fold here on high edge of beveled door

