


WALL STOP Mounting Instructions

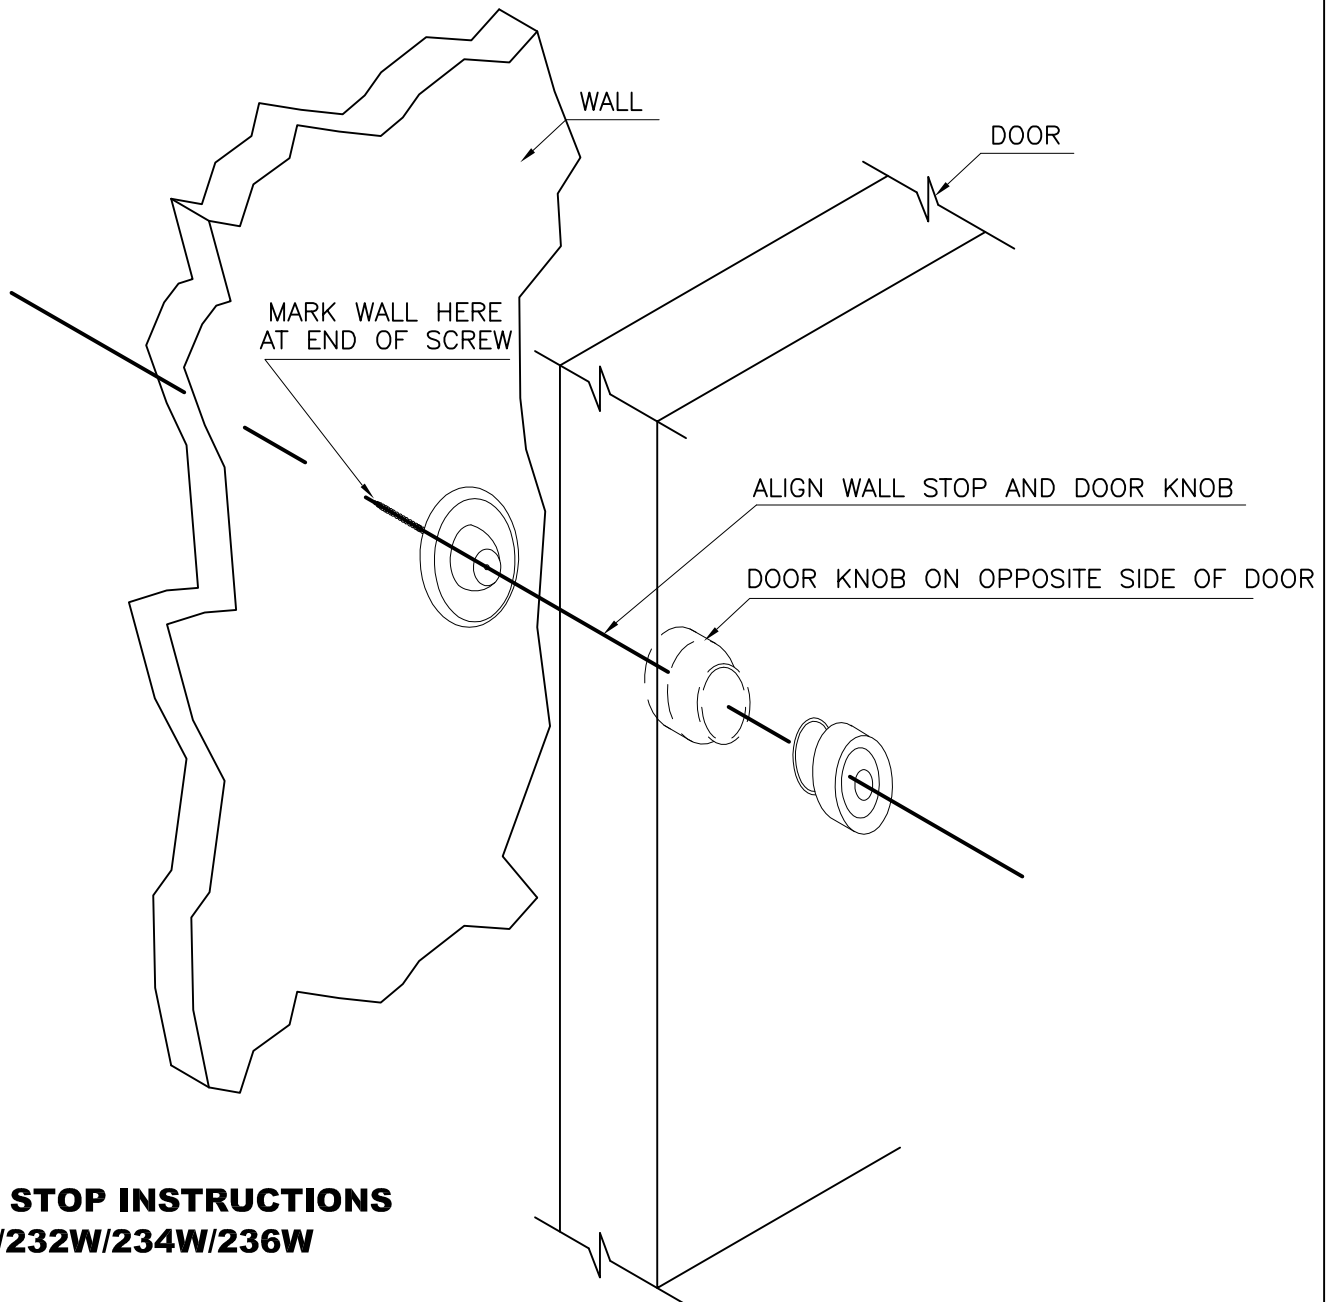

WALL STOP INSTRUCTIONS 230W/232W/234W/236W

TOOLS REQUIRED: 5/16" DRILL BIT (STD. ANCHOR), 3/8" DRILL BIT (TOGGLE ANCHOR)
PHILLIPS SCREWDRIVER, AND PENCIL

1. POSITION AND ALIGN WALL STOP BETWEEN WALL AND DOOR KNOB.
2. MARK WITH PENCIL WHERE SCREW OF WALL STOP TOUCHES WALL.
3. DRILL 5/16" HOLE AT PENCIL MARK WHEN USING STANDARD ANCHOR OR DRILL 3/8" HOLE AT PENCIL MARK WHEN USING TOGGLE ANCHOR.
4. INSERT ANCHOR THROUGH DRILLED HOLE AND TAP FLUSH TO WALL.
5. SECURE STOP TO WALL BY TIGHTENING SCREW THROUGH RUBBER BUMPER (MIGHT BE A TIGHT FIT)

NO	REVISIONS	BY	DATE
1	PER CT09001	MJ	08.13.09

HAGER COMPANIES
139 VICTOR STREET
P.O. BOX 12300
ST. LOUIS, MISSOURI 63157-0300
www.hagerco.com