

INSTALLATION INSTRUCTIONS


241F, 242F, 243F

REV

1

PART NO.

DOME STOP INSTALL

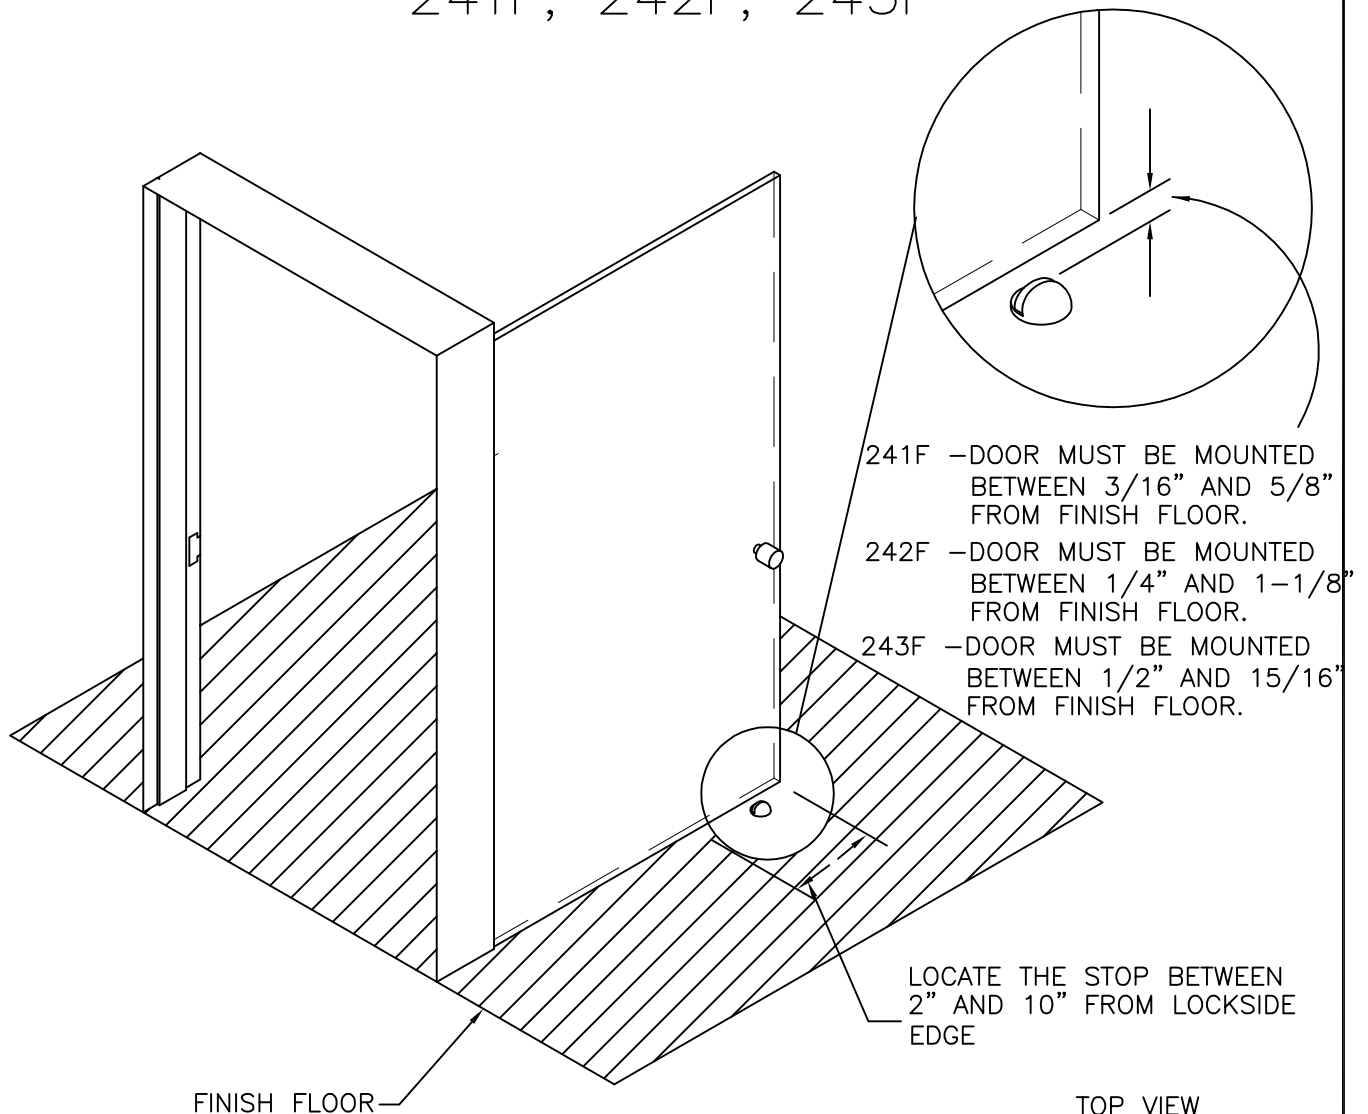

1. OPEN DOOR TO DESIRED POSITION
2. SLIDE STOP UNDER THE DOOR SO THAT THE BUMPER IS FLUSH AGAINST BACKSIDE OF DOOR
3. ONCE STOP IS LOCATED, MARK HOLE CENTERS
4. DRILL STUD HOLE APPROX. 1" DEEP WITH 9/32" DRILL BIT
5. DRILL SCREW HOLE 1-1/2" DEEP WITH 5/16" DRILL BIT.
FOR CONCRETE FLOOR, DRILL 1" DEEP WITH 1/2" DRILL BIT
6. TAP PLASTIC ANCHOR INTO 5/16" HOLE AND SECURE STOP.
FOR CONCRETE FLOOR, TAP LEAD ANCHOR INTO 1/2" HOLE AND SECURE STOP



HAGER HINGE CO.
139 Victor St.
St. Louis, MO 63104

SPECIFICATIONS

NO	REVISIONS	BY	DATE
1	FOR COMPUTER	JAH	08.13.09
2	PER CT09001	MJ	08.13.09

JAH

NONE

08.13.09

241F, 242F, 243F DOME STOP INSTALLATION INSTRUCTIONS

PART NO.

DOME STOP INSTALL

REV

1