




330D POCKET DOOR LATCH INSTRUCTIONS

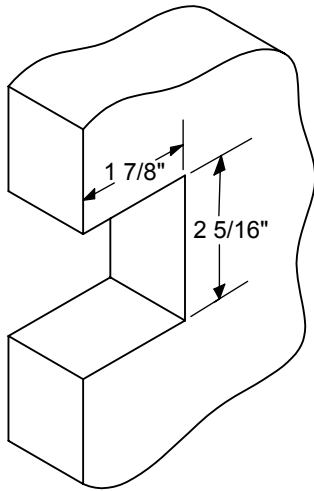

CUT NOTCH IN THE DOOR AT THE DESIRED HEIGHT.

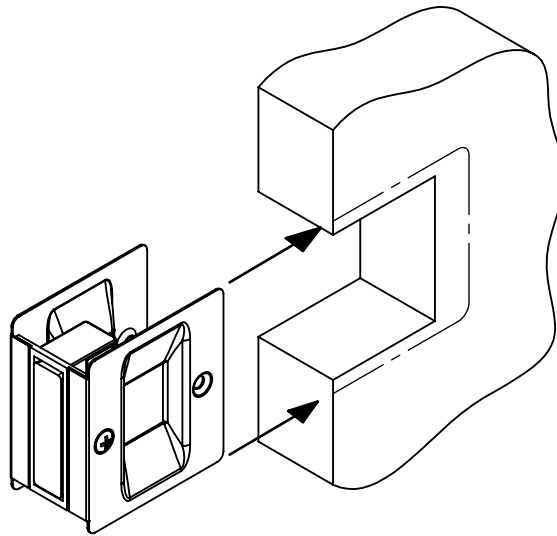

SLIDE THE LATCH INTO PLACE SO THAT THE FRONT FACE OF THE LATCH IS FLUSH WITH THE DOOR EDGE.

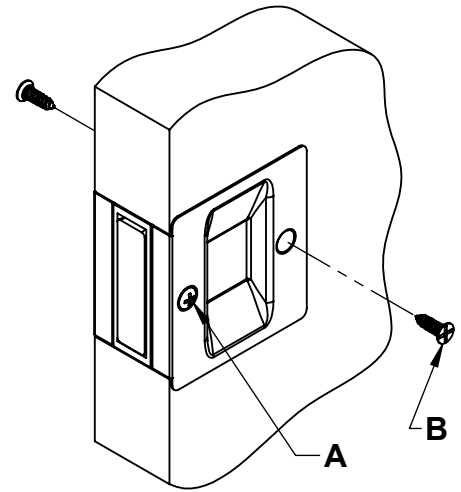

- A. TIGHTEN MACHINE SCREWS TO AUTOMATICALLY ALIGN THE PULL ON THE DOOR.
- B. INSTALL (2) #6 x 5/8" OPHWS TO THE DOOR.




DRAWING NO: I-TA00740

REV: 01


SHEET 1 OF 1

HAGER COMPANIES 139 Victor Street, St. Louis, MO 63104 - (800) 325-9995 - Fax (800) 782-0149


330L/330M POCKET DOOR LATCH INSTRUCTIONS

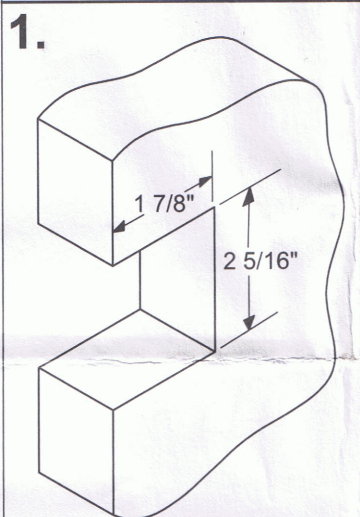


CUT NOTCH IN THE DOOR AT THE DESIRED HEIGHT.

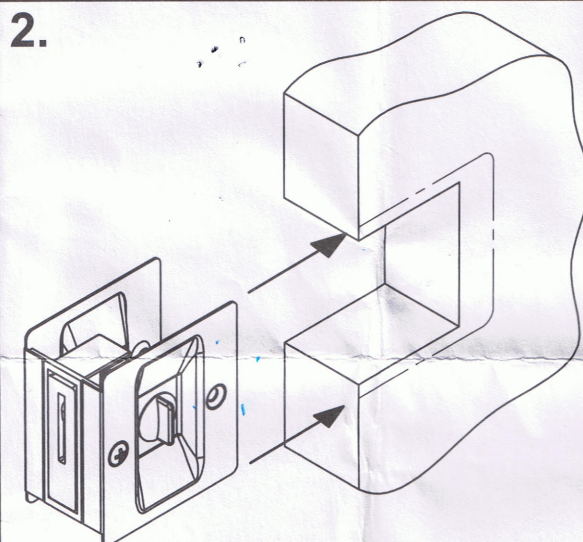


SLIDE THE LATCH INTO PLACE SO THAT THE FRONT FACE OF THE LATCH IS FLUSH WITH THE DOOR EDGE.

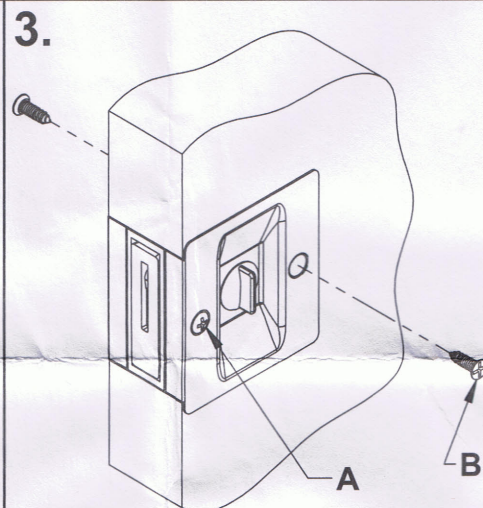


A. TIGHTEN MACHINE SCREWS TO AUTOMATICALLY ALIGN THE PULL ON THE DOOR.
B. INSTALL (2) #6 x 5/8" OPHWS TO THE DOOR.

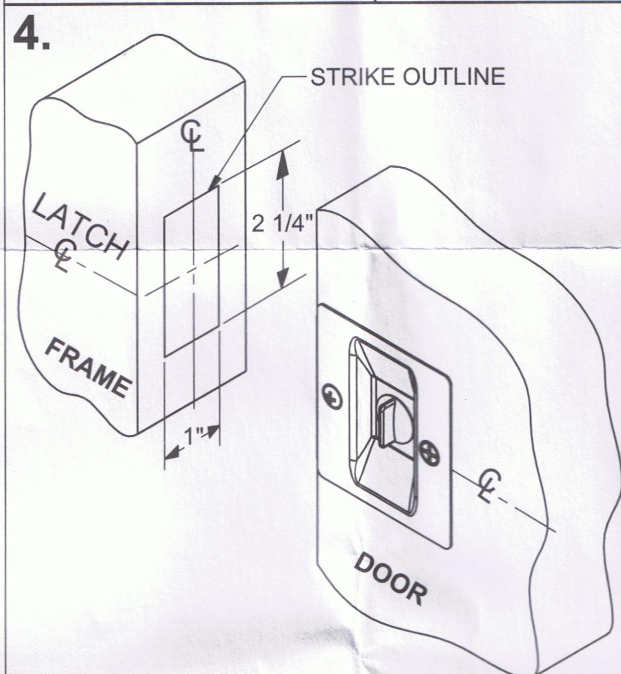

MARK LATCH CENTERLINE ON FRAME SO THE LATCH AND STRIKE LINE UP. USING THE CENTERLINES AS A GUIDE, MARK AROUND THE STRIKE. MORTISE THE STRIKE OUTLINE WITH A CHISEL 3/64" DEEP.

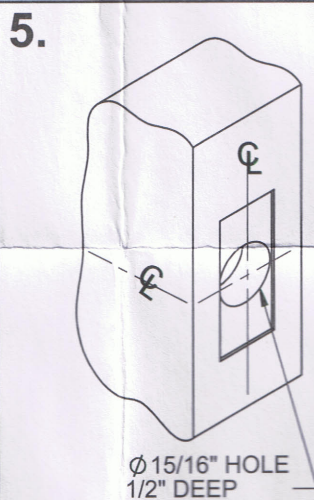

DRILL 15/16" DIAMETER HOLE 1/2" DEEP IN CENTER OF THE MORTISE

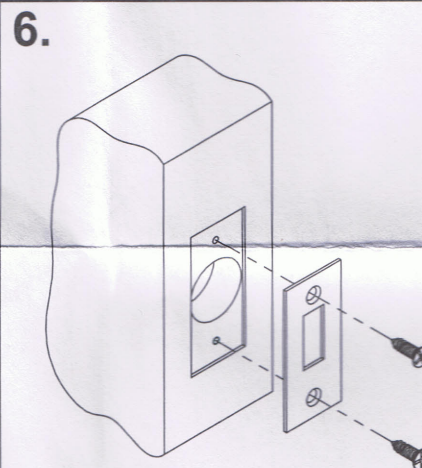

SCREW STRIKE PLATE INTO POSITION USING (2) #6 x 3/4" FPHWS.

WHEN IT IS DESIRABLE TO REVERSE THE PLATES ON THE LOCK ASSEMBLY, FOLLOW THESE STEPS:

1. REMOVE MACHINE SCREW ON EACH SIDE,
2. SWAP POSITIONS OF THE TWO PLATES.
3. MAKING SURE THE TWO FORKS ARE ENGAGED ON THE ROCKER PINS, REASSEMBLE THE PLATES USING THE SCREWS FROM STEP 1.

