


INSTALLATION INSTRUCTIONS

300D - CHAIN DOOR CHECK

NOTE: MOUNTING BRACKETS ARE SURFACE APPLIED TO PUSH SIDE OF DOOR AND INSIDE TOP OF FRAME.

INSTALLATION INSTRUCTIONS:

- 1) OPEN DOOR TO APPROXIMATELY 90°.
- 2) MEASURE 4" IN FROM HINGE SIDE OF FRAME AT TOP OF FRAME TO ESTABLISH CENTERLINE OF FRAME PLATE.
- 3) SPOT MOUNTING HOLES AND MOUNT BRACKET AS SHOWN.
- 4) WITH DOOR OPEN AT 90°, STRETCH CHAIN TO ITS EXTENDED LENGTH, WITHOUT STRETCHING CHECK SPRINGS, AND SPOT DOOR BRACKET MOUNTING HOLES WITH PLATE IN POSITION SHOWN.
- 5) MOUNT DOOR BRACKETS WITH PROVIDED FASTENERS.

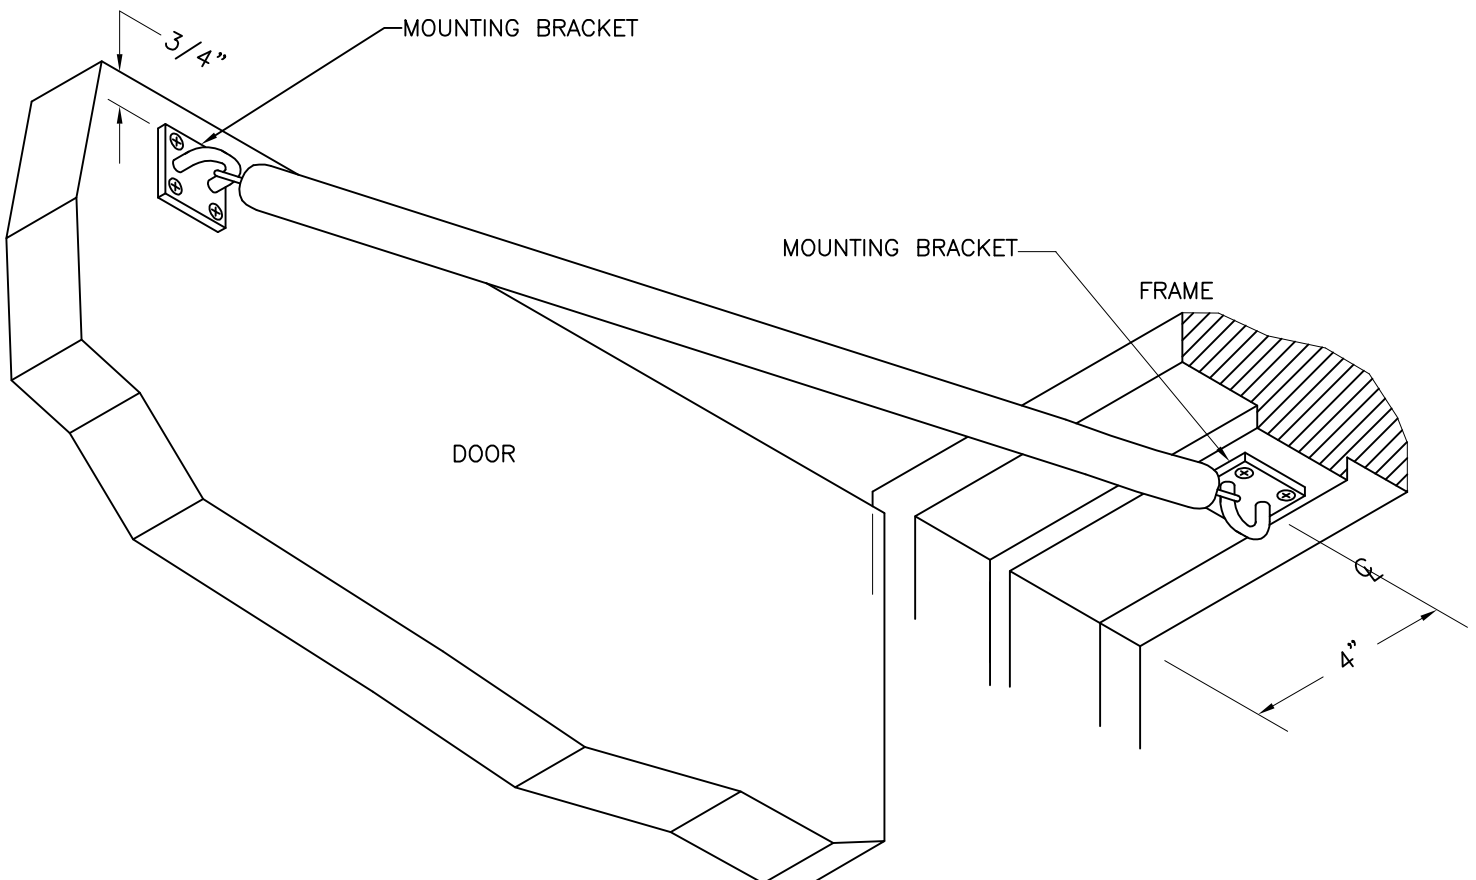


PART NUMBER: 737-0080 REV 2

INSTALLATION INSTRUCTIONS

300D - CHAIN DOOR CHECK

NOTE: MOUNTING BRACKETS ARE SURFACE APPLIED TO PUSH SIDE OF DOOR AND INSIDE TOP OF FRAME.

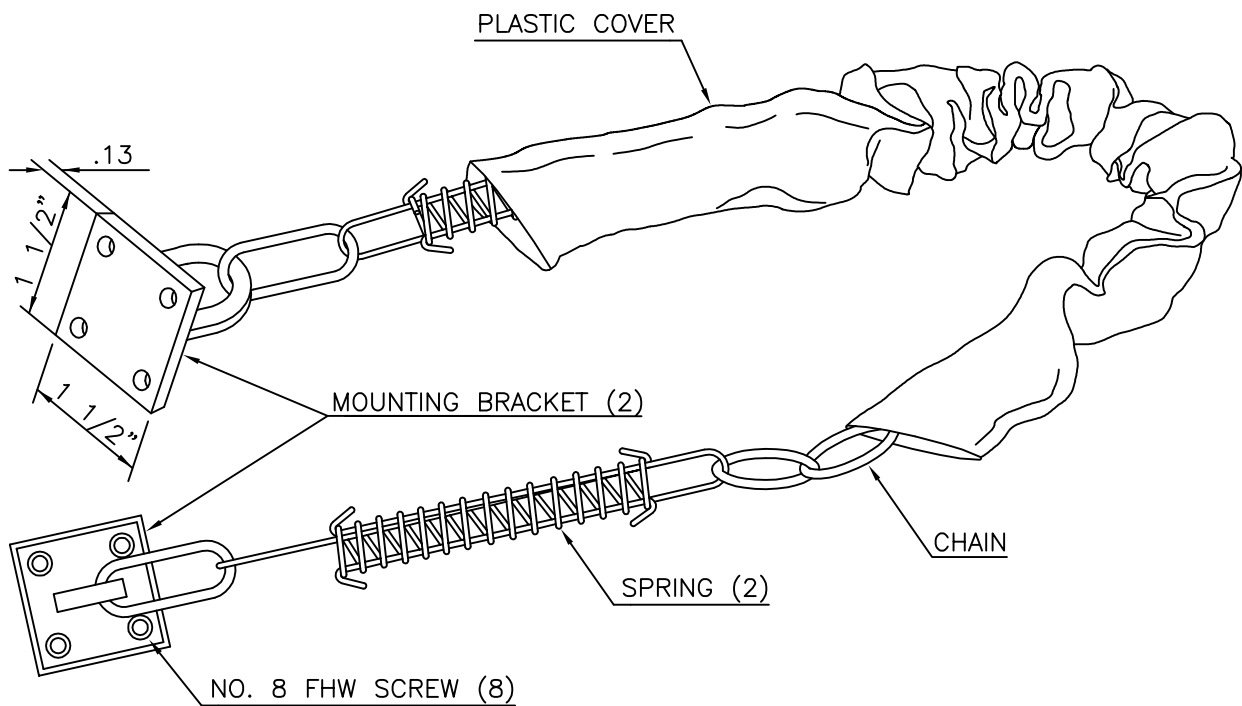

OVERALL LENGTH 25-1/2 OR 30-1/2 INCHES