


# Instructions



## Autosleeve™

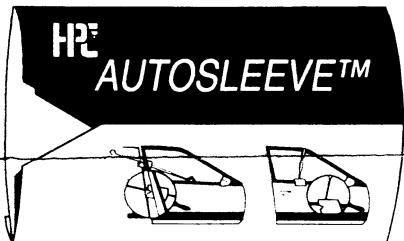

No. AS-1

### Autosleeve features:

- Aid in protecting vehicle finish and weatherstripping when using through-the-car tools
- Aid in separating weather stripping from window glass for wedging
- Aid in inserting wedge between door and frame

#### A. Through-the-Car tools:

1. With the Autosleeve closed, and notch facing the outside of the car, slide the Autosleeve between the weatherstripping and the door. Usually best results are obtained by starting at the upper rear corner of the door.
2. Insert the car opening tool between or inside of the Autosleeve. The notch on one side of the Autosleeve can assist you in separating the two sides.
3. Auto window solvent or dish soap can be applied to the Autosleeve for lubrication.

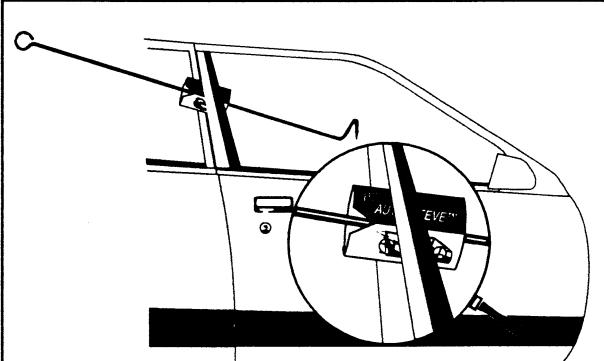


Fig. 1.

#### B. Separating Weatherstripping from glass:

1. Unfold Autosleeve.
2. Using the side without the notch, slide the Autosleeve between the window glass and the weatherstripping. The Autosleeve should be able to penetrate multiple layers of weatherstripping found on many vehicles.
3. Insert wedges or tools.

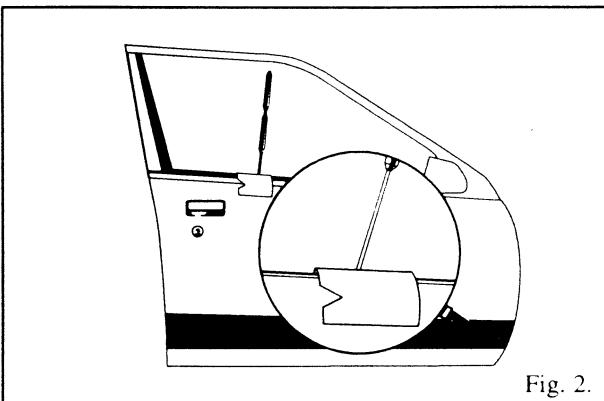


Fig. 2.

082500 35T00-245-00

© 2000 • HPC, Inc. • Schiller Park, IL • 60176 • USA • [www.hpcworld.com](http://www.hpcworld.com)