


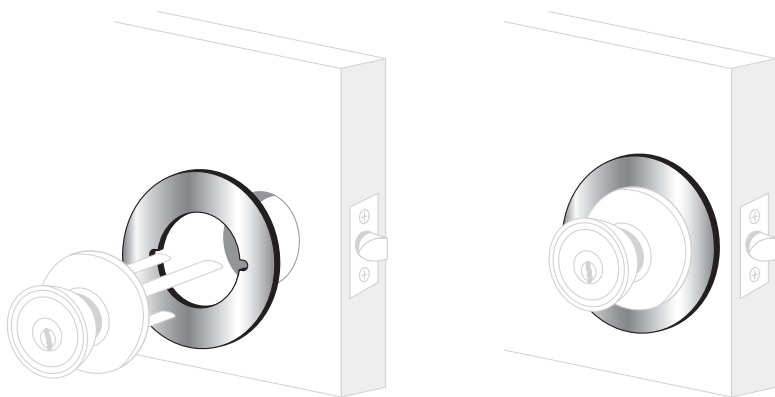

Installation Instructions:

1. Remove the lock from the door.
2. Install the adapter plate between the lock and the door.

Instrucciones de instalación:

1. Remueva la cerradura de la puerta.
2. Instale el adaptador entre la cerradura y la puerta.

Pro-Lok® And Entry Armor™ Are Trademarks Of Weinraub Enterprises, Inc.
© 2009. www.ENTRYARMOR.com

Item # EAP-120-C



6 38246 31134 7



EAP-120-AB

UPC: 638246311323



EAP-120-B

UPC: 638246311330



EAP-120-C

UPC: 638246311347