



OTHER IVES PRODUCTS

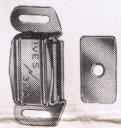

MAGNETIC CATCHES  
AVAILABLE IN

12 lb., 20 lb., 30 lb.,  
40 lb., Pull

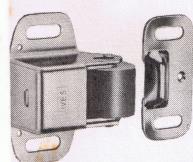

HEAVY DUTY  
ROLLER CATCHES  
FOR WARDROBE AND  
INTERIOR DOORS



Since 1876...

Quality First...  
Service Always


Printed U.S.A.

Form 6889  
AT 470

TEMPLATE  
AND  
DIRECTIONS  
FOR  
INSTALLING

IVES  
PUSH LATCH

No. 820

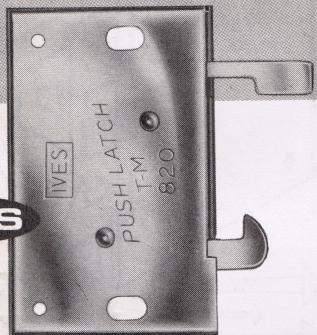

THE H. B. IVES COMPANY  
New Haven, Conn., U.S.A.

IVES PUSH LATCH NO. 820


CAN BE MOUNTED VERTICALLY OR HORIZONTALLY

TO MOUNT LATCH


1. For flush doors (Fig. 1 below), trim template to solid line indicated by arrow on template. For overlay and lip type doors (Fig. 2 and 3 below), trim template to dashed line indicated. To locate mounting screw holes, position paper template on mounting surface with trimmed edge flush with the inside surface of the door when door is in fully closed position.



2. Install "Push Latch" with latch and plunger facing door. Center the screws in the elongated holes and tighten.

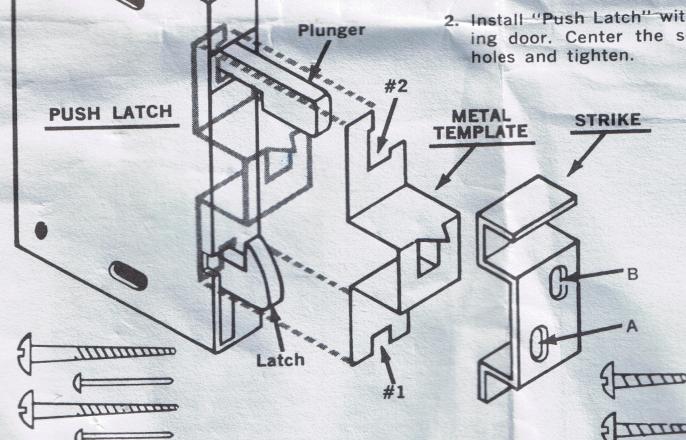

TEMPLATE

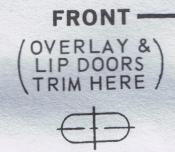

Important: Install in proximity of touch areas.

TO MOUNT STRIKE

1. Apply metal template to face of latch by depressing latch and engaging #2 slot in plunger. Release latch to engage slot #1, as illustrated. Close door and press against template to mark the proper position for screw hole "B" in strike. Open door and remove template.
2. Align strike and apply screw "B" centering in the elongated hole. Apply screw "A".

ADJUSTMENT

1. Check alignment of strike. Be sure latch is fully engaged in the strike (Fig. 4).
2. Adjust "Push Latch" for satisfactory operation.
3. Lock "Push Latch" in place with two escutcheon pins.

