




829678-00

LG1 & LG7


IVES

Lock Guard


Installation Instructions

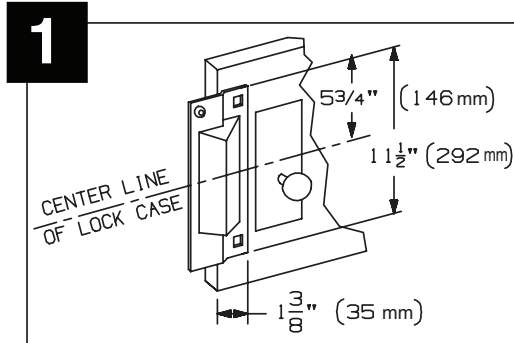


Locate lock guard as shown, making sure to center with the lock case.

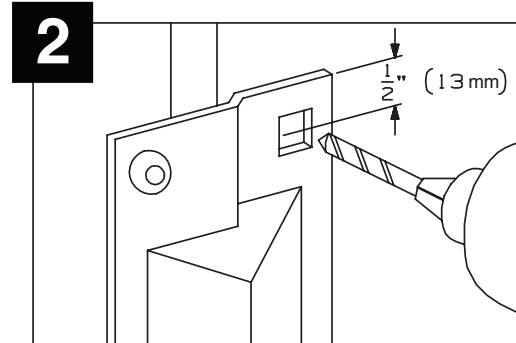


While holding lock guard firmly against door, drill two 5/16" (8mm) diameter mounting holes.

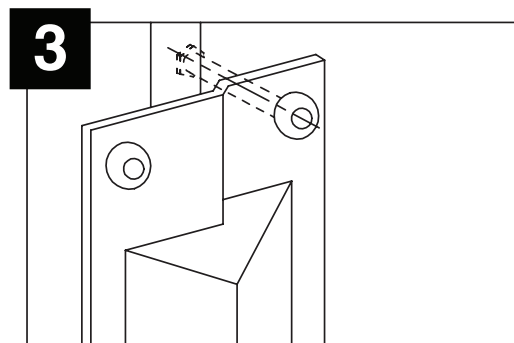

Fasten to door using two supplied carriage bolts and hex nuts.

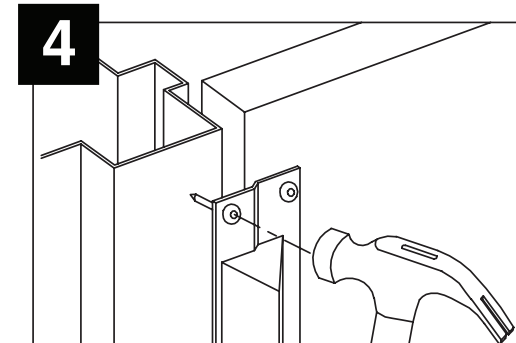

Swing door closed until security pin touches the frame. Mark hole location by hitting head of security pin with hammer.

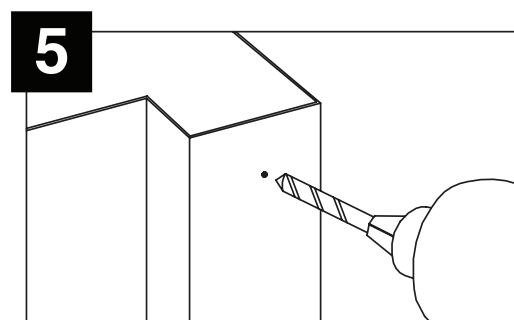

Drill 5/16" (8mm) hole in the frame to accept security pin.

Notes:

1. The dimple depth is 1/2" (13mm).
2. The dimple length is 6-3/4" (171mm).

Qty	Machine Screws
2	5/16" - 18 x 2-1/4" stove bolts
2	5/16" nuts

Customer Service

1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
829678-00 Rev. 01/14-b