


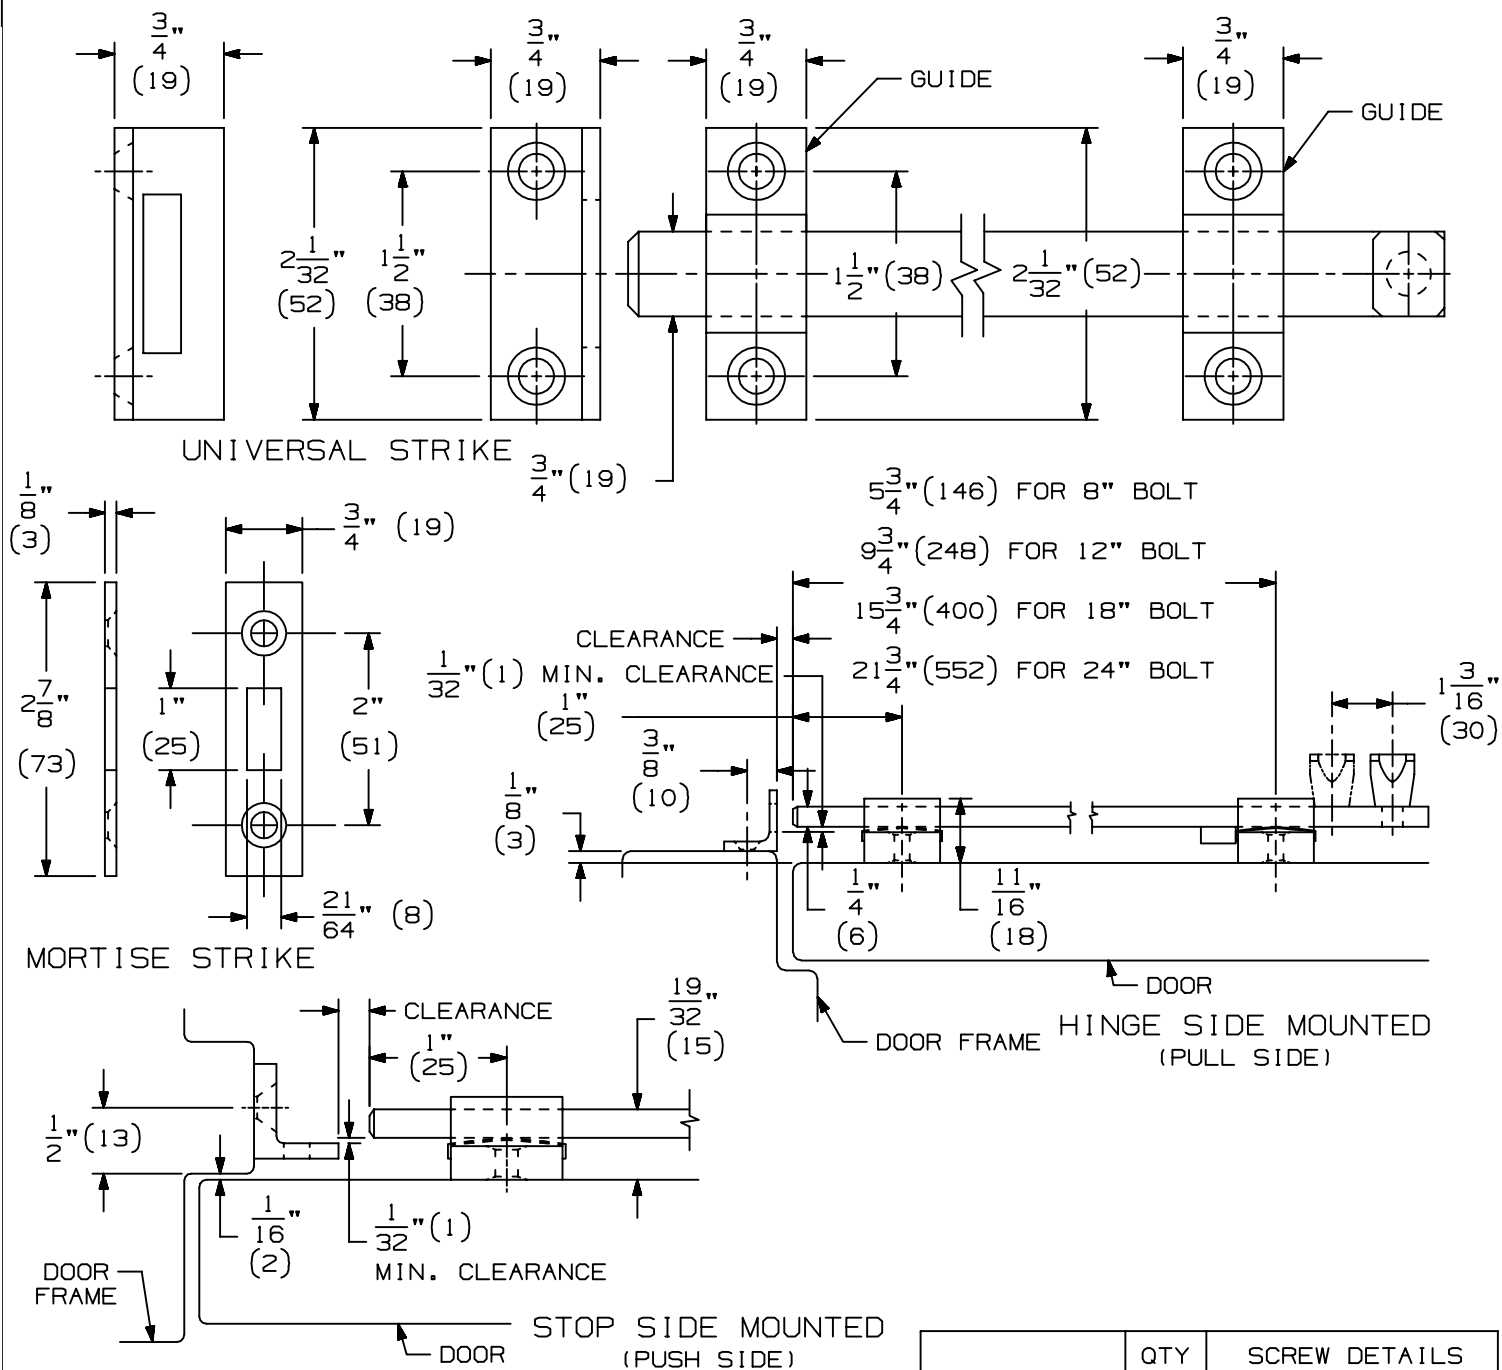

INSTRUCTIONS:

1. DETERMINE SIDE OF DOOR TO WHICH BOLTS ARE TO BE APPLIED.
2. DRILL AND TAP MOUNTING HOLES IN DOOR FOR BOLT.
3. ATTACH BOLT TO DOOR.
4. SELECT EITHER MORTISE STRIKE OR UNIVERSAL STRIKE.
5. ALIGN STRIKE WITH BOLT.
6. PREPARE STRIKE MOUNTING HOLES.
7. ATTACH STRIKE.

NOTE:

1. HOLLOW METAL DOOR & FRAME SHOULD BE PROPERLY REINFORCED WITH 3/16" (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
STRIKE	2	#10 X 1 1/4" FPHSMS
	2	10-24 X 1" FPHMS
BOLT (STANDARD)	4	#10 X 1 1/4" FPHSMS
	4	10-24 X 1" FPHMS
BOLT (THRU BOLT)	4	10-24 X 2 1/4" FPHMS
	4	10-24 CAP NUT
	4	#10 WASHER
BOLT (SEX BOLT)	4	10-24 X 1" FPHMS
	4	SEX BOLTS

IVES

SB453 SURFACE BOLT INSTALLATION TEMPLATE

IR Security & Safety®

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE
NUMBER: INST.SB453_0

DATE:
09/01/01