


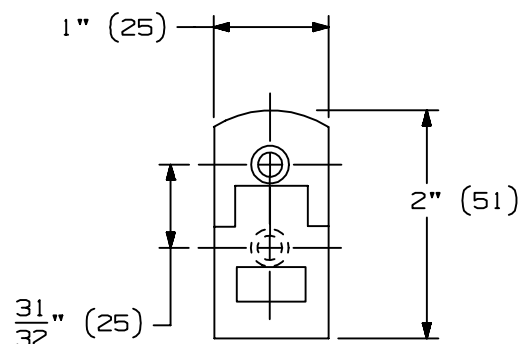


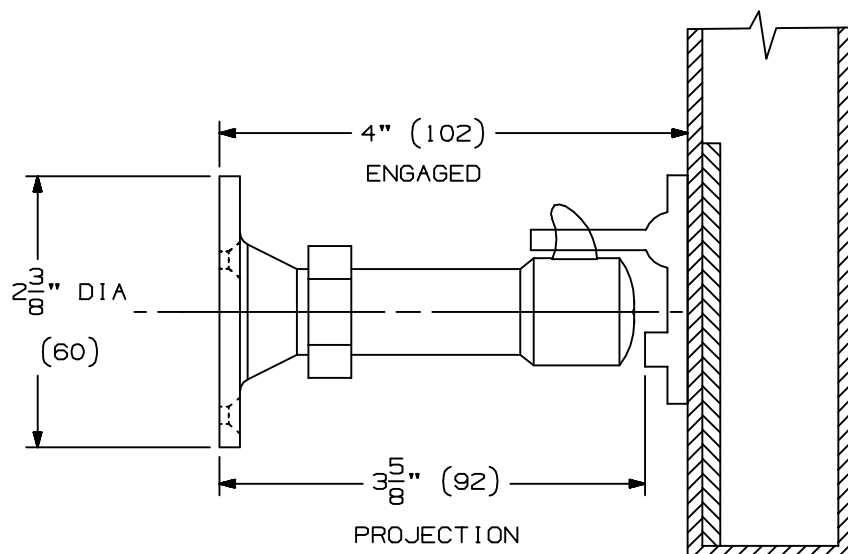

STRIKE

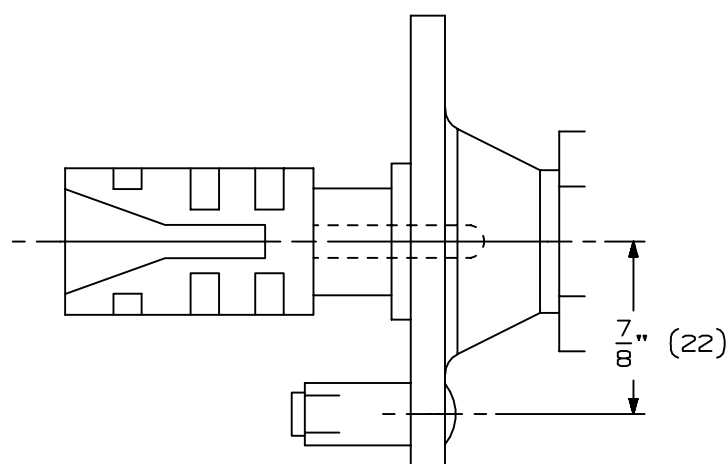

WS20X

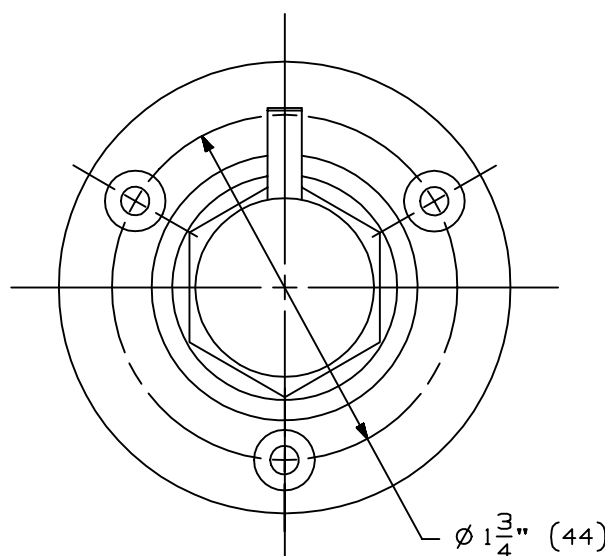

WS20

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED POSITION.
2. PLACE STRIKE AND HOLDER IN DESIRED LOCATION.
3. LOCATE THE MOUNTING HOLES.
4. PREPARE MOUNTING HOLES AS NECESSARY.
5. INSTALL BODY AND STRIKE.

NOTES:

1. METAL DOORS SHOULD BE PROPERLY REINFORCED WITH 3/16" (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
W20 BODY	3	#10 X 1" FPHSMS
	3	PLASTIC EXP SHIELD
W20X BODY	1	5/16" - 18 THREADED STUD
	1	LEAD EXP SHIELD
	1	#10 X 1" FPHSMS
	1	PLASTIC EXP SHIELD
STRIKE	2	#10 X 1" FPHSMS

IVES

WS20 & WS20X MANUAL WALL HOLDER INSTALLATION INSTRUCTION

IR Security & Safety®

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE NUMBER: INST. WS20_0

DATE:
09-01-01