
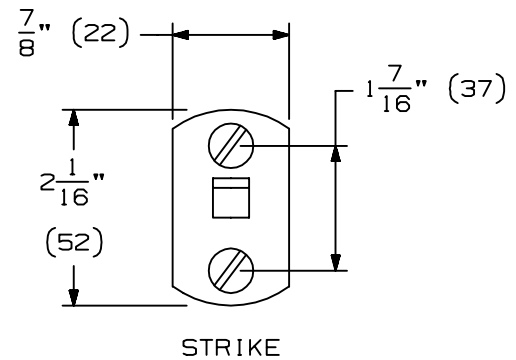
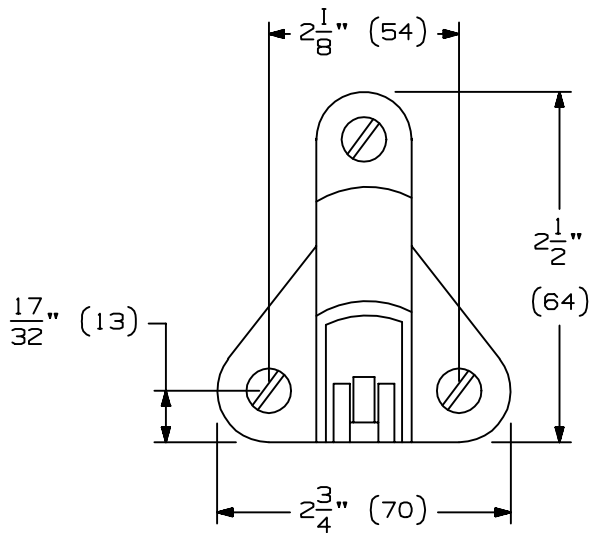


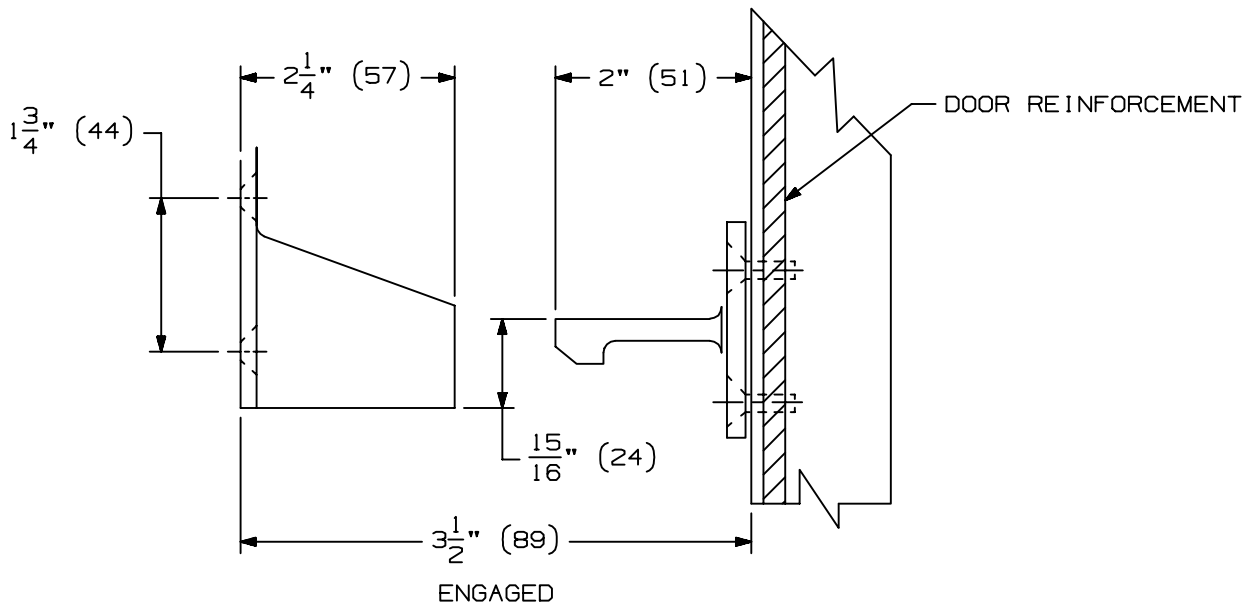

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED POSITION.
2. PLACE STRIKE AND HOLDER AS ILLUSTRATED.
BODY MUST ENGAGE STRIKE SQUARELY.
3. LOCATE MOUNTING HOLES.
4. PREPARE MOUNTING HOLES AS NECESSARY.
5. INSTALL BODY AND STRIKE.

NOTES:

1. METAL DOORS SHOULD BE PROPERLY REINFORCED
WITH $\frac{3}{16}$ " (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
BODY	3	#10 X 1" OPHSMS
	3	#10-24 X $1\frac{1}{4}$ " FPHSMS
STRIKE	2	#10 X 1" OPHSMS
	2	PLASTIC ANCHORS

IVES

WS40 WALL HOLDER INSTALLATION INSTRUCTIONS

IR Security & Safety®

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE
NUMBER: INST.WS40_0

DATE:
09-01-01