

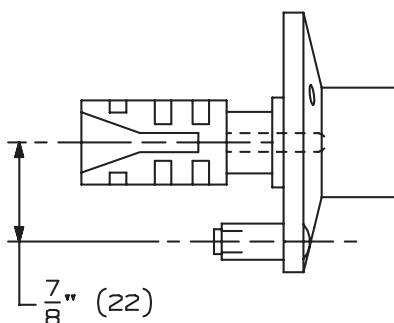
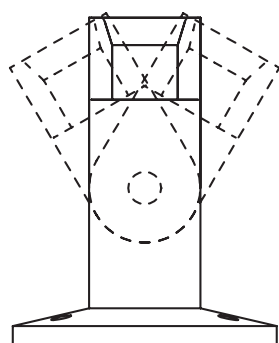
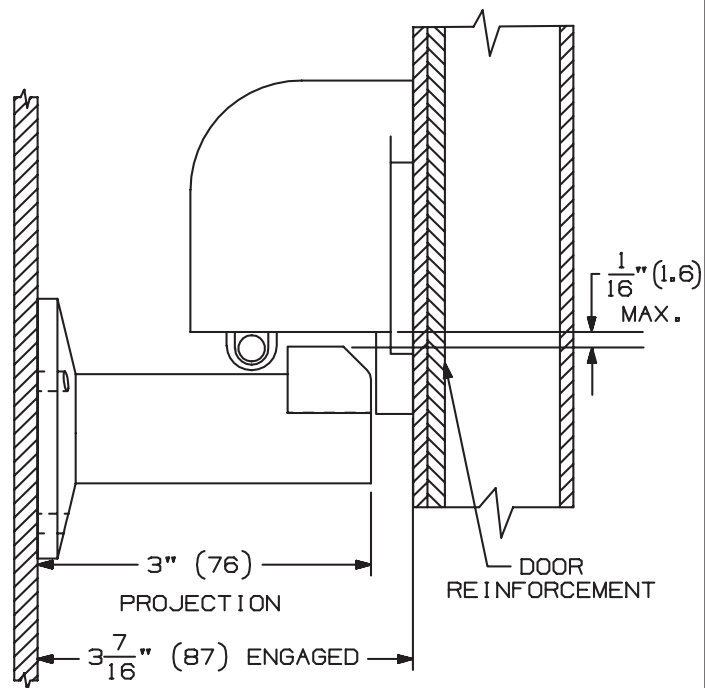


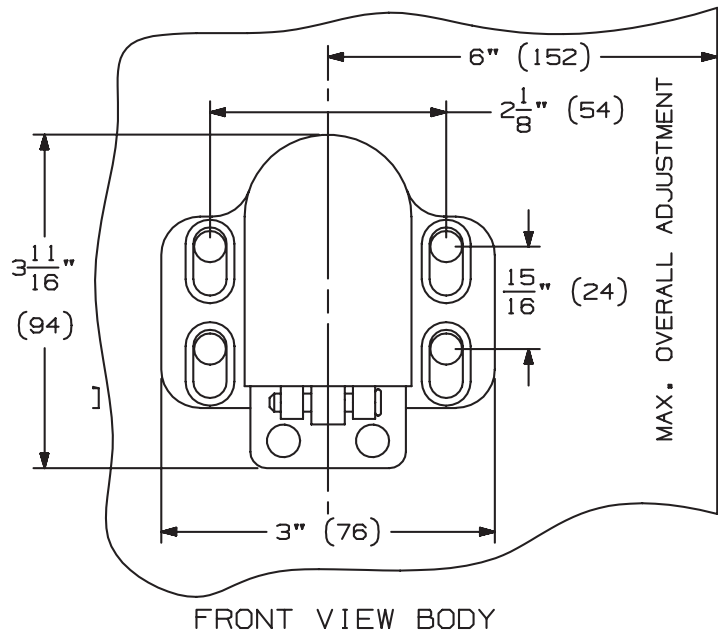

WS45X

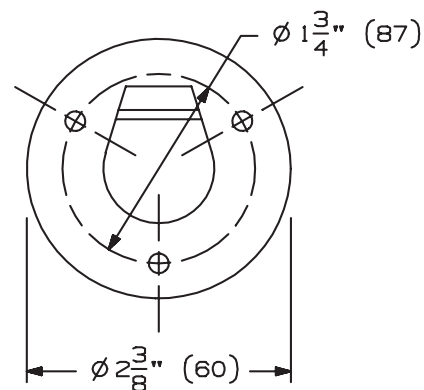

WS45

STRIKE

INSTRUCTIONS:

1. OPEN DOOR TO DESIRED POSITION.
2. PLACE STRIKE ON WALL AND HOLDER BODY ON DOOR AS ILLUSTRATED. ROLLER MUST ENGAGE STRIKE SQUARELY.
3. LOCATE THE MOUNTING HOLES.
4. PREPARE MOUNTING HOLES AS NECESSARY.
5. INSTALL BODY AND STRIKE.

NOTES:

1. METAL DOORS SHOULD BE PROPERLY REINFORCED WITH 3/16" (5) MINIMUM THICKNESS PLATE.

	QTY	SCREW DETAILS
BODY	4	#14 X 1 1/4" TRPHSMS
WS45 STRIKE	3	#10 X 1" FPHSMS
	3	PLASTIC EXP SHIELD
WS45X STRIKE	1	5/16" THREADED STUD
	1	LEAD EXP SHIELD
	1	#10 X 1" FPHSMS
	1	PLASTIC EXP SHIELD

IVES

WS45 & WS45X AUTOMATIC WALL HOLDER INSTALLATION INSTRUCTION

IR Ingersoll Rand
Security Technologies

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE NUMBER: INST. WS45_1

DATE: 10-11-06