


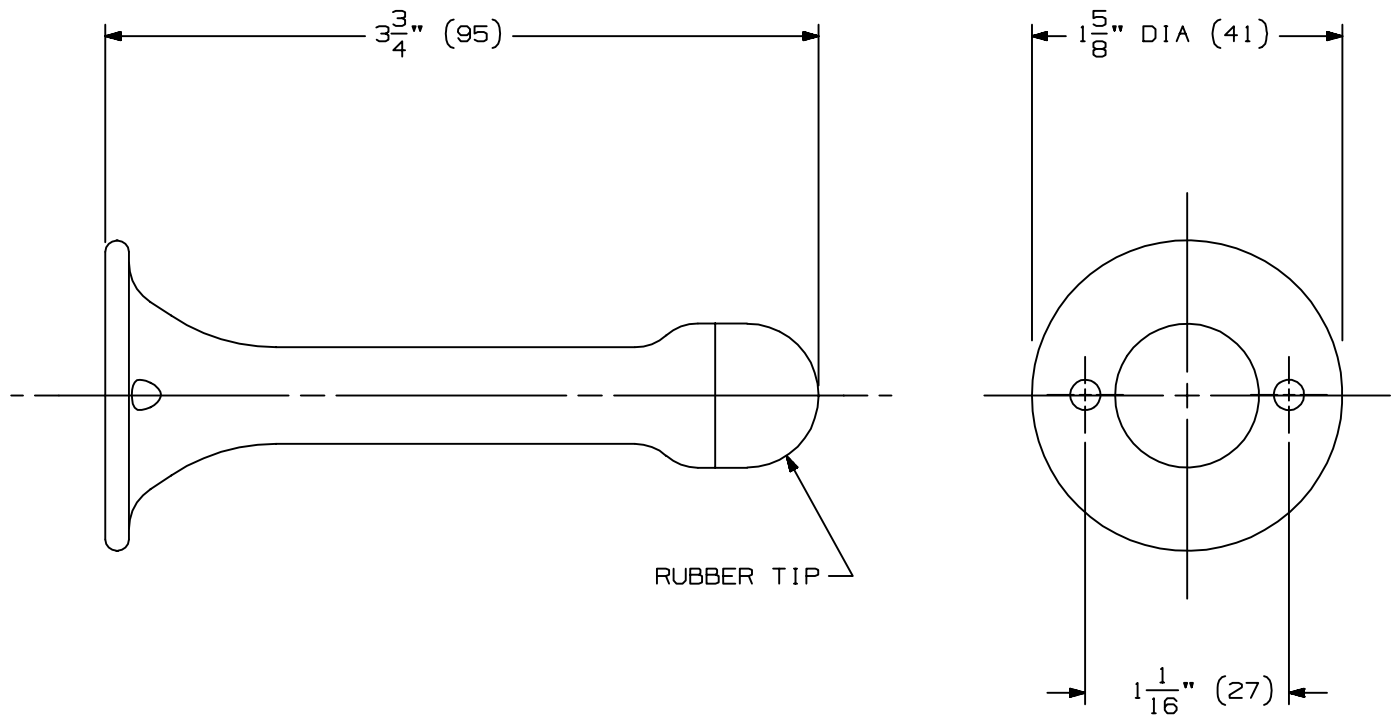

INSTRUCTIONS:

1. PLACE HOLDER ON WALL AND LOCATE THE MOUNTING HOLES.
2. PREPARE MOUNTING HOLES.
3. INSTALL HOLDER.

QTY	SCREW DETAIL
2	#10 X 3/4 OPHSMS

IVES

WS65 WALL BUMPER INSTALLATION INSTRUCTIONS

IR Security & Safety®

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

TEMPLATE NUMBER: INST. WS65_0

DATE:
09-01-01