

USAGE: 1085,2085,2086,
 $\triangle$ 3185B&3186,1285,1206



ADJUSTMENT INSTRUCTIONS.

- $\triangle$ B PLACE ADJUSTMENT WRENCH ONTO
BOLT. TURN WRENCH CLOCKWISE
 $\triangle$ C TO RETRACT BOLT-COUNTERCLOCKWISE
TO EXTEND BOLT.

NOTE:

TOP BOLT GUIDE ASSY USED
WITH THE FOLLOWING:

1085,1285,1206,2086 & 3186

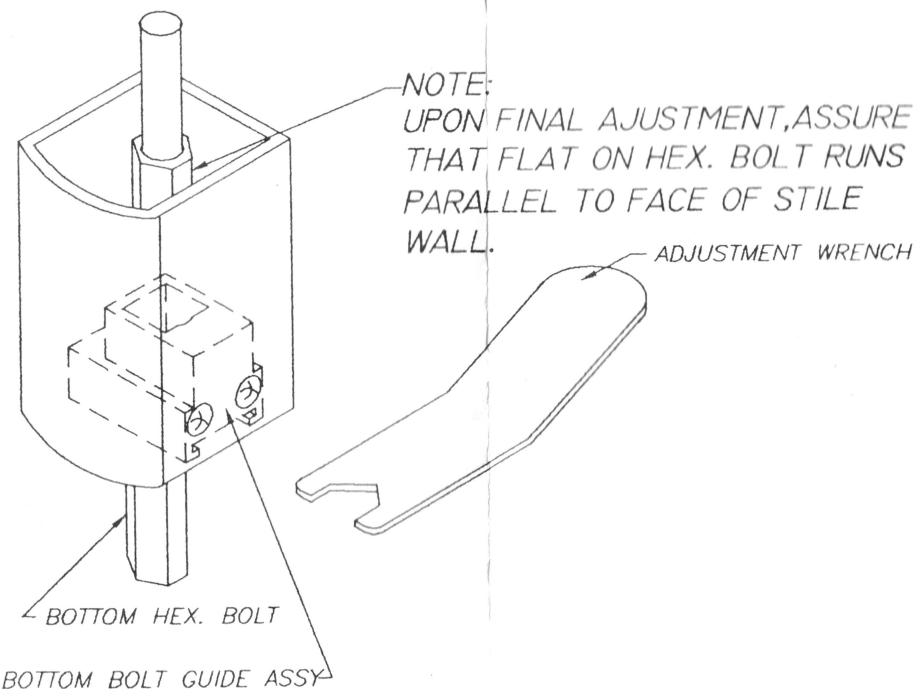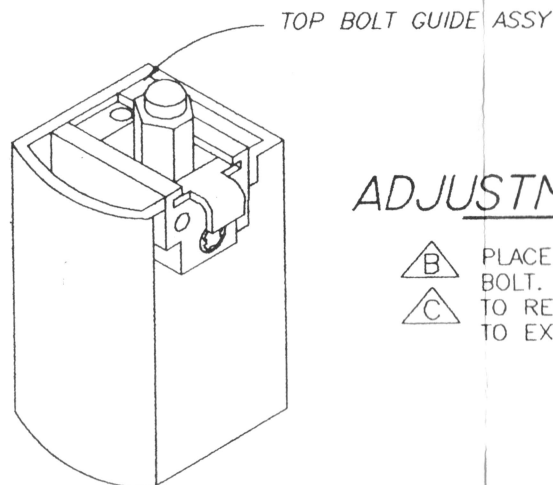

D 11/05/05	UPDATE MODEL USAGE: ADD 1285	ECN1873	RM
C 11/3/97	REVISE ADJ. INSTRUCTIONS	ECN1116	RM
B 1/5/95	REVISE ADJ. INSTRUCTIONS	ECN982	RM
DIMENSIONAL TOLERANCES UNLESS OTHERWISE SPECIFIED DECIMAL DIMENSIONS JOX $\pm .010$ DECIMAL DIMENSIONS JOX $\pm .005$ ANGULAR $\pm$ $^{\circ}$ FRACTIONAL $\pm 1/64$		APPROVALS APPROVED <i>JE</i> 11/4/96 CHECKED DRAWN R.M. 11/4/95	DATE 11/4/96
FILE NO.	MATERIAL	SCALE	NONE
NEXT ASSY.	FINISH	ADJUSTMENT INSTRUCTIONS	
QTY. USED	HEAT TREAT	TOP & BTM BOLT GUIDE ASSY	SHEET 1 OF 1 SHEETS DWG. NO. 10-860 REV. D

Jackson
CORPORATION

3447 UNION PACIFIC AVE.
LOS ANGELES, CALIF. 90023