


PERMANENT CLOSER TEMPLATE INSTRUCTIONS

CLOSER BODY

For **MAXIMUM** Degree shown on Template....

FLUSH Template with **TOP** of Door and **EDGE** of DOOR at the **HINGE SIDE**.

Use Pencil or Automatic Centerpunch to **MARK** the (4) Holes for the CLOSER.

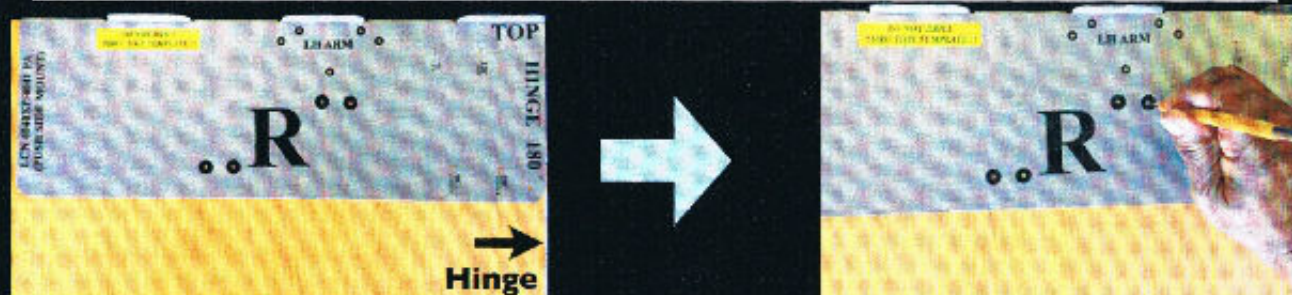

For **ALL OTHER DEGREES** shown on Template....

FLUSH Template with **TOP** of Door and **EDGE** of Door at **HINGE SIDE** then use Pencil to **MARK the DEGREE you desire**. **SLIDE the EDGE** of Template over to the MARK you made then Mark the (4) Holes for CLOSER.




PERMANENT CLOSER TEMPLATE INSTRUCTIONS

CLOSER ARM

For **MAXIMUM** DEGREE shown on Template....

FLUSH Template with **STOP** on Frame at **HINGE SIDE** then use Pencil to **MARK** the Holes for the CLOSER ARM.

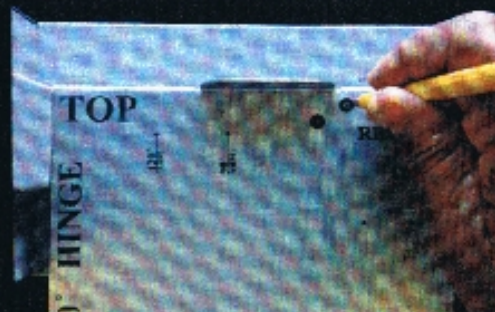

For **ALL OTHER DEGREES** shown on Template....

FLUSH Template with **STOP** on Frame at **HINGE SIDE** then use Pencil to **MARK the DEGREE you desire**. **SLIDE** the **EDGE** of Template over to the **MARK** you made then Mark the Holes for CLOSER ARM.

