


INSTRUCTIONS FOR INSTALLATION OF JIMMYPROOF DEADBOLT LOCK

Model Nos. 530/535

READ INSTRUCTIONS CAREFULLY: Every installation is unique. Before starting, please check to insure that the procedures recommended will not damage the door, window, frame etc. upon which this product is to be used. Kaba Ilco is not responsible for damage caused by installation.


1. Apply appropriate template (see reverse side) to inside of door and punch to mark the four (4) screw holes and the cylinder hole. Next drill 1 1/4" (32mm) dia. hole partially through the door. Stop when the point of the hole saw breaks through. Drill through from the outside (to avoid splintering). Drill the four (4) 1/8" (3mm) dia. pilot holes 3/4" (19mm) deep.
2. Place cylinder in cylinder ring and insert into the 1 1/4" (32mm) dia. hole from outside of door. Position keyhole to bottom (see sketch).

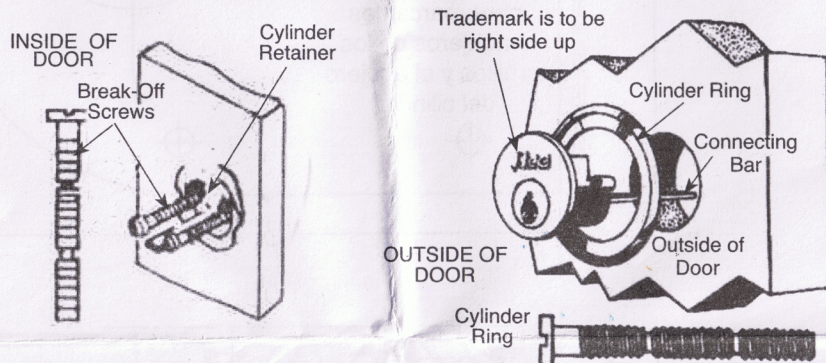

3. Place Backplate over connecting bar and attach to cylinder using two (2) break-off screws provided which are for 2 1/4" (57mm) doors; for thinner doors screws should be cut to proper length, depending on thickness of door (screws are provided with break-off points). **IMPORTANT:** Line up backplate 1/8" (3mm) from edge of door (see sketch above). Break off connecting bar so that it extends 1/2" (13mm) max. beyond face of backplate. Connecting bar is provided with break-off points.

IMPORTANT: Follow illustration below to shorten connecting bar.


4. Set bolt in unlocked position and place lock on connecting bar. Attach lock to inside of door using four (4) long wood screws provided. Check to see that the lock is working properly from both inside and outside.
5. Apply strike to door jamb in line with lock, (see sketch to the right) mortise (recess) strike to door jamb if necessary, then attach into jamb with the seven (7) short wood screws provided.

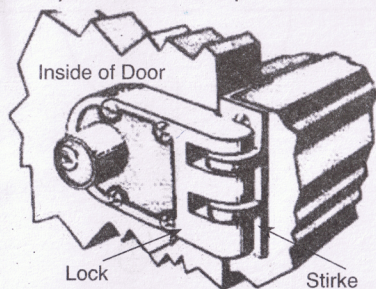


A Member of the Kaba Group
Kaba Ilco Corp.
Rocky Mount, NC 27804
www.ilco.us

FOR DOORS OPENING IN - APPLY TEMPLATE ON INSIDE OF DOOR

Template for Left Hand Application

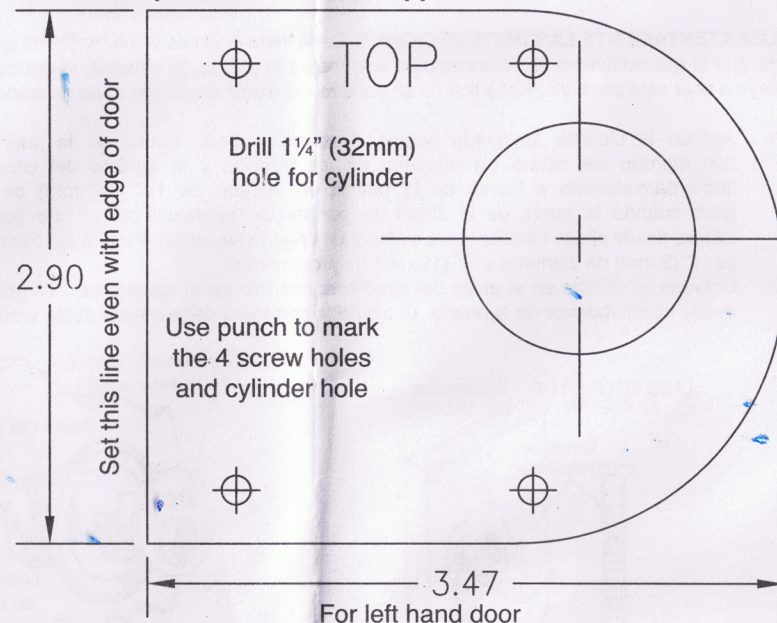

Template for Right Hand Application

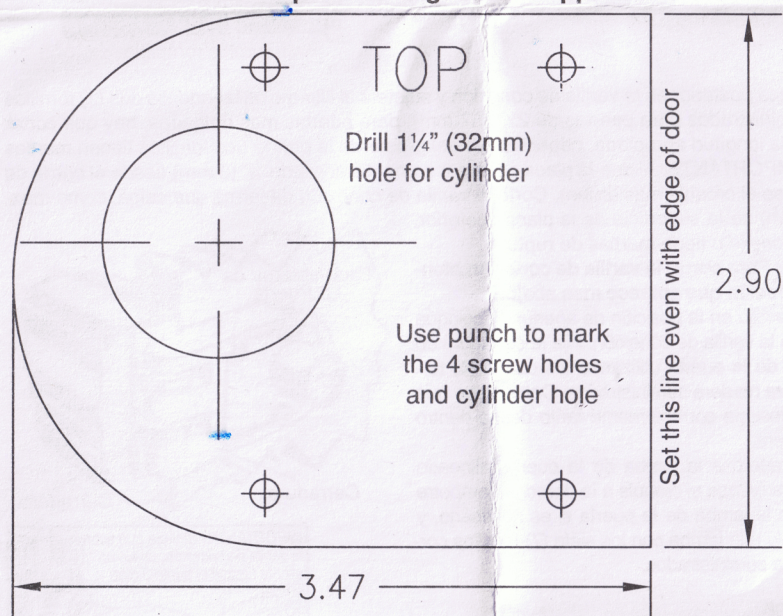

IMPORTANT: FOR DOUBLE CYLINDER 535 LOCK, KEEP AN EXTRA KEY INSIDE NEAR DOOR. IN AN EMERGENCY, KEY IS NEEDED TO UNLOCK.

LOCK INSTALLATION WITHOUT OUTSIDE CYLINDER - Under certain circumstances this lock may be installed without the outside cylinder. In this event DO NOT drill 1 1/4" (32mm) hole for cylinder.