



ARCHITECTS CLASSIC HARDWARE

PUSH/PULL INSTALLATION INSTRUCTIONS

SINGLE ACTING

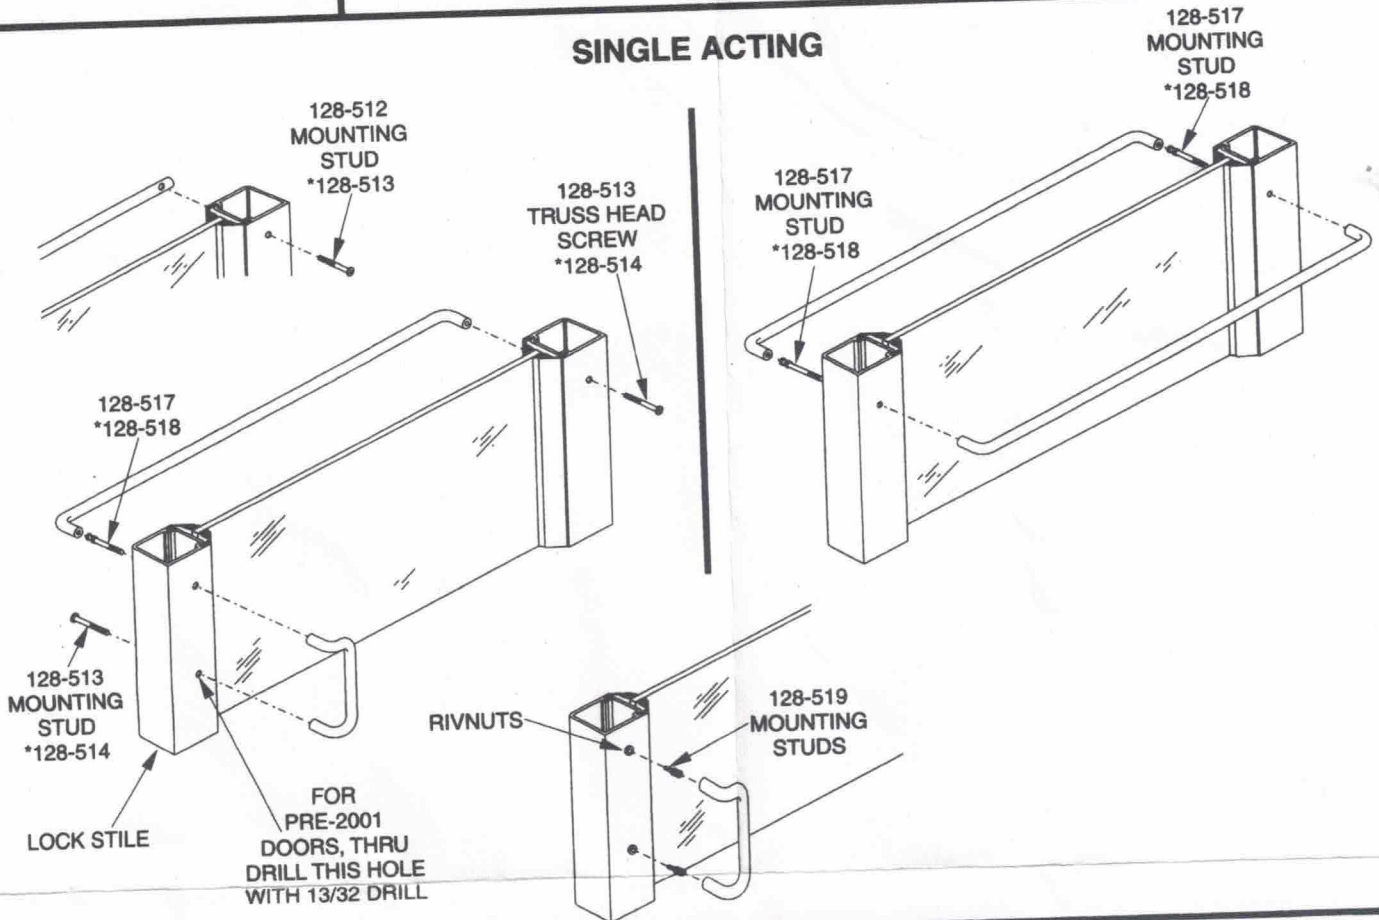

DOUBLE ACTING

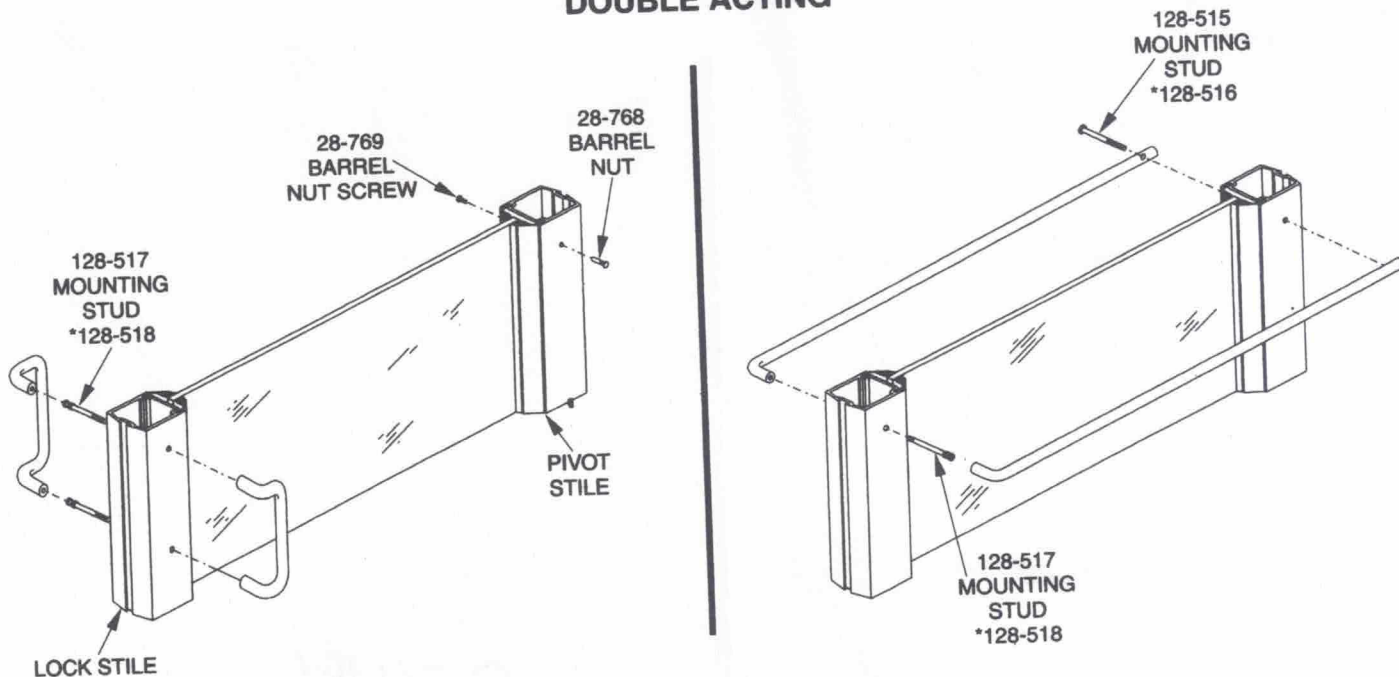

1. Thread thru bolt stud on lock stile pull handle (top & btm)
2. Place push/pull bar over stud
3. Install truss head screw in push bar at pivot stile
4. Tighten set screws while pushing hardware tight against face of door
5. Tighten pivot stile fastener

*USED ON INSULCLAD & ENTARA