


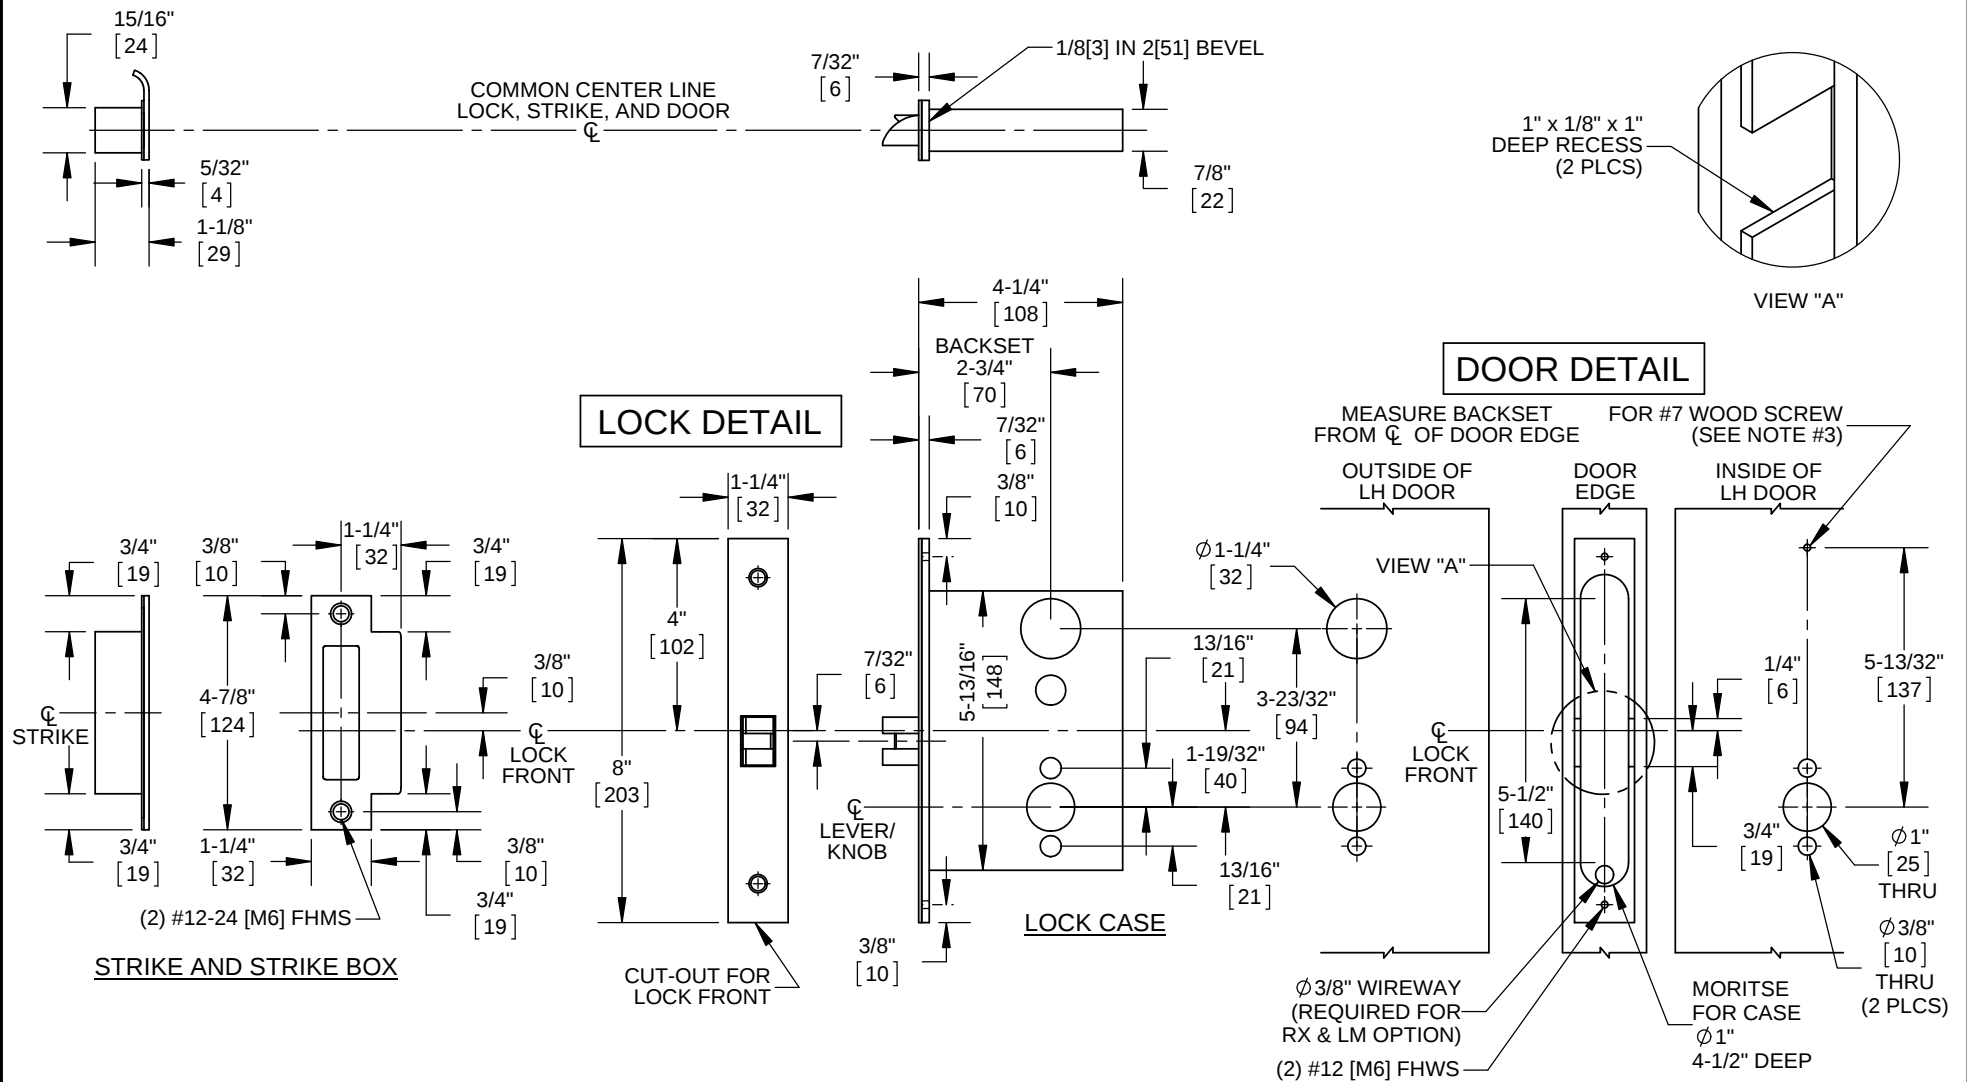

NOTES:

1. DIMENSIONS ARE IN INCHES/[MM].
2. DO NOT SCALE DRAWING.
3. FOR TOP MOUNTING HOLE OF M ESCUTCHEON, USE TRIM TO LOCATE AND SECURE WITH SCREW PROVIDED.


DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

WOOD DOORS - A&B Rose Trim, M Escutcheon Trim

M9050, M9070, M9076, M9080
M9050RX, M9050LM, M9050RXLM
M9070LM
M9080RX, M9080LM, M9080RXLM



DORMA Architectural Hardware
Reamstown, PA 17567

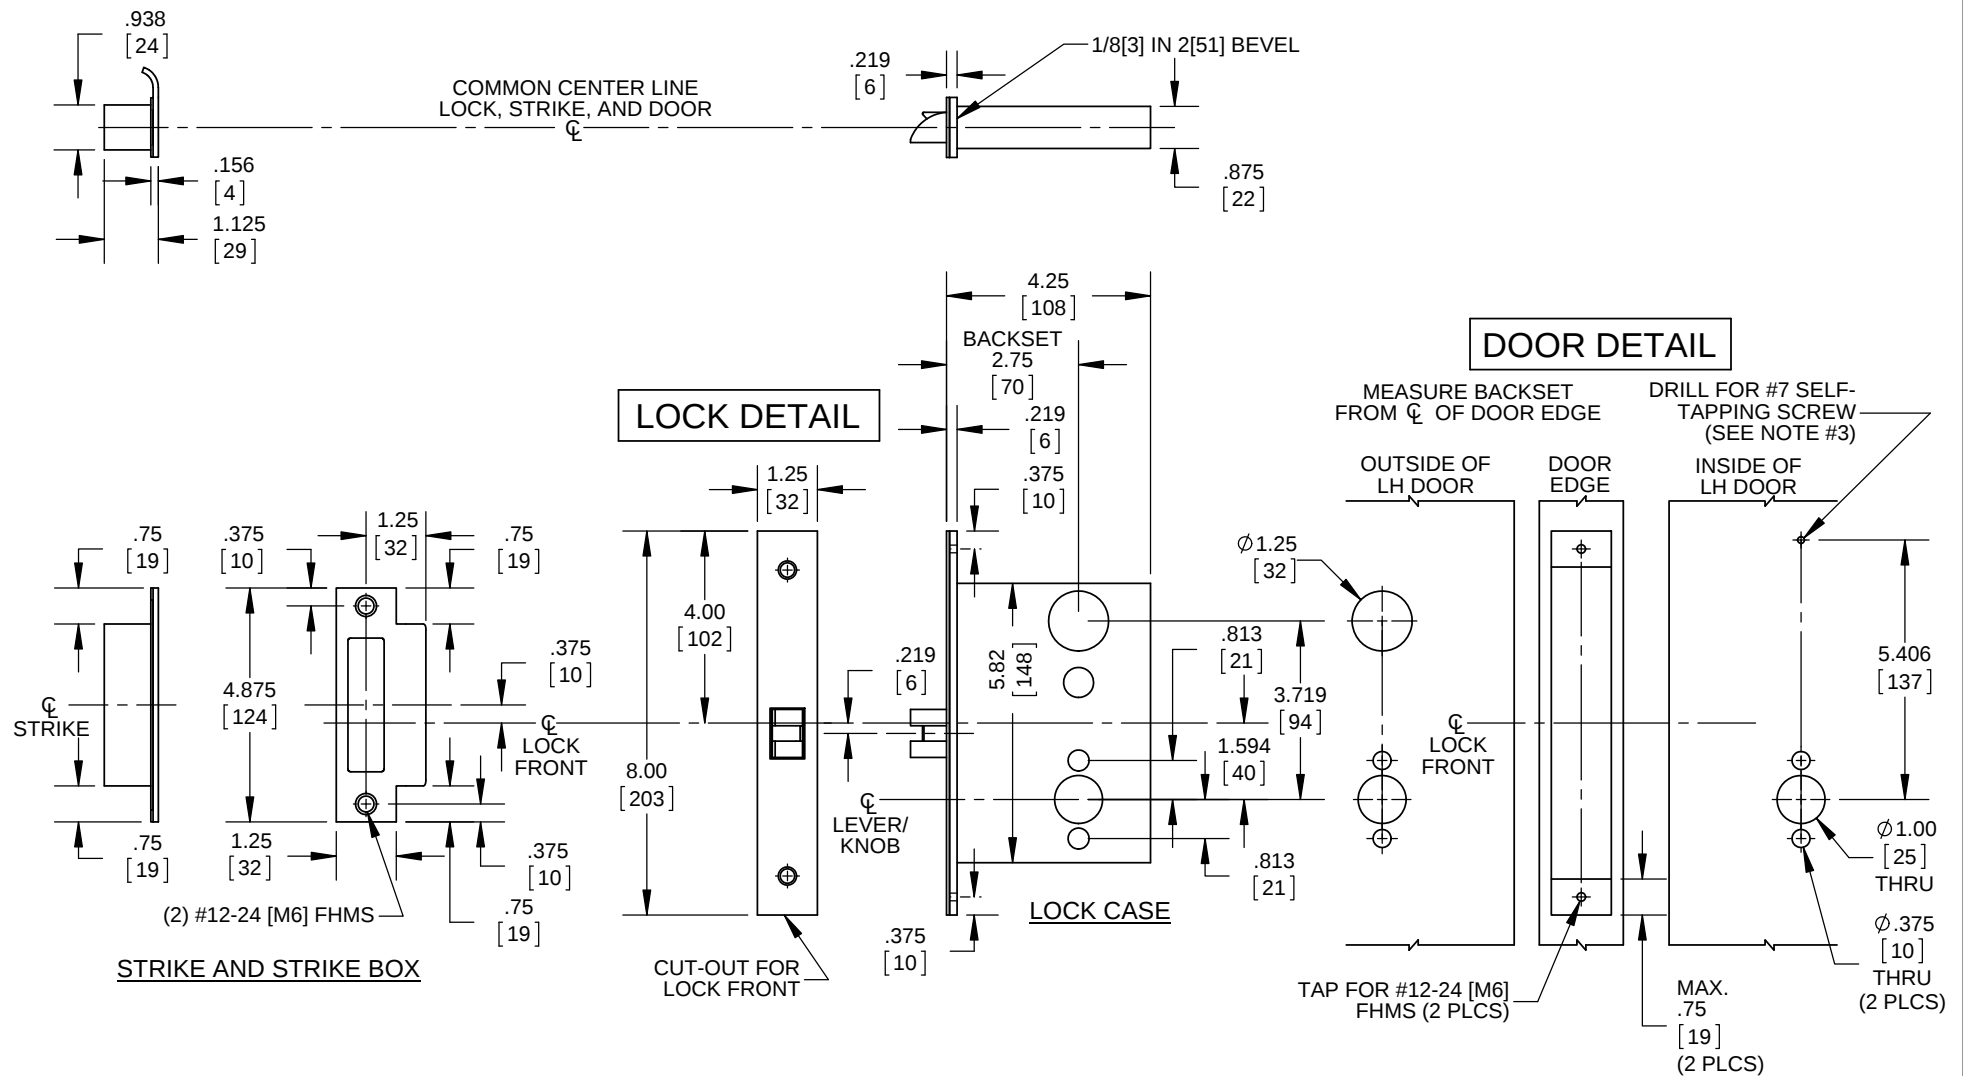

NOTES:

1. DIMENSIONS ARE IN INCHES/[MM].
2. DO NOT SCALE DRAWING.
3. FOR TOP MOUNTING HOLE OF M ESCUTCHEON, USE TRIM TO LOCATE AND SECURE WITH SCREW PROVIDED.

DOOR CUT-OUTS AS INDICATED UNDER DOOR DETAIL.
FRAME FOR STRIKE SHOWN UNDER LOCK DETAIL.

STEEL DOORS - A&B Rose Trim, M Escutcheon Trim

M9050, M9070, M9076, M9080
M9050RX, M9050LM, M9050RXLM
M9070LM
M9080RX, M9080LM, M9080RXLM



DORMA Architectural Hardware
Reamstown, PA 17567