

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":






INSTALLATION TEMPLATE CONFINDANT LOCK



1950 AUSTIN, TROY, MI 48063
(248)-680-8484 FAX: (248)-680-8468

INSTALLATION INSTRUCTIONS

1. DOOR PREP - DRILL 2 1/8 AND 5/16 HOLES IN THE DOOR. IN THE DOOR EDGE DRILL A 1 INCH HOLES INTO THE 2 1/8 BORE AND THEN MORTISE OUT THE 2 1/4 X 1 1/8 RECTANGLE .150 DEEP OR UNTIL FLUSH
2. DETERMINE THE HAND OF THE DOOR AND ROTATE THE SPINDLE ACCORDINGLY
3. MOUNT THE LATCH IN THE DOOR EDGE AND THEN MOUNT THE TRIM TO THE DOOR
4. DETERMINE CENTER OF LATCH AND DRILL A 1 INCH DIA HOLE 5/8 DEEP; THEN MORTISE IN STRIKE WITH THE FLAT IN THE APPROPRIATE DISTANCE FROM THE JAMB STOP THEN INSTALL THE STRIKE ON THE JAMB
5. VERIFY THE LOCK FUNCTION BEFORE CLOSING THE DOOR

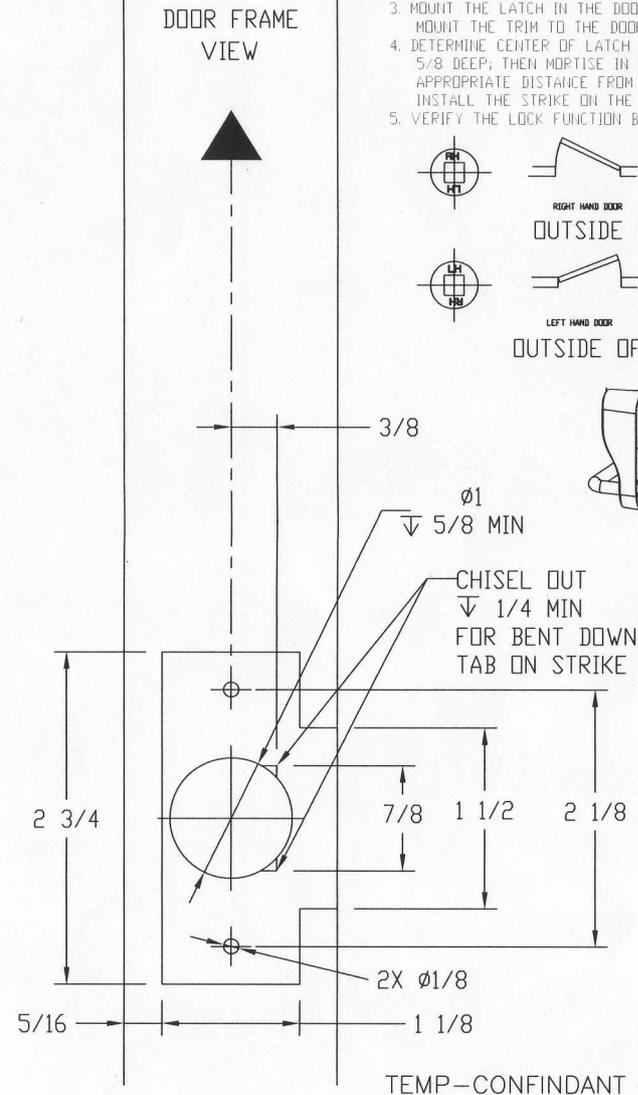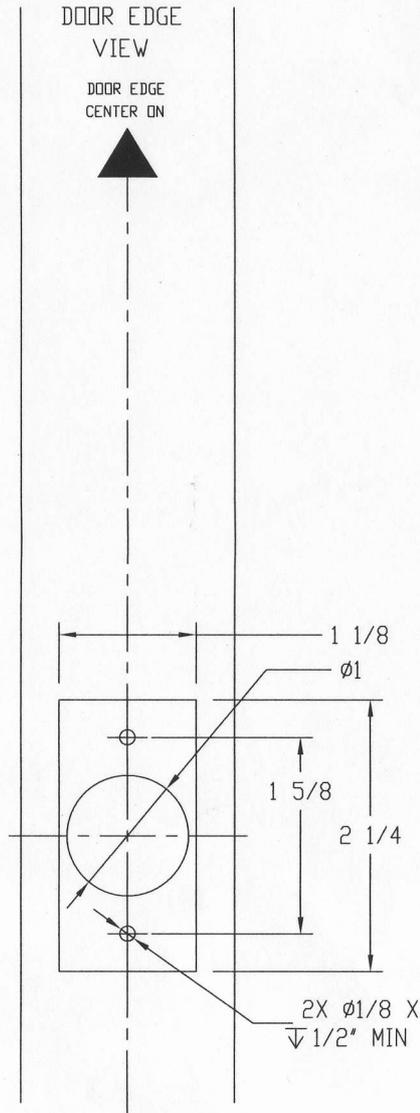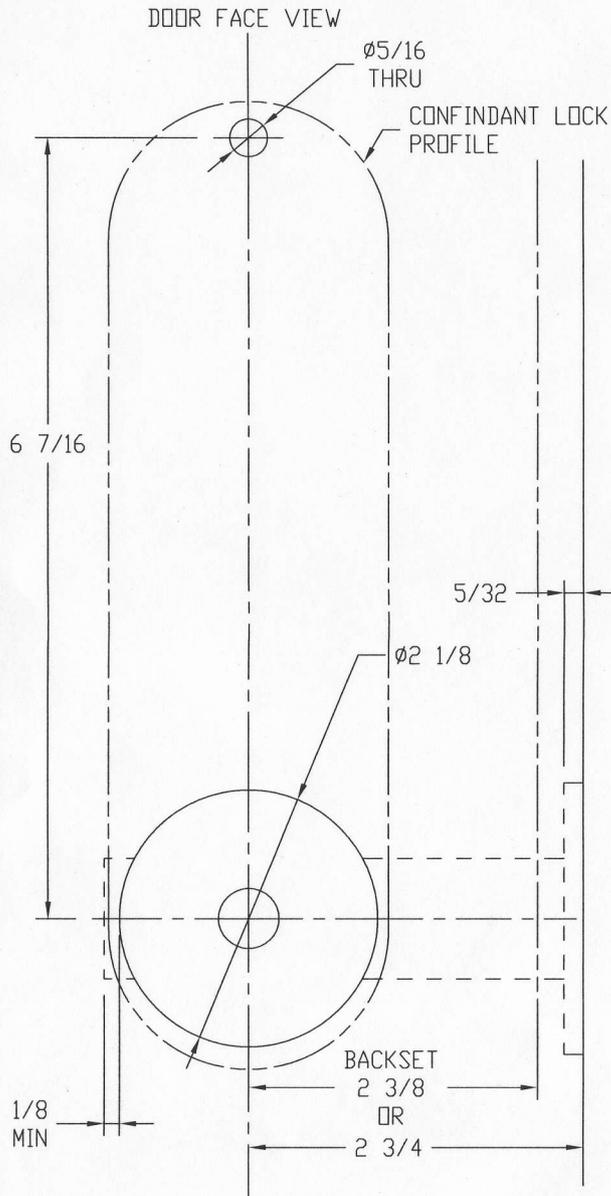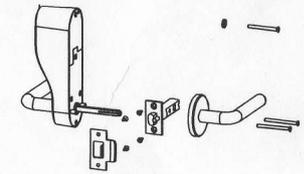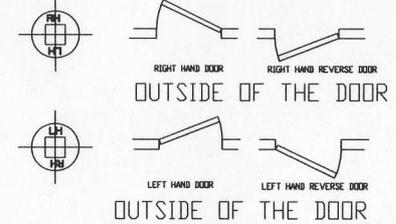

TEMP-CONFINDANT DATE: 10/03/05