
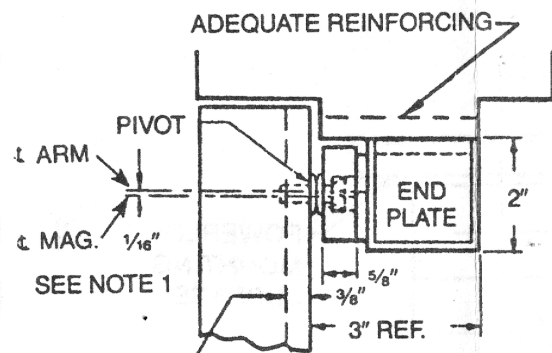
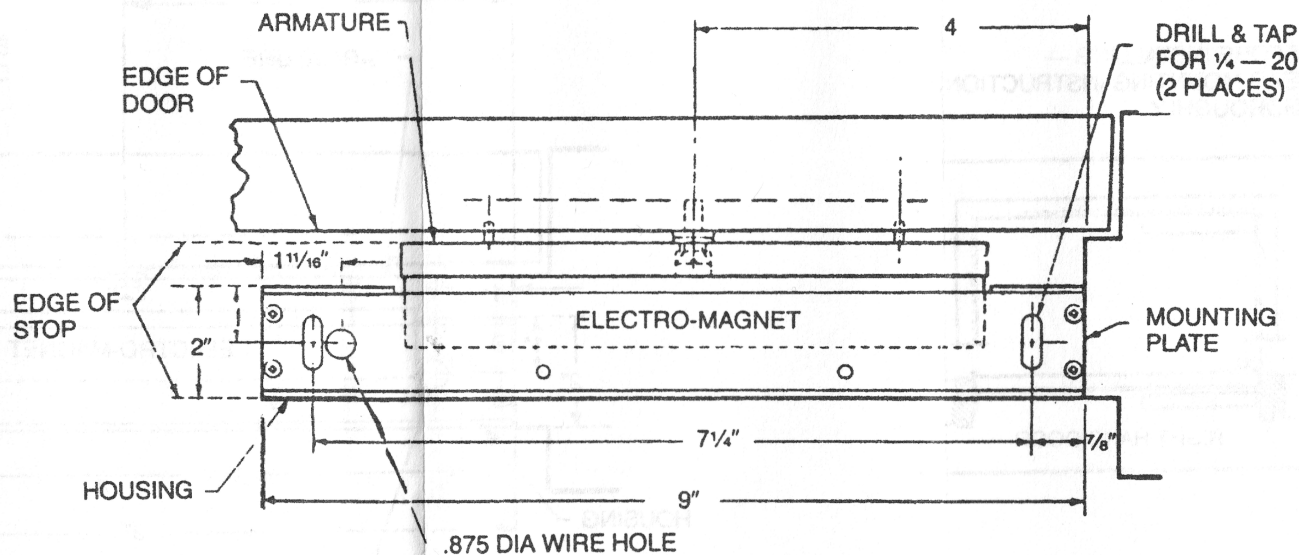


BEFORE INSTALLING —
READ MOUNTING INSTRUCTIONS
THOROUGHLY

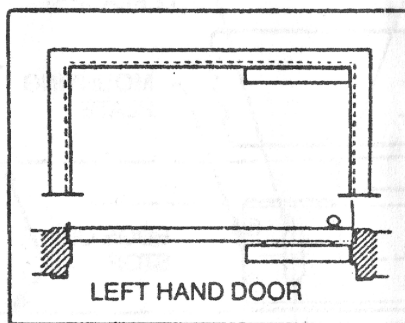


STRUCTURE
& REINFORCE.
SEE NOTE 2

NOTE:

1. ARMATURE MUST BE ABOVE THE MAGNET
2. FOR DIRECT MACHINE SCREW MOUNTING
REINFORCING & STRUCTURING REQUIRED
TO WITHSTAND 800 LB LOAD

POWERLOCK
MOUNTING
SURFACE

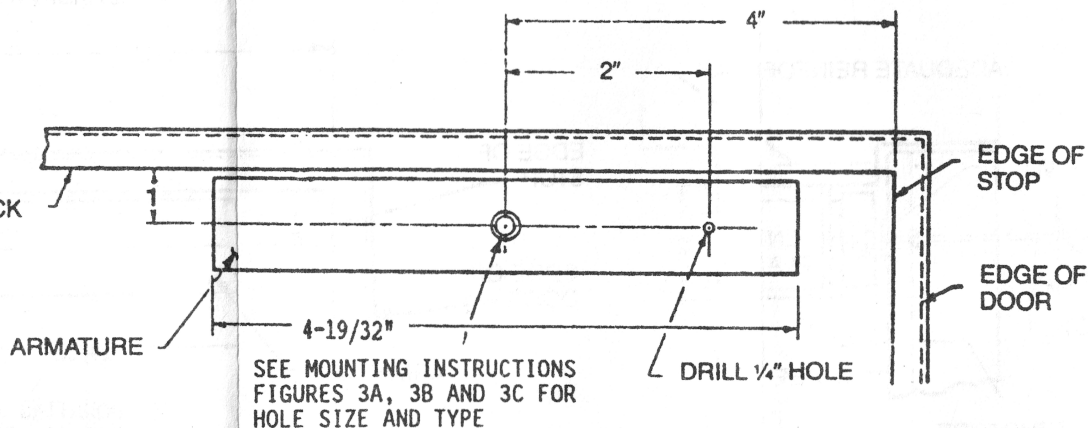

Rev. A
2/94




LOCKNETICS

Security Engineering HARRON COMPANY
FORESTVILLE, CONNECTICUT 06010 U.S.A.

**263-10 SERIES POWERLOCK SURFACE APPLICATION
LEFT HAND DOOR**

DWG. NO.
T11283


BEFORE INSTALLING —
READ MOUNTING INSTRUCTIONS
THOROUGHLY

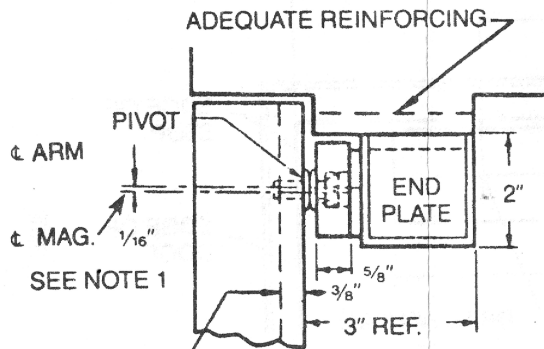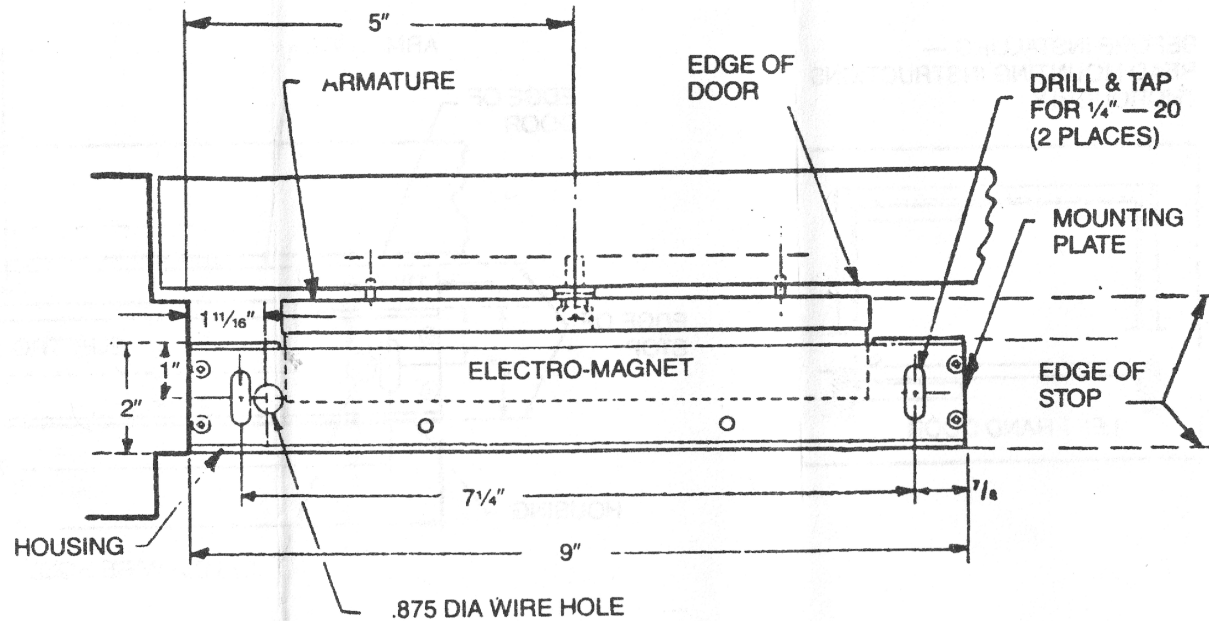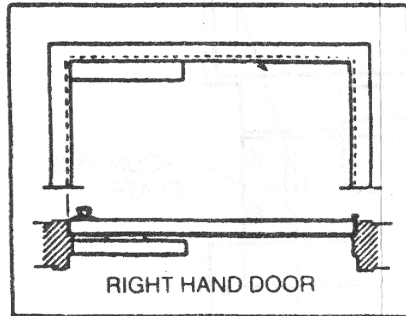

STRUCTURE
& REINFORCE.
SEE NOTE 2

NOTE:

1. ARMATURE MUST BE ABOVE THE MAGNET
2. FOR DIRECT MACHINE SCREW MOUNTING REINFORCING & STRUCTURING REQUIRED TO WITHSTAND 800 LB LOAD

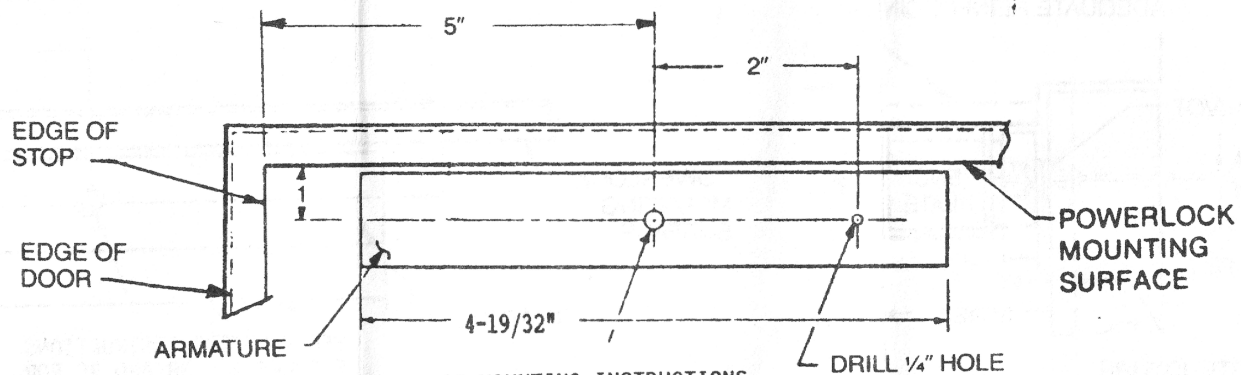

SEE MOUNTING INSTRUCTIONS
FIGURES 3A, 3B AND 3C FOR
HOLE SIZE AND TYPE

Rev. A
2/94