


***The Following Templates Will Make Your
Mortise Lock Installation Faster And More Accurate.***

HIT-45FP5

***For Routing Mortise
Lock Faceplates
In Wooden Doors.***

By simply rotating the jaws of the HIT-45 Clamp 180 degrees and adding the HIT-45FP5 faceplate routing attachment, your HIT-45 can be used to route the

1-1/4" X 8" faceplate on most mortise locks. With the opening perfectly centered to the mortise pocket and the faceplate bevel matching the door, the corners only need to be squared with a chisel to be ready for use. This is an add on kit to be used with the HIT-45 Clamp and HIT-45AR5 Template Guide. Requires the use of a router equipped with a 3/4" outside diameter template guide and a 5/8" diameter bit OR a 5/8" outside diameter template guide and a 1/2" diameter bit.

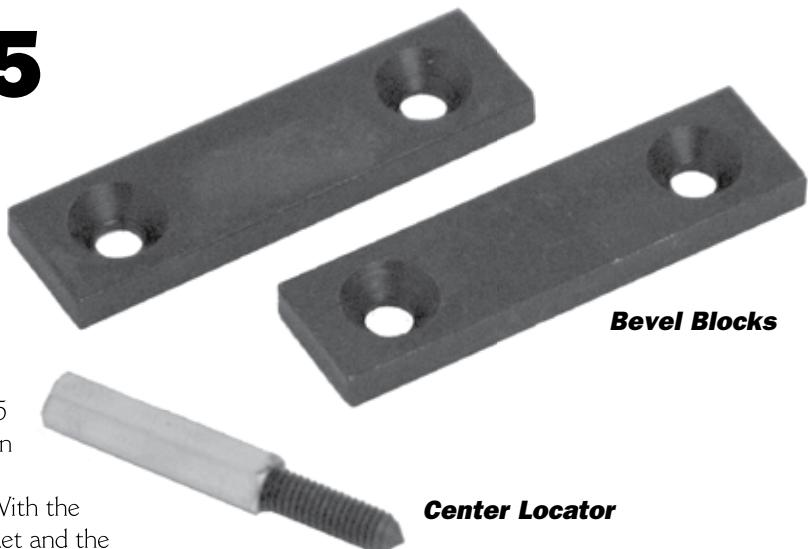

HIT-41SP6

***Used To Locate And Route ASA
Strikes In Wooden Jambs.***

Router template designed to route standard 4-7/8" ASA strike opening in wood jambs to complete mortise lock installation. Scribe lines in template insures proper alignment. Template mounts to door jamb with two self drilling screws (supplied) through hardened bushings in template. Requires the use of a router equipped with a 5/8" outside diameter template guide and a 1/2" flat bottom router bit OR a 5/8" outside diameter template guide and a 1/2" diameter bit. Machined from 6061-T6 aluminum.

