


Changing from 2-3/4" to 2-3/8" backset.

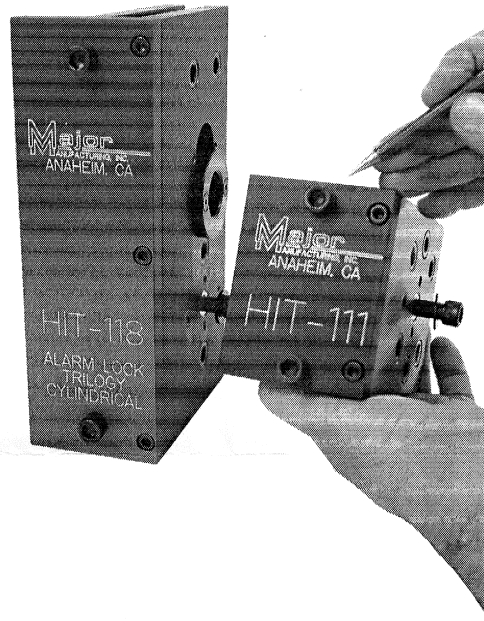

This drill guide is now equipped with an adjustable backset. With the backset studs outside as shown, it is a 2-3/4" backset. With the studs moved to the inside of the plate, it will center on a 2-3/8" backset on a 1-3/4" door. Make sure studs are threaded in snug.

