

HIT-30

Template Guide Holder for Adams Rite Templates

Aluminum template holder designed to hold router template guides for installing Adams Rite Locks. Once guide is adjusted for center, it can be moved from door to door just by tightening two knobs. Will accept router templates for 31/32", 1-1/8" and 1-1/2" backset locks. Overall size 3" wide x 13-1/2" tall.

See HIT-30 series template guides for correct installation applications.



HIT-30AR11

Router Template Guide for Adams Rite Locks

Router template guide designed to be used with the HIT-30 clamp fixture. This template is used to route the standard 1" x 6-7/8" faceplate used by Adams Rite. Drill bushings in template locate our mounting brackets for optional ways to mount lock. These brackets are a must for deep style doors. Requires the use of a router equipped with a 3/8" outside diameter template guide and a 1/4" down shear router bit.




HIT-30AR12 & 13

Router Template Guide for Adams Rite Locks

Router template guide designed to be used with the HIT-30 clamp fixture. These templates are used to route the standard openings used by Adams Rite. These templates are reversible for both 31/32" and 1-1/8" backset locks.

Template HIT-30AR12 has a cut out and drill bushings for installing locks with indicators. HIT-30AR13 is for locks with lever or paddle handles.

Requires the use of a router equipped with a 3/8" outside diameter template guide and a 1/4" down shear router bit.

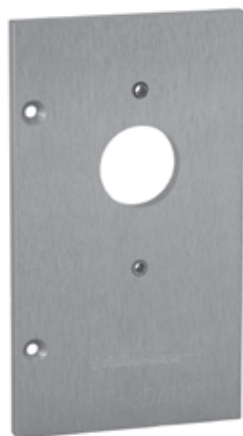

HIT-30AR17 & 18

Router template guide designed to be used with the HIT-30 clamp fixture. These templates are used to route the standard openings used by Adams Rite and is for 1-1/2" backset locks only. Template HIT-30AR17 is for locks with lever or paddle handles. The HIT-30AR18 template has a cut out and drill bushings for installing locks with indicators.

Requires the use of a router equipped with a 3/8" outside diameter template guide and a 1/4" down shear router bit.



HIT-30FB1

ROUTER TEMPLATE GUIDE FOR FLUSH BOLT INSTALLATION

Router template guide designed to be used with the HIT-30 clamp fixture. This template is used to route the opening for International FB-1200 and Builders Brass 5024 in aluminum doors. Drill bushings in template locate the flush bolt mounting screws for a perfect alignment. Requires the use of a router equipped with a 3/8" outside diameter template guide and a 1/4" down shear router bit.



HIT-303

Installation Kit for Adams Rite Locks



A complete ready to go installation kit for Adams Rite style locks and latches comprised of our new HIT-30 template system. Kit includes router templates for 31/32" and 1-1/8" backset locks, with drill guides for indicators, levers and paddles. Also included are templates to cut out bolt openings and lip strikes. An assortment of mounting brackets, cylinder guards and guard plates are also included. All that is needed to use this kit is a router equipped with a 3/8" OD template guide and basic hand tools.

CONTENTS OF KIT

1	HIT-30	MAIN CLAMP BODY
1	HIT-30AR11	FACE PLATE TEMPLATE 1" X 6-7/8"
1	HIT-30AR12	CYLINDER & INDICATOR 31/32" OR 1-1/8" BACKSET
1	HIT-30AR13	CYLINDER & PADDLE OR LEVER
1	HIT-40AR3	AR 4502/4902 STRIKE
1	HIT-40AR5	AR MS1851 BOLT CUT OUT
2	HIT-45RB4	1/4" ROUTER BIT FOR ALUMINUM DOORS
1	CGA-5	CYLINDER GUARD ALUMINUM POWDERCOAT 5 PACK
1	CGD-5	CYLINDER GUARD DURANODIC POWDERCOAT 5 PACK
1	LMB-03	UNIVERSAL MOUNTING BRACKET
1	LMB-033	MOUNTING BRACKET FOR RADIUS FRAME DOOR
1	LMB-034	MOUNTING BRACKET FOR BEVEL FRAME DOOR
1	LMB-06	STEEL ROD GUIDE SQUARE HOLE
1	LMB-07	STEEL ROD GUIDE HEX HOLE
1	LMB-08	MOUNTING BRACKET
1	LMB-089	MOUNTING BRACKET TOOL
1	TOOL BOX	