


# SUPER STRIKES

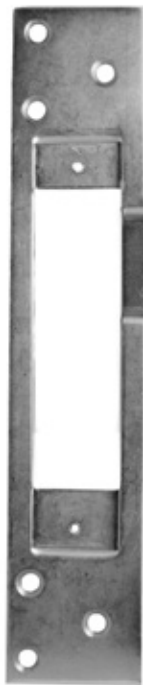

**SS-610**



**SS-620**



**SS-630**



**SS-640**



**SS-660**

***The use of our Super Strikes is an easy way to add more security to an existing lock or repair a damaged strike area. All strikes are supplied with longer than normal screws to reach the solid stud area behind the door jamb.***

**SS-610C** Re-enforcing plate for electric strikes in wood frames. Will fit Trine 001 and similar size strikes. 10" x 2" chrome finish. Supplied with fasteners.

**SS-620B** Designed for mortise lock sets. Brass or chrome finish. 10" x 1-3/4". Supplied with fasteners.  
**SS-620C**

**SS-630B** Designed for tubular deadbolt locks. Brass or chrome finish. 6" x 1-1/8". Supplied with fasteners.  
**SS-630C**

**SS-640B** Lip strike designed for key in knob type locks. Brass or chrome finish. 6" x 1-1/8". Supplied with fasteners.  
**SS-640C**

**SS-660B** Re-enforcing plate designed for Jimmy Proof Dead Locks. 7-5/8" x 1-3/8". Brass plated. Jimmy proof strike shown with bracket but not included. Supplied with fasteners.

For new product updates and the latest up to the minute information, please sign up for e-mail bulletins at [www.majormfg.com](http://www.majormfg.com).