


B1921 / B1923 PIVOT ASSEMBLY

(RIGHT HAND SHOWN).

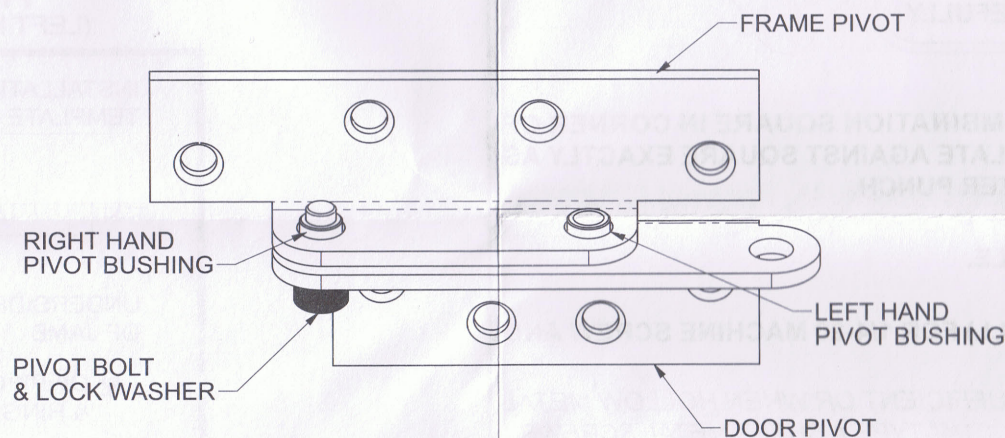

STEP 1

TO CHANGE THE HANDING:

- REMOVE THE PIVOT BOLT AND LOCK WASHER USING ALLEN KEY #5/16 FOR B1921 AND #3/8 FOR 1923 (Fig.1)

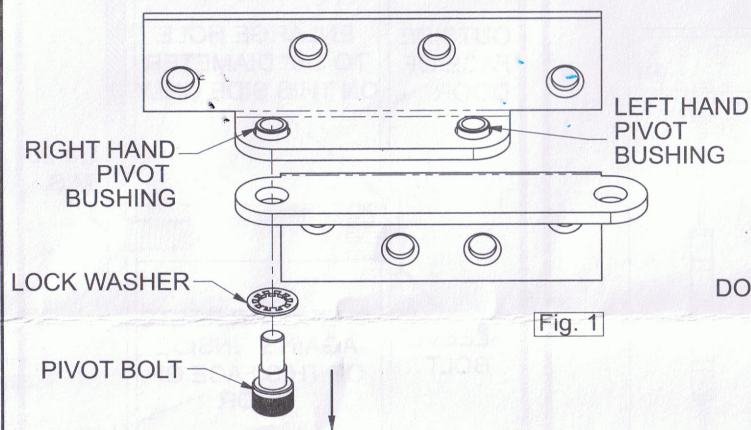


Fig. 1

STEP 2

- SECURELY FASTEN LOCK WASHER AND PIVOT BOLT TO DOOR PIVOT AT THE DESIRED HANDING.
- REPOSITION THE DOOR PIVOT USING THE ALTERNATE BUSHING ON THE FRAME PIVOT. (Fig. 2 SHOWS THE B1921 / B1923 PIVOT ASSEMBLY AS BEING LEFT HANDED).

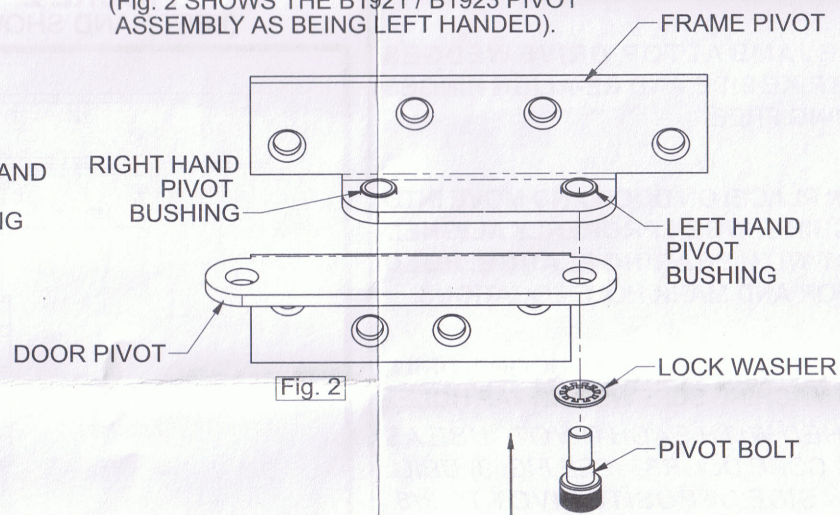


Fig. 2

STEP 3

- REMOVE THE PIVOT BUSHING THAT IS NOT BEING USED TO PREVENT INTERFERENCE. (Fig. 3 SHOWS THE B1921 / B1923 PIVOT ASSEMBLY AS BEING LEFT HANDED).

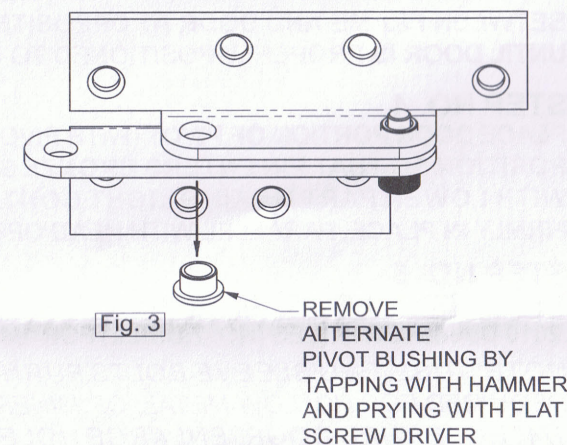


Fig. 3

STOP



AVOID ERRORS
READ CAREFULLY

STOP

**STEP NO. 1**

TO LOCATE PIVOT ON FRAME, HOLD COMBINATION SQUARE IN CORNER OF FRAME AND PLACE INSTALLATION TEMPLATE AGAINST SQUARE EXACTLY AS SHOWN. SPOT HOLE CENTERS WITH CENTER PUNCH.

STEP NO. 2

DRILL HOLES REQUIRED AS PER SCHEDULE.

METAL FRAME

DRILL .2010 DIAMETER HOLES (NO. 7 DRILL) FOR 1/4-20 MACHINE SCREW AND TAP HOLE.

NOTE: IF MATERIAL THICKNESS IS NOT SUFFICIENT OR WHEN HOLLOW METAL FRAMES ARE NOT REINFORCED, USE #14 x 1 1/4" TYPE A SHEET METAL SCREWS.

WOOD FRAME

DRILL PILOT HOLES AND INSTALL WOOD SCREWS.

STEP NO. 3

WITH DOOR IN PLACE, CHECK TO BE SURE THAT HINGES ARE FIRMLY ATTACHED AND THERE IS PROPER CLEARANCE BETWEEN DOOR AND FRAME AT ALL SIDES, INCLUDING BOTTOM OF THE DOOR.

IF DOOR TENDS TO SAG AWAY FROM HINGE JAMB AT TOP, DRIVE WEDGES BETWEEN FRAME AND DOOR AT OPPOSITE STRIKE SIDE AND RE-ALIGN HINGES UNTIL DOOR IS PROPERLY POSITIONED TO SWING FREE.

STEP NO. 4

PLACE DOOR PORTION OF PIVOT (WITH PIVOT IN PLACE) ON DOOR AND MOVE INTO POSITION SO THAT PIN ENTERS BRONZE BUSHING. WHEN PROPERLY ALIGNED WITH LOWER PART MAKING LIGHT CONTACT WITH BEARING FLANGE, HOLD FIRMLY IN PLACE, PARALLEL WITH HEAD OF DOOR AND MARK HOLE LOCATIONS.

STEP NO. 5

REPEAT DRILLING INSTRUCTIONS NOTED IN STEP NO. 2 FOR METAL DOORS, DRILL .2010 DIAMETER HOLES (NO. 7 DRILL) FOR 1/4-20 MACHINE SCREWS AND TAP HOLE.

NOTE: USE TWO SLEEVE BOLTS FURNISHED WITH EACH PIVOT. USE AS REQUIRED FOR HOLLOW METAL, OR MINERAL CORE DOORS. (SEE FIG. 3) DRILL 1/4" HOLE THRU DOOR. ENLARGE HOLE ON SIDE OPPOSITE PIVOT TO 3/8" DIAMETER FOR SLEEVE BOLT.

PRODUCT MUST BE INSTALLED
ACCORDING TO ALL APPLICABLE
BUILDING AND LIFE SAFETY CODES

FIGURE 1
(LEFT HAND SHOWN)

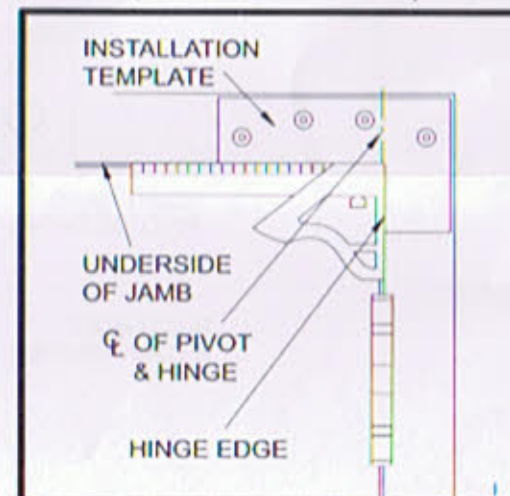
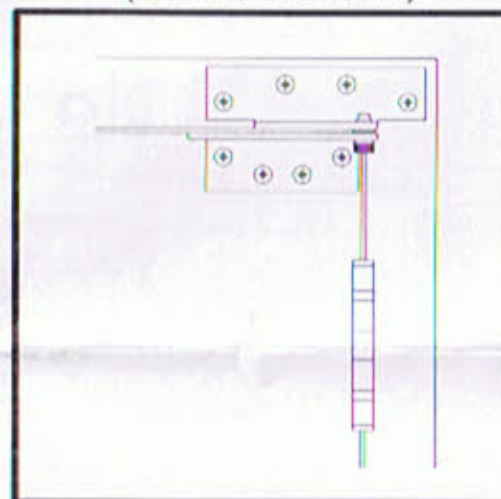
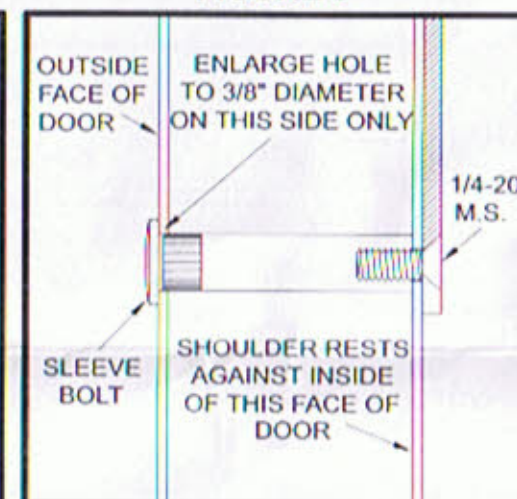


FIGURE 2
(LEFT HAND SHOWN)

**FIGURE 3**

Markar
ASSA ABLOY

Markar Architectural Products
4226 Transport St.
Ventura, CA 93003
Phone: 800-824-3018
Fax: 800-243-3656
www.markar.com

FULL SURFACE REINFORCING PIVOT HINGE
(B1921/B1923)

M80-0180-1923 Rev. E ECN: M1227 Date: 07/15/11

INSTALLATION INSTRUCTIONS

Page 1 of 2 Appvd: MP Date: 07/21/11

**TEMPLATE FOR INSTALLING L.H. PIVOT
(REVERSE TEMPLATE FOR R.H. PIVOT)**



**Q OF PIVOT
& HINGE**

FLUSH WITH UNDERSIDE OF JAMB

- (1) DRILL .2010 DIAMETER HOLES (NO. 7 DRILL) FOR 1/4-20 MACHINE SCREW & TAP HOLE**
- (2) FOR MOLLEY SCREW ANCHOR - ENLARGE HOLE TO 7/16" DIAMETER**

HINGE EDGE