

**D-1103**


(F)19-R & (F)19-V

Key-In Lever & Key-In-Knob Drilling Template

1. For doors with existing ANSI cutout (2-3/4" backset x 5/8" stop), fold template where shown and center over 2-1/8" diameter hole. For non-fire rated Rim applications with 2-3/8" backset (of 2-1/8" diameter hole) must use 565 strike, surface mounted for 1/2" stop.
2. For blank doors, mark horizontal $\varnothing$ at 40-5/16" to finished floor and align template with folded tab against stop face.
3. Prepare door as specified.

NOTE:

For Rim devices, insert tailpiece guide into cross-hair on back of device with proper orientation as a guide for the trim actuator shaft.

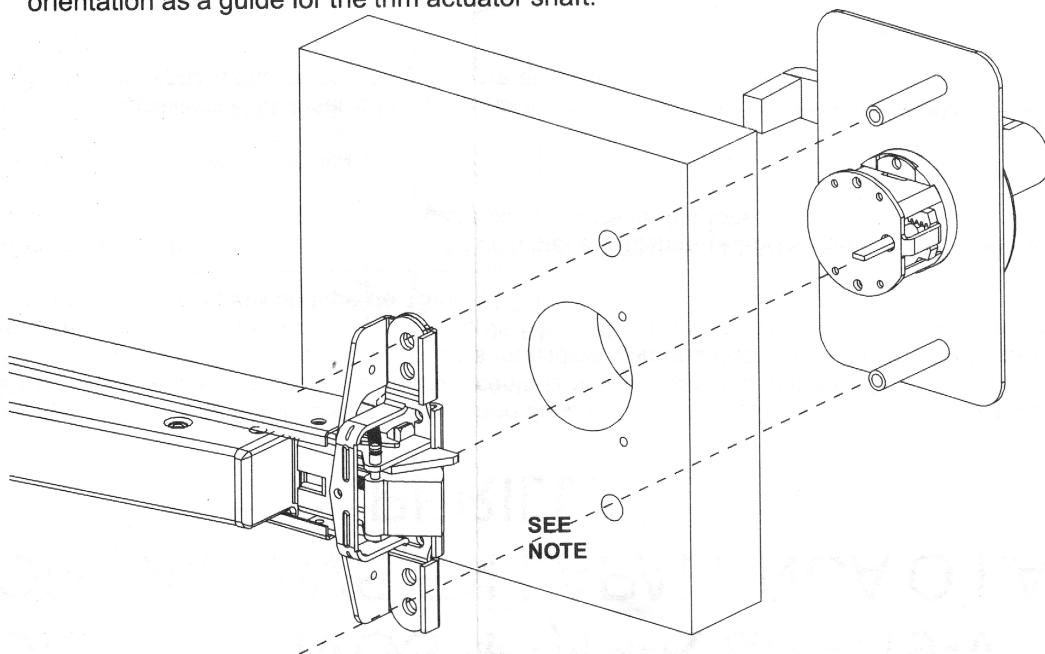**Customer Service**


1-877-671-7011

www.allegion.com

© Allegion 2014
Printed in U.S.A.
D-1103 Rev. 01/14-c

INSTALLATION INSTRUCTIONS

1. BEFORE INSTALLING DEVICE WITH TRIM, INSTALL THE TAILPIECE GUIDE.
2. PUSH THE TAILPIECE GUIDE INTO THE CROSSHAIR CAM ON THE BACK OF THE DEVICE.
3. CONTINUE WITH DEVICE INSTALLATION.

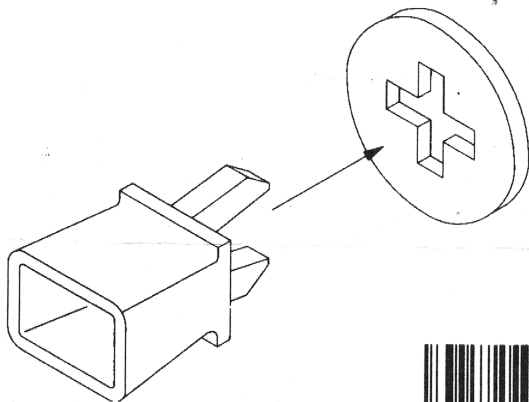

D-4314

FALCON®

TAILPIECE GUIDE FOR (F)19-R ONLY



© Allegion 2014
Printed in U.S.A.
D-4314 Rev. 01/14-b