


# National Guard Products, Inc.

1-800-  
647-7874



**115N, 125N,  
137N, 137S, 9115,  
9125 Smoke Control  
Astragal**

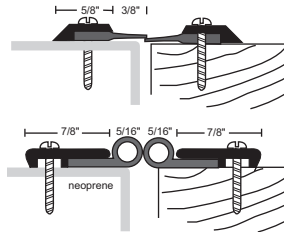

## Installation Instructions

1. Cut astragal to length.
2. Position on doors as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust astragal so it does not impede proper closing and latching of doors.

### Instrucciones de instalación:

1. Corte el astrágalo al largo requerido.
2. Posicione en las puertas según aparece arriba.
3. Marque los agujeros para los tornillos.
4. Taladre los agujeros de guía para los tornillos usando una broca de 7/64".
5. Instale con los tornillos suministrados.
6. Ajuste el astrágalo de modo que éste no impida que se pueda cerrar y correr el pasador debidamente a las puertas.



POSITIVE PRESSURE  
TESTED GASKETING  
MATERIALS FOR FIRE  
DOORS. INTENDED  
FOR APPLICATION TO STEEL  
TYPE FIRE DOORS, RATED UP  
TO 3 HOURS AND WOOD TYPE  
FIRE DOORS, RATED UP TO  
1 1/2 HOURS.



GASKETING  
MATERIALS FOR FIRE  
DOORS

Smoke and Draft Control gasketing  
(Category H) tested to UL 1784;  
meets requirements of NFPA 105,  
IBC for use on "S" label doors.  
10.13