


# National Guard Products Inc.

1-800-  
647-7874



## 115N, 125N, 137N, 137S, 9115, 9125 Smoke Control Astragal

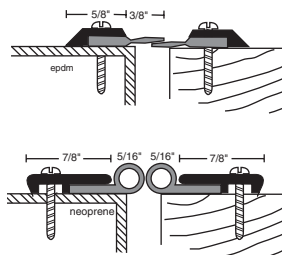

### Installation Instructions

1. Cut astragal to length.
2. Position on doors as shown above.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust astragal so it does not impede proper closing and latching of doors.



UL10C Positive  
Pressure Tested  
Gasketing Material  
for Fire Doors. Also  
Classified in accordance  
with UBC 7-2 (1997).



UL10B  
Gasketing  
Material for  
Fire Doors.

Intended for Application to  
Classified Steel fire doors  
rated up to 3 hours and  
Wood type fire doors up to  
1 1/2 hours.

Smoke & draft control gas-  
keting (Category H) meets  
requirements of UBC 7-2  
(1997) part 2, NFPA 105,  
IBC, and UL1784.  
Intended for application to  
'S' label doors.