


National Guard Products Inc.

1-800-
647-7874

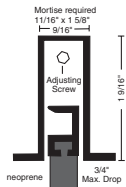

335 Mortise Mounted Door Bottom

WARNING: Do not pull drop bar out of case unless disengaged from spring or damage will occur, and void warranty.

Installation Instructions

1. Cut door bottom to exact net width of door. Do not extend drop bar while cutting. Do not cut from end with adjusting rod. MAXIMUM CUT door bottoms 36" and longer = 4", shorter than 36" should not be field cut - order net length.
2. Mortise bottom of door on center line 11/16" wide x 1-5/8" deep.
3. Install door bottom with adjusting rod at the hinged side of door .
4. Set adjusting rod for proper seal. To reduce drop, turn adjusting rod right; to increase drop turn left. NOTE: Once hinged end of drop bar makes solid contact, other end will drop. Maximum drop = 3/4".
5. On wooden frames, install strike plate on door jamb where adjusting rod makes contact.



UL 10C Positive Pressure Tested Gasketing Material for Fire Doors.
Also Classified in accordance with UBC 7-2 (1997).



UL10B Gasketing Materials for Fire Doors.

Intended for Application to Classified Steel type fire doors
rated up to 3 hours and Wood type fire doors up to a 1 1/2 hours.

Smoke and Draft Control door bottom (Category H) meets requirements of
UBC 702(1997) part 2, NFPA 105, IBC, and UL 1784 intended for applica-
tion to classified "S" label doors. 1/09