


National Guard Products Inc.

1-800-
647-7874



Thermoplastic (T) Door Bottom Shoes

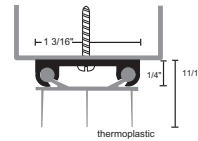

INSTALLATION INSTRUCTIONS

1. Measure and cut metal retainer and gasketing insert to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed 1/16" against sill.
4. Mark screw holes.
5. Drill pilot holes with a 7/64" bit.
6. Install with screws provided.
7. Slide gasketing into metal retainer until a 6" length remains out. Bend this section against the retainer to a 45° angle to create a slight bow in the material to create a tension to keep the gasketing tight, then release. Slide the rest of the way into the retainer. For extra security, repeat the bending process on opposite end.
8. Adjust height so that gasket does not impede proper closing and latching of door.

8/13



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR FIRE
DOORS. INTENDED FOR AP-
PLICATION TO STEEL TYPE
FIRE DOORS, RATED UP TO 3
HOURS AND WOOD TYPE FIRE
DOORS, RATED UP TO
1 1/2 HOURS.



GASKETING
MATERIALS FOR FIRE
DOORS

Smoke & draft control gasketing
(Category H) tested to UL 1784;
meets requirements of NFPA 105,
IBC for use on "S" label doors.

9/13.