


National Guard Products Inc.

1-800-
647-7874



Door Bottom Shoes

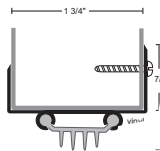

Installation Instructions

1. Measure and cut door shoe to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed 1/16" against sill.
4. Mark screw holes.
5. Drill pilot holes with a 7/64" bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.



POSITIVE PRESSURE
TESTED GASKETING
MATERIALS FOR FIRE
DOORS. INTENDED
FOR APPLICATION TO
STEEL TYPE FIRE DOORS,
RATED UP TO 3 HOURS AND
WOOD TYPE FIRE DOORS,
RATED UP TO 1 1/2 HOURS.



GASKETING
MATERIALS FOR FIRE
DOORS

Smoke and Draft Control
gasketing (Category H) tested to UL
1784; meets requirements of NFPA
105, IBC for use on "S" label doors.