


National Guard Products, Inc.

1-800-
647-7874
www.ngp.com



Door Bottom Shoes

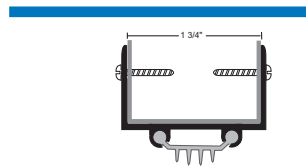

Installation Instructions

1. Measure and cut door shoe to fit.
2. Items with drip cap should be notched to clear stops on jambs before installation.
3. Position seal on door with gasket compressed 1/16" against sill.
4. Mark screw holes.
5. Drill pilot holes with a 7/64" bit.
6. Install with screws provided.
7. Adjust position so that gasket does not impede proper closing and latching of door.



UL 10C Positive Pres-
sure Tested Gasketing
Material for Fire Doors.



UL 10B Gasketing Materi-
als for Fire
Doors.



Intended for Ap-
plication to Classified Steel fire
doors rated up to 3 hours and
Wood type fire doors up to 1 1/2
hours.

Smoke and Draft Control door bot-
tom (Category H) tested to UL
1784; meets requirements of
NFPA 105, IBC. Intended for ap-
plication to classified "S" label
doors. 5/11