


184Q Perimeter Seal

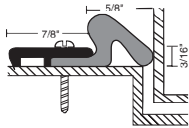

Installation Instructions

1. Cut to fit.
2. Mark screw holes.
3. Drill pilot holes for screws using a 7/64" drill bit.
4. Install with screws provided, working from one end to the other.
5. Adjust position so that gasket is slightly compressed against door but does not impede proper closing and latching.

APPLICATION WARNING:
DO NOT DRILL
THROUGH GASKET
MATERIAL.



UL10B Gasketing
Materials for Fire Doors.
Intended for Application to
Classified Steel type fire
doors rated up to 3 hours
and Wood type fire doors up to 1
1/2 hours.