


5075 Self Adhesive Smoke Seal

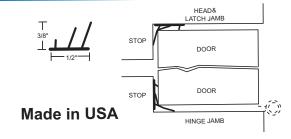

Installation Instructions

- 1. The surface temperature of the frame must be above 50°F for the adhesive to bond.
- 2. Clean frame with clean wipe provided to remove dust, oil, grease and dirt. Wax coated or high gloss painted surfaces may require roughening with a scotch brite pad or sand paper so adhesive will bond properly.
- 3. Measure and pre-cut pieces to fit the head and jambs.
- 4. Remove protective backing 1 to 2 feet at a time.
- 5. Position on where illustrated.
- 6. Adhere seal by pressing firmly (15 lbs. of pressure required) along entire length of gasket. Do not remove and relocate.
- 7. Make sure the seal does not impede the proper closing and latching of door.











UL10C Positive Pressure Tested Gasketing Material for steel type Fire Doors rated up to 3 hours and wood type fire doors up to 1 1/2 hours.

Smoke & Draft Control Gasket (Category H) tested to UL 1784; meets requirements of NFPA 105, IBC and UL1784. Intended for application to Classified 'S' label doors.





UL10B Gasketing Materials for Fire Doors. Intended for Application to Classified Steel type fire doors rated up to $\,$ 3 hours and Wood type fire doors up to 1 1/2 hours.

5/10

STORAGE AND SHELF LIFE

The adhesive on this seal has a shelf life of one year stored at 75°F and 50% relative humidity or less