


9990 Intumescent Door Cap System

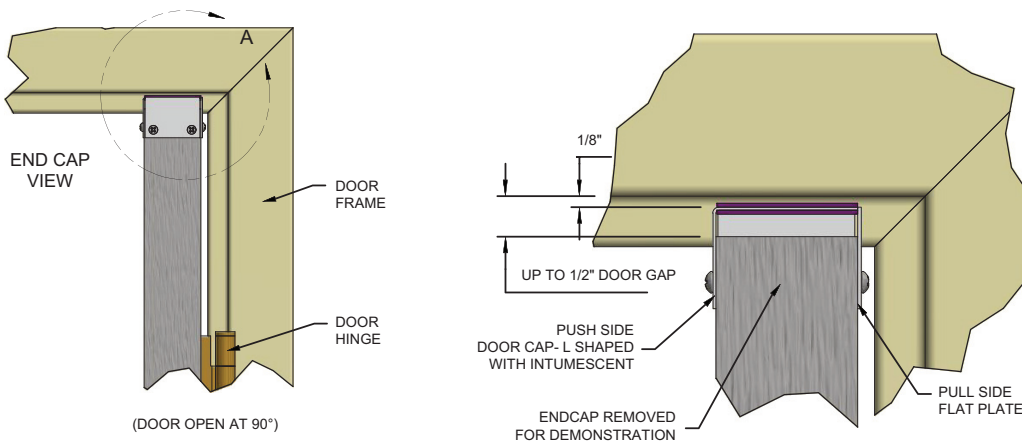

For use on up to 90 minute UL10B and UL10C wood or hollow metal fire doors with clearance at head exceeding 1/8", up to 1/2".

UL certified for 90 minute fire doors with head clearance up to 1/2".

Installation Instructions

L Shape Cap with Intumescent (Push Side Mount):

1. Cut to fit.
2. Close door. Hold at top of door with 1/8" clearance to frame header.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust position for 1/8" clearance to frame header.

Straight Cap (Pull Side Mount):

1. Cut to fit.
2. Close door. Hold at top of door. Align top edge with top of L shaped cap.
3. Mark screw holes.
4. Drill pilot holes for screws using a 7/64" drill bit.
5. Install with screws provided.
6. Adjust to proper position.
7. Install end caps as illustrated.



POSITIVE PRESSURE TESTED
MISCELLANEOUS FIRE DOOR
ACCESSORY