


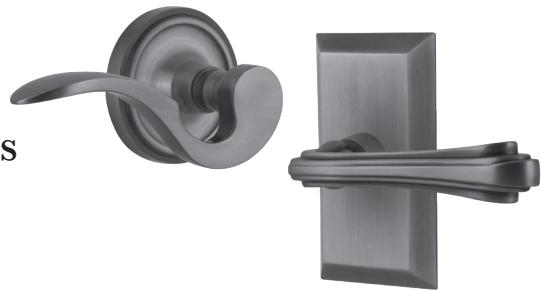

LEVER



Installation Instructions For Pre-Attached Rosettes and Short Plates Passage, Privacy and Dummy

With step-by-step Installation Pictograms & Drilling Template

Applies to:

- Classic and Rope Rosettes with levers
- Cottage and Studio Short Plates with levers

NOTE: Passage and privacies fit doors 1-3/8" to 1-3/4" thick.


Tools Required: #2 Phillips Screwdriver & electric drill, 7/64" bit

Door Handing - Rosettes and Short Plates

Door handing is critical for Split-Finish, or Split-Design products in the privacy function. And, it's helpful in positioning the latch tongue in relation to the strike plate.

Inside of Door - The **Inside** of a door refers to the side of the door that faces the room. For example, for a bedroom door on a hallway, the **Inside** of the door would face the bedroom.

Outside of Door - The **Outside** of a door refers to the side of the door that faces away from the room. The **Outside** of a door is generally more visible to visitors, and therefore a rosette on this side of the door has no visible screws. For example, on a bedroom door, the **Outside** would face the hallway.

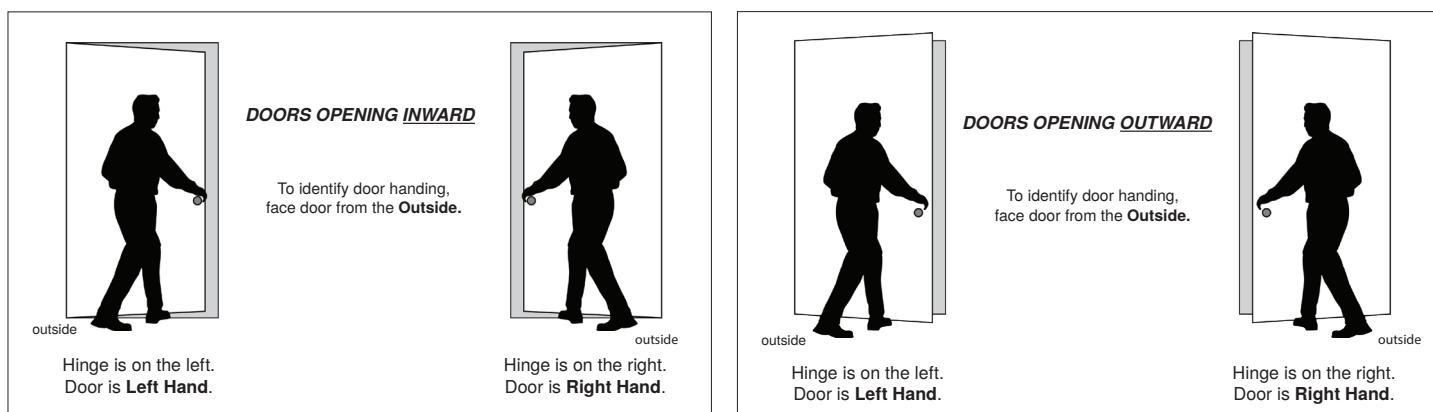

INSTALLATION RULES:

- 1) Lockset machine mounting screws are inserted from the inside.
- 2) Privacy pin holes are next to the door side containing the latch.
- 3) Latch tongues have a beveled side, and this side should contact the curved end of the face plate, and curved end of the strike plate. (See *Latch Tongue Note on page 3.)



Watch video

Installation Instructions For Pre-Attached Rosettes and Short Plates


**Fits doors
1-3/8" to 1-3/4" thick**

**Passage/Privacy Lever
ROSETTE/SHORT PLATE**

Tools Required: #2 Phillips Screwdriver (Not power tools)

A

Backset Information

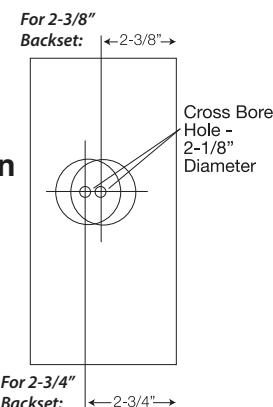


NOTE:
DRILLING
TEMPLATES
ON
SEPARATE
INCLUDED
SHEET


B

Install Latch

Arrow

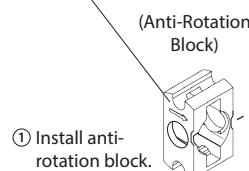

- Install anti-rotation block. Be certain the arrow is pointing to the edge of the door.

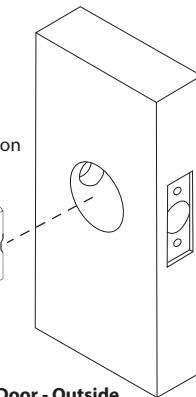


- Install latch and rotate the latch tongue * to change handing. (See page 1 for handing)
- Install faceplate with 3/4" wood screws. **Do NOT use power tools.**

* See Latch Tongue Note in next panel

* Latch Tongue Note


Bevel side of latch tongue should contact curved end of face plate, and curved end of strike plate.

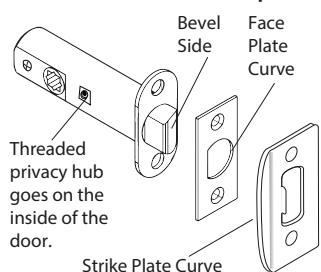

C

Insert Spindle

- Push spindle button down and hold during insertion

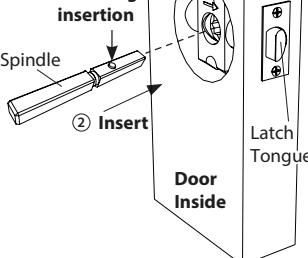


IMPORTANT:
Spindle must be in
"diamond" orientation
while inserting into latch.

D

Install Exterior Half of Lockset

Arrow must point to edge of door

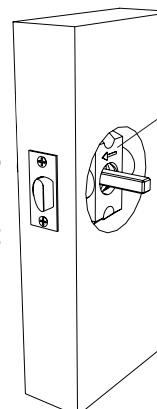

Emergency Release Hole (Privacy Only)


E

Install Interior Half of Lockset

NO POWER TOOLS!!!


- Insert machine screws

1-1/2" machine screws (1-3/8" thick doors)
1-3/4" machine screws (1-3/4" thick doors)

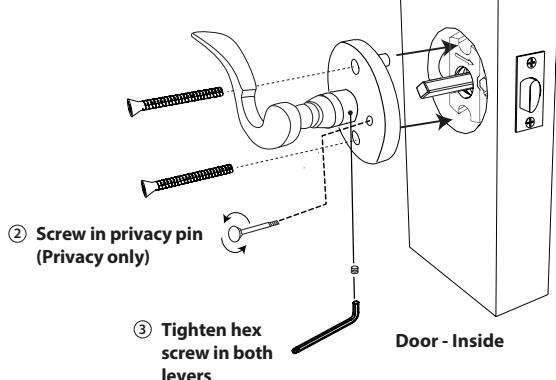


F

Install Strike Plate

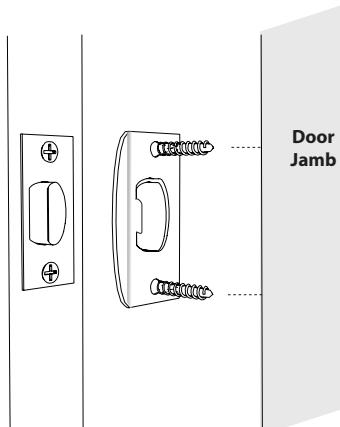


Attach the strike plate to the door jamb using 3/4" long wood screws.

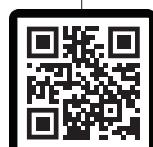


Watch video

Exploded Drawing for Pre-Attached Rosette/Short Plates Passage/Privacy - Lever

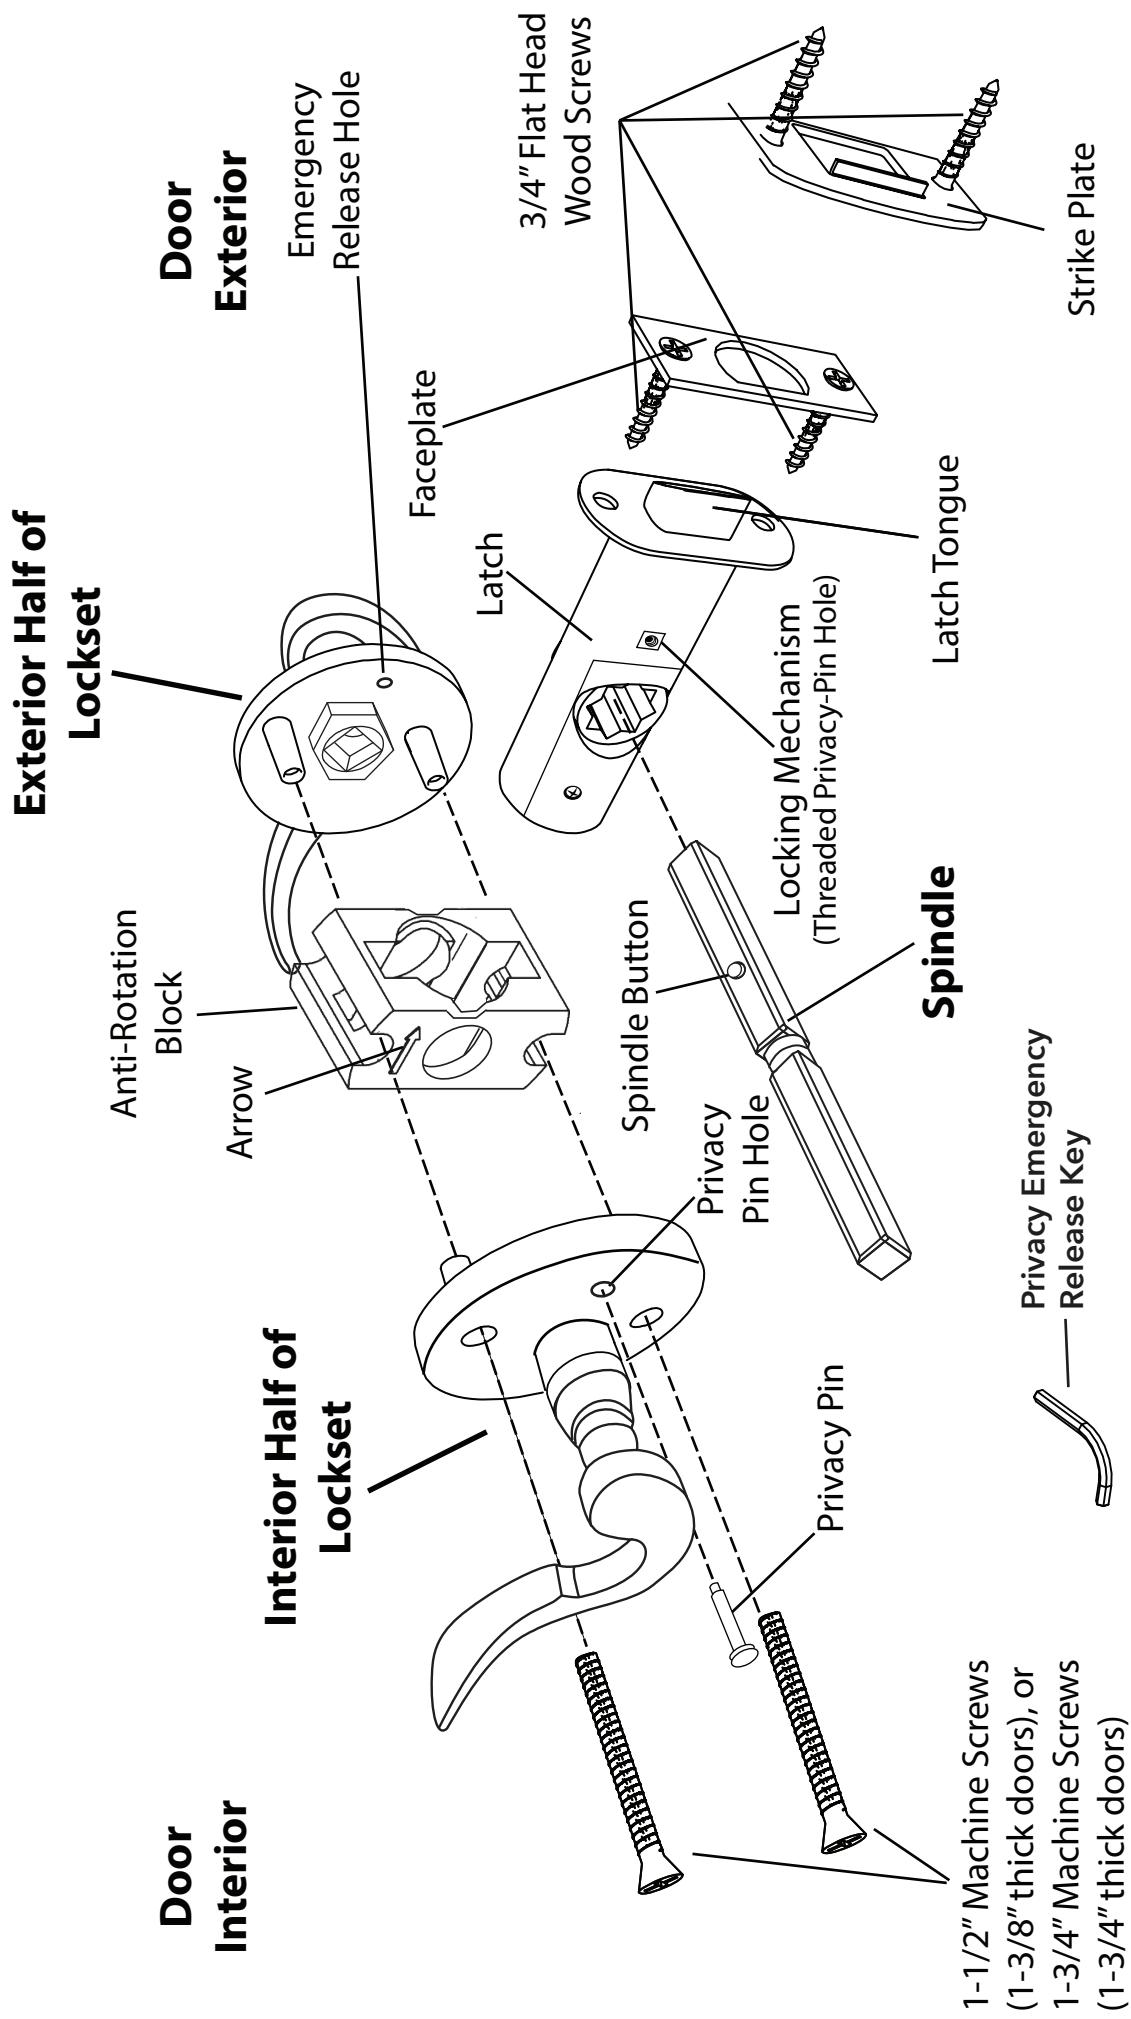

DUMMY INSTALLATION AND DOOR PREPARATION TEMPLATE - ROSETTE/LEVER

(2) Fold template along dotted line, and position fold on the edge of the door. Tape template to face of door.

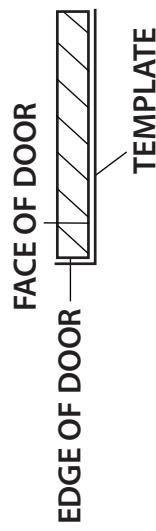

(4) Insert four wood screws, in dummy mount, and tighten WITHOUT power tools.

