




L400-Series

Lock Case Dimensions



Case Size:	4 ⁷ / ₁₆ " x 3 ⁵ / ₈ " x 1" (113 mm x 92 mm x 25 mm)	Knob or Lever to Turn Piece:	1 ⁹ / ₆₄ " (29 mm)
Backset:	2 ³ / ₄ " (70 mm)	Height Line to Center of Deadbolt:	1 ¹³ / ₁₆ " (46 mm)
Door Range:	1 ³ / ₄ " – 3" (44 mm – 76 mm)		
Lock Front:	1 ¹ / ₄ " x 5 ¹⁹ / ₃₂ " x ⁷ / ₃₂ " (32 mm x 142 mm x 6 mm)		

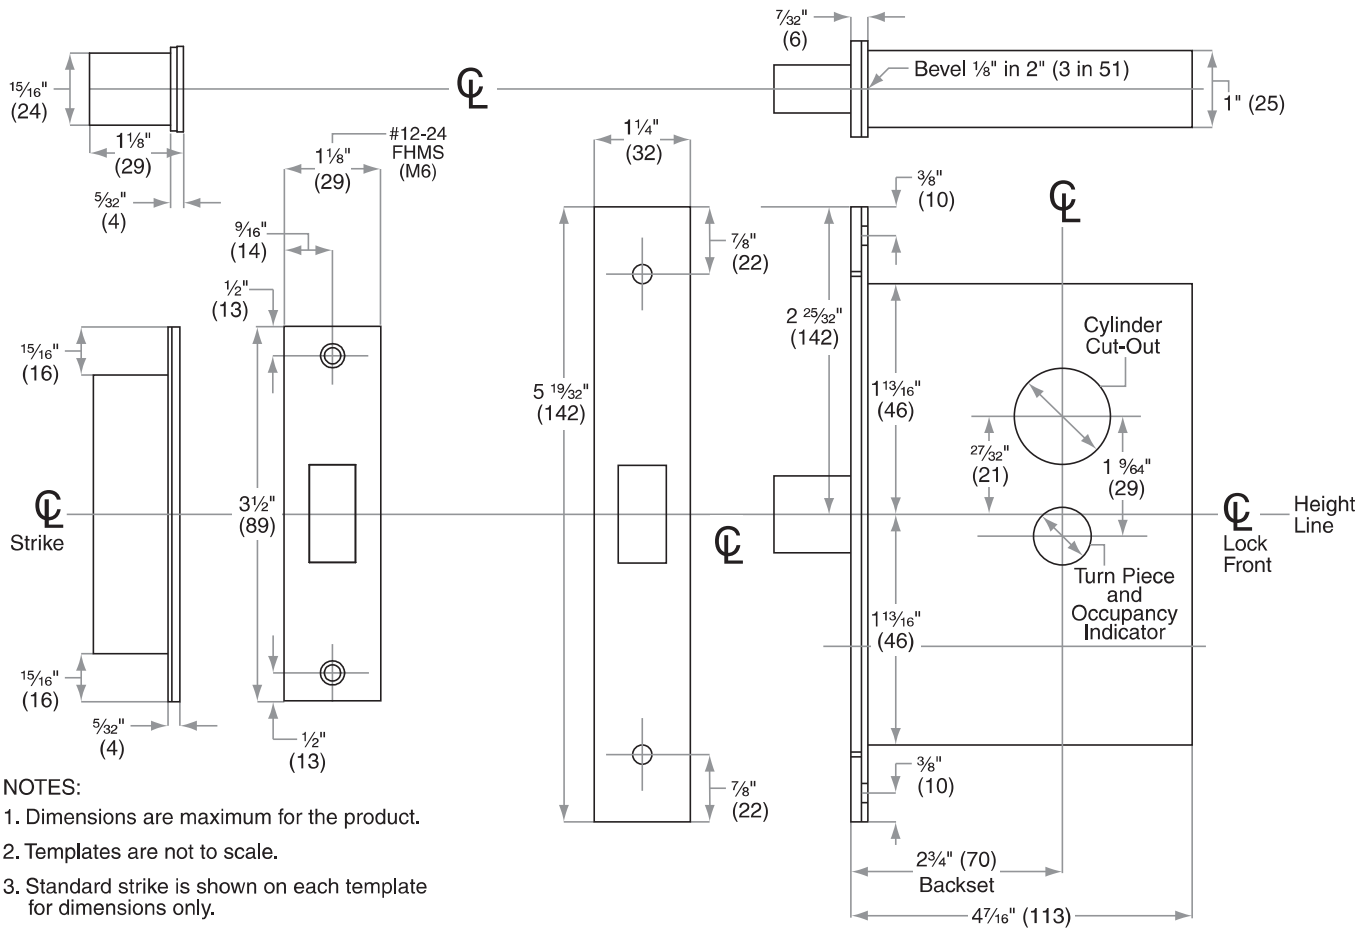

NOTES:

1. Dimensions are maximum for the product.
2. Templates are not to scale.
3. Standard strike is shown on each template for dimensions only.
4. Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

ANSI Standards: L400-Series locks meet all requirements for installations in doors and frames prepared in accordance with ANSI specifications A156.13, 2010.

Metal Doors: Suitable reinforcement is required to support lock case in center of door and to prevent door from compressing when trim is tightened. (See ANSI A115.1)

Thick Doors: Locks for non-standard door thickness may require special instructions.

Lead Lining: When L9000-Series or L400-Series locks are ordered with lead lining, add 1/8" (3) to the width of the mortise cut-out on the lock case cover side of installation.

Dimensions shown in parentheses () are in millimeters.

© 2019 Allegion
L2 Rev.08/19
us.allegion.com

DRAWING IS NOT TO SCALE!
Customer service: 877-671-7011
We can help you find the correct guide for your product and application!

Door preparation template

L2



L/LV/LM/LMV-Series

Model L460, L462, L463, L464, L480, L496

Door Type: Wood or composite, flat or beveled

Trim: Small case deadbolt

For case and strike dimensions, see Template L2.


FUNCTION	DRILL			
	1	2	3	4
L460	X		X	**
L462, L463	X	X	***	**
L464	X			**
L480			X	
L496*	X		X	X

* Drill through-hole from 3 to 4 for L496

** Additional preparation for L283-721, L283-722, L283-723, L283-724

*** Additional preparation for L283-711, L283-712, L283-713, L283-714

Left Hand (LH) Door Shown

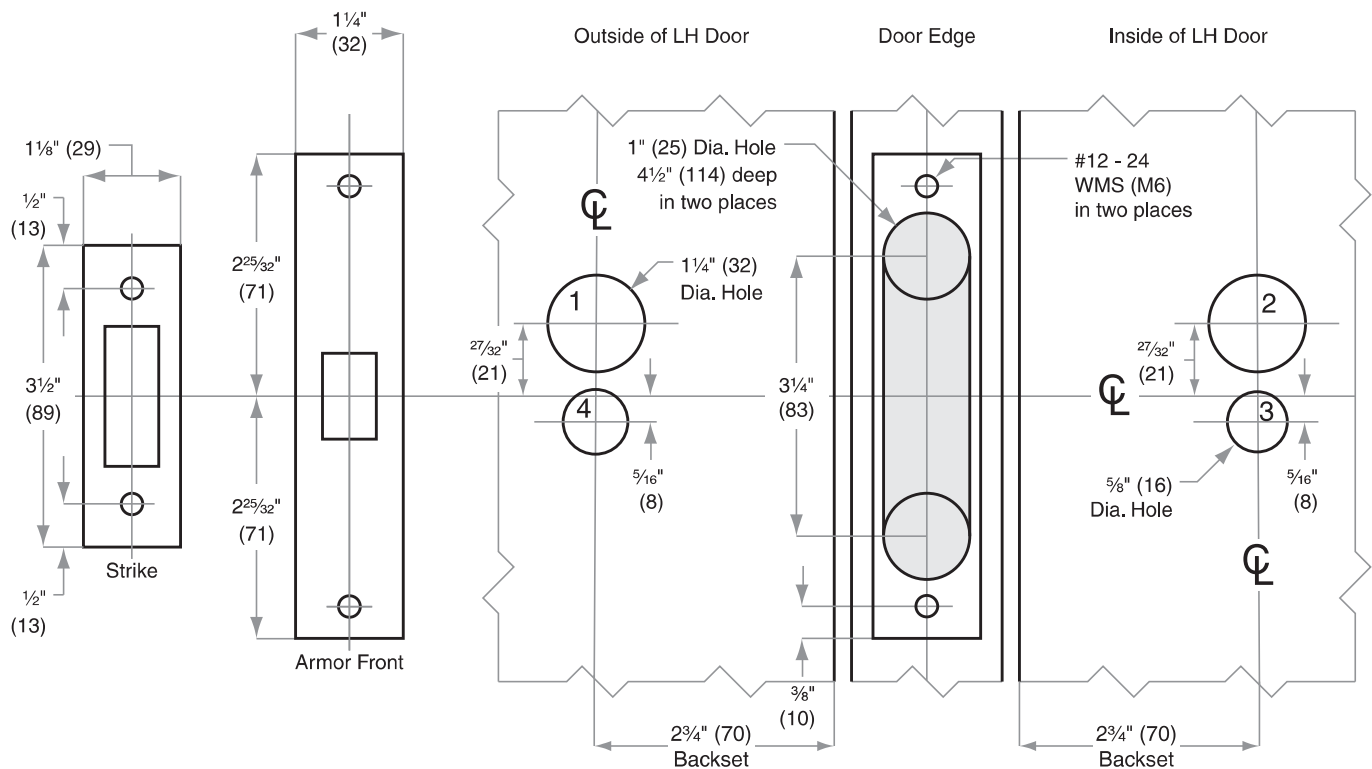

Dimensions shown in parentheses () are in millimeters.

© 2019 Allegion
L909 Rev.08/19
us.allegion.com

DRAWING IS NOT TO SCALE!
Customer service: 877-671-7011
We can help you find the correct guide for your product and application!

Door preparation template

L909



L/LV/LM/LMV-Series

Model L460, L462, L463, L464, L480, L496

Door Type: Metal, flat or beveled

Trim: Small case deadbolt

For case and strike dimensions, see Template L2.


FUNCTION	DRILL			
	1	2	3	4
L460	X		X	**
L462, L463	X	X	***	**
L464	X			**
L480			X	
L496*	X		X	X

* Drill through-hole from 3 to 4 for L496

** Additional preparation for L283-721, L283-722, L283-723, L283-724

*** Additional preparation for L283-711, L283-712, L283-713, L283-714

Left Hand (LH) Door Shown

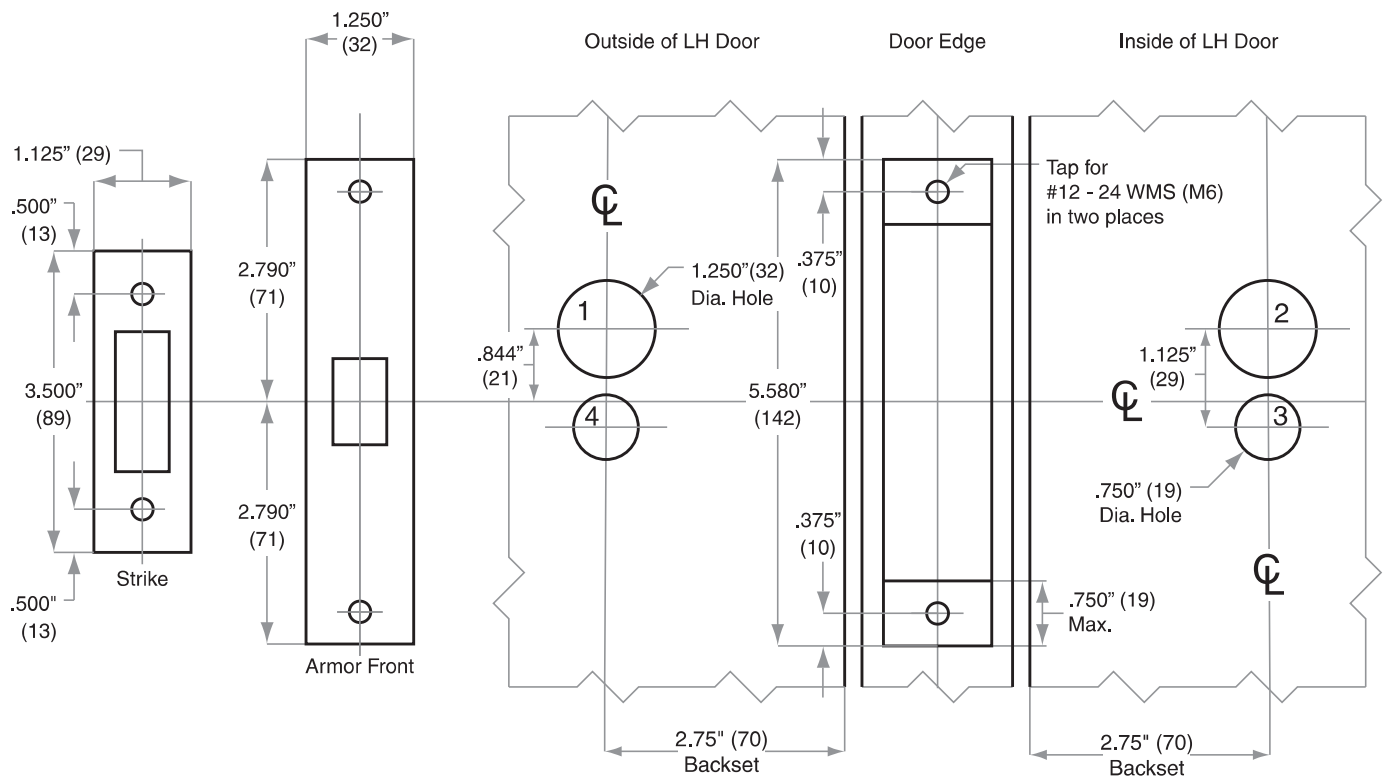

Dimensions shown in parentheses () are in millimeters.

© 2019 Allegion
L910 Rev.08/19
us.allegion.com

DRAWING IS NOT TO SCALE!
Customer service: 877-671-7011
We can help you find the correct guide for your product and application!

Door preparation template

L910