


Security Strike Installation Instructions


See Back of Tag for Illustrations

1. Place center line of template on center line of latch bolt and against door stop.
2. Drill #29 (0.136), tap 8-32, 4 places.
3. Mount strike with "arrow" point to door stop. This position should allow 1/16" clearance between door and frame.
4. Rotate strike to allow for 1/16" clearance.
5. Important: 1/8" maximum clearance between door and frame. Shim strike if clearance is more than 1/8".

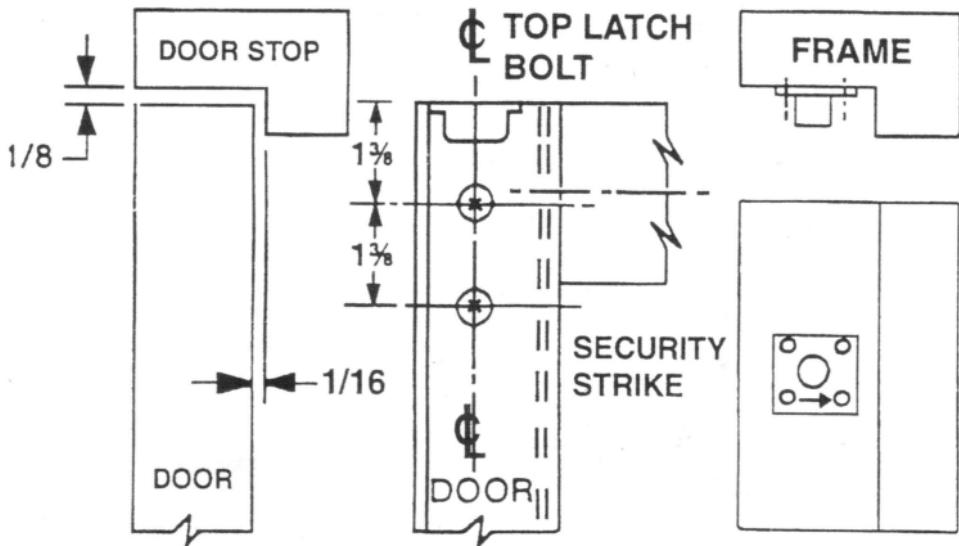

Security Strike
Template

Latch Bolt
#29 (.136) Dia.
#8 - 32 Thread
4 Holes

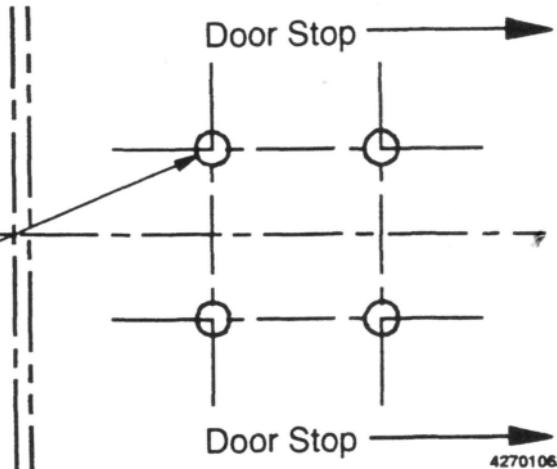

DOR-O-MATIC

Indianapolis, IN

4270106.290